



Sony VAIO VGN-FW 590 Optical Disk Drive Replacement

Sometimes the Optical Disk Drive breaks and will no longer read CDs. This guide will help you replace it.

Written By: Jennifer Pache



This document was generated on 2019-09-23 03:27:50 AM (MST).

INTRODUCTION

The optical disk drive of the VAIO VGN-FW590 allows the laptop to read CDs. This guide will demonstrate how to identify, remove, and replace the optical disk drive.

TOOLS:

- Phillips #1 Screwdriver (1)

PARTS:

- Optical Disk Drive (1)

Step 1 — Optical Disk Drive



- Turn the computer off.
- Set the laptop upside down on your work area.

Step 2



- Remove the circled 7.7mm screws.

Step 3



- Pull the optical disk drive from the computer.

To reassemble your device, follow these instructions in reverse order.