




# Sony VAIO VPCF 132FX Bottom Case Replacement

This will guide you in replacing the Bottom Case of a Sony Vaio VPCF 132FX

Written By: trickster

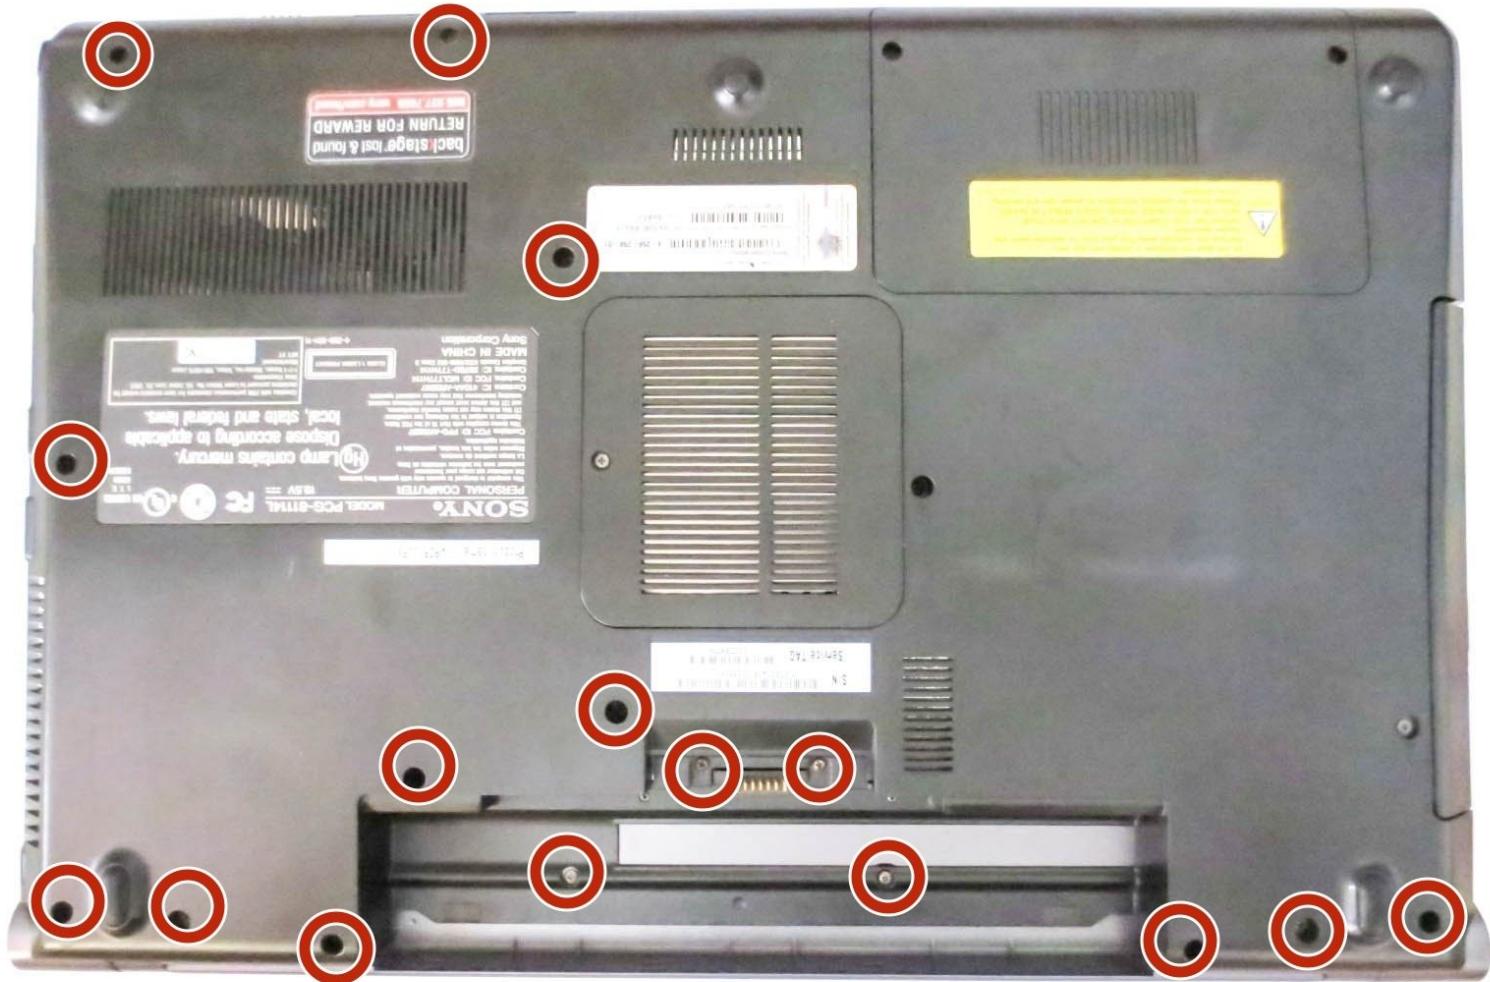

 **TOOLS:**

- Essential Electronics Toolkit (1)

## Step 1 — Battery



- Remove all wires then flip the laptop

## Step 2




- Remove the battery

## Step 3 — RAM




- Flip the Laptop, and unscrew the RAM cover.

## Step 4

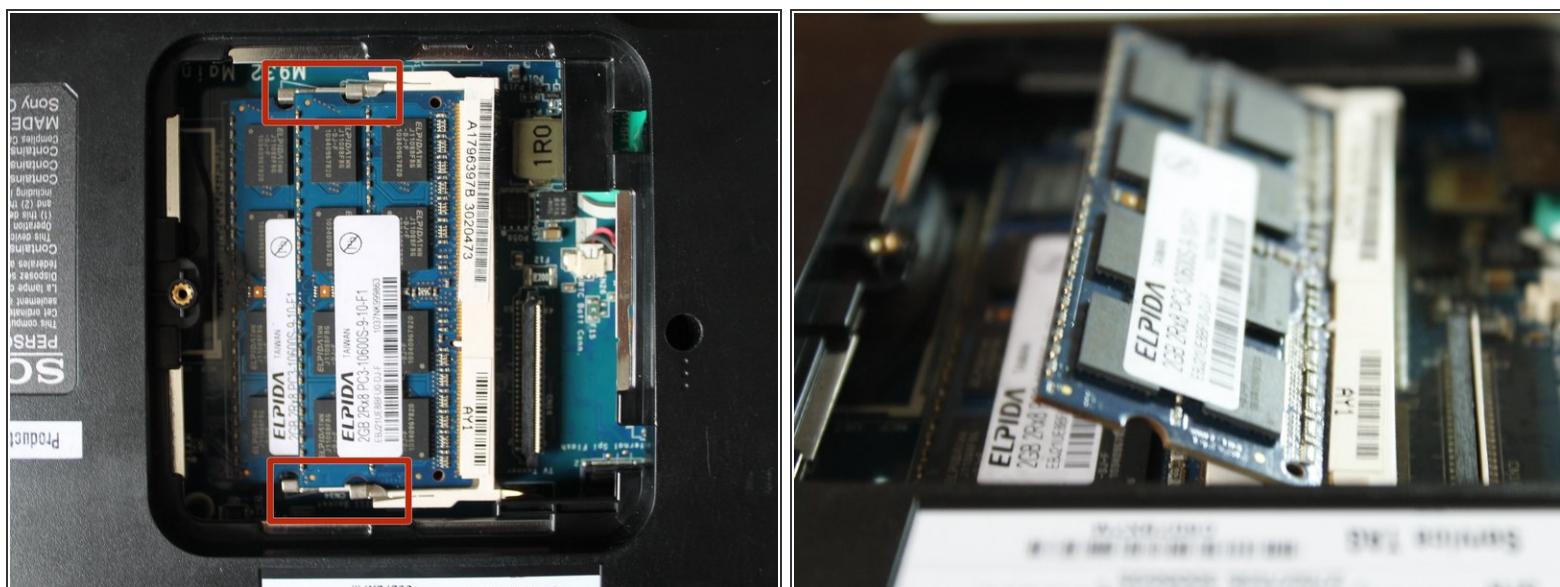

- Unlock the RAM by pulling the locks outward.
- *(i)* You'll know if its unlocked if it flips up in 45 degrees.


## Step 5

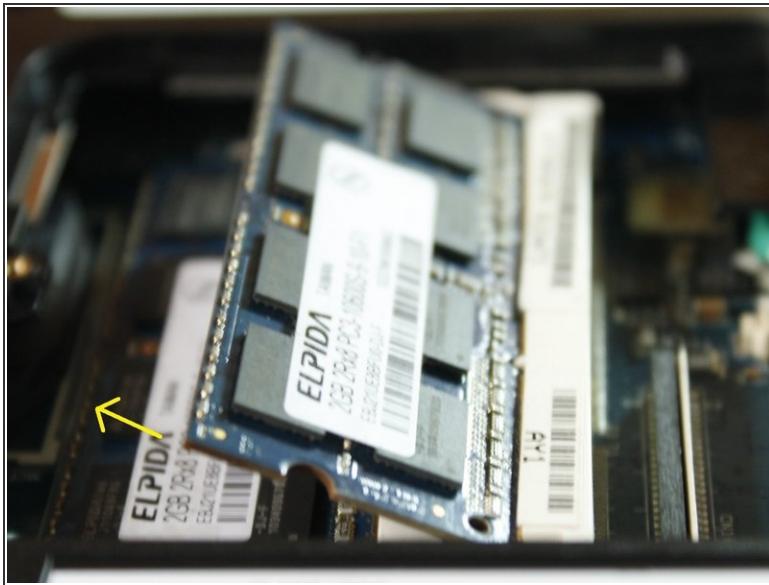

- Pull the outer RAM. Repeat Step 4 and 5 for the other RAM.


**⚠** When returning, put the RAM back in at 45 degree angle, NOT 90 degree angle.

## Step 6 — CD/DVD Drive

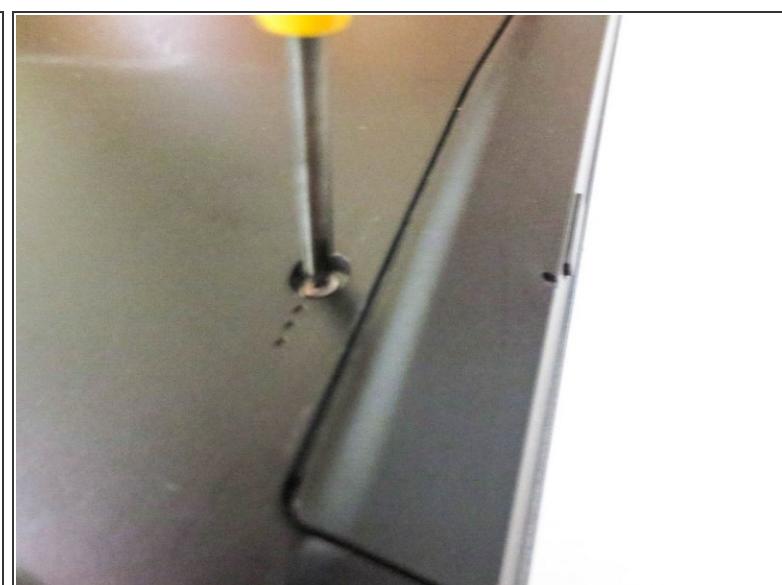

- Remove the 2 screws holding the CD/DVD Drive.

## Step 7

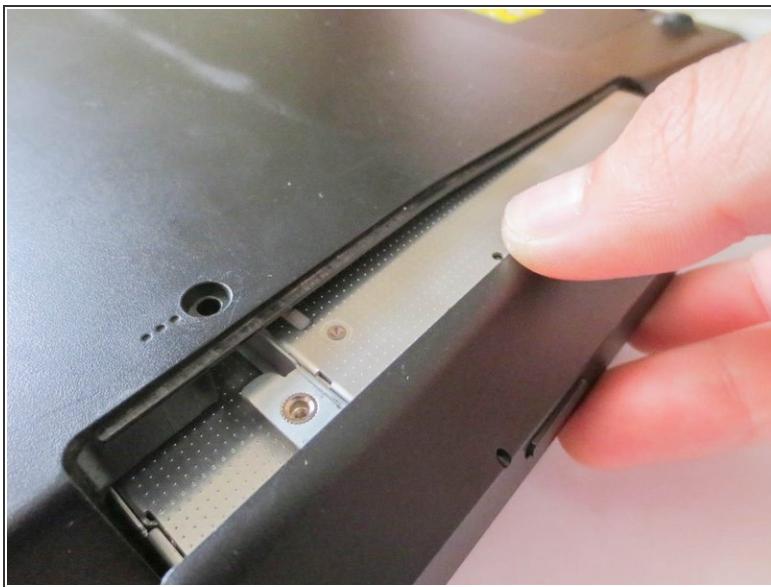

- Slide the CD/DVD Drive out.

## Step 8 — Hard Disk Drive / Solid State Drive



- Remove the screws.
- Slide the HD cover outward then lift.

## Step 9



- Remove the screws.
- Slide to where the arrow points to unlock the HD.


**⚠** Hold it at the side. Never touch the circuits.

## Step 10



- Remove the 4 screws at the side and remove the HDD/SSD

## Step 11 — Bottom Case

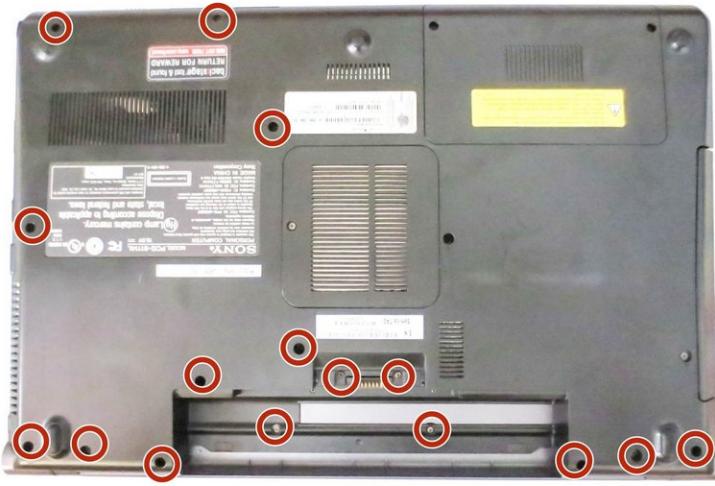

- Remove all the other screws.
- Dont forget the 3 screws after you remove the CD/DVD Drive.

To reassemble your device, follow these instructions in reverse order.