


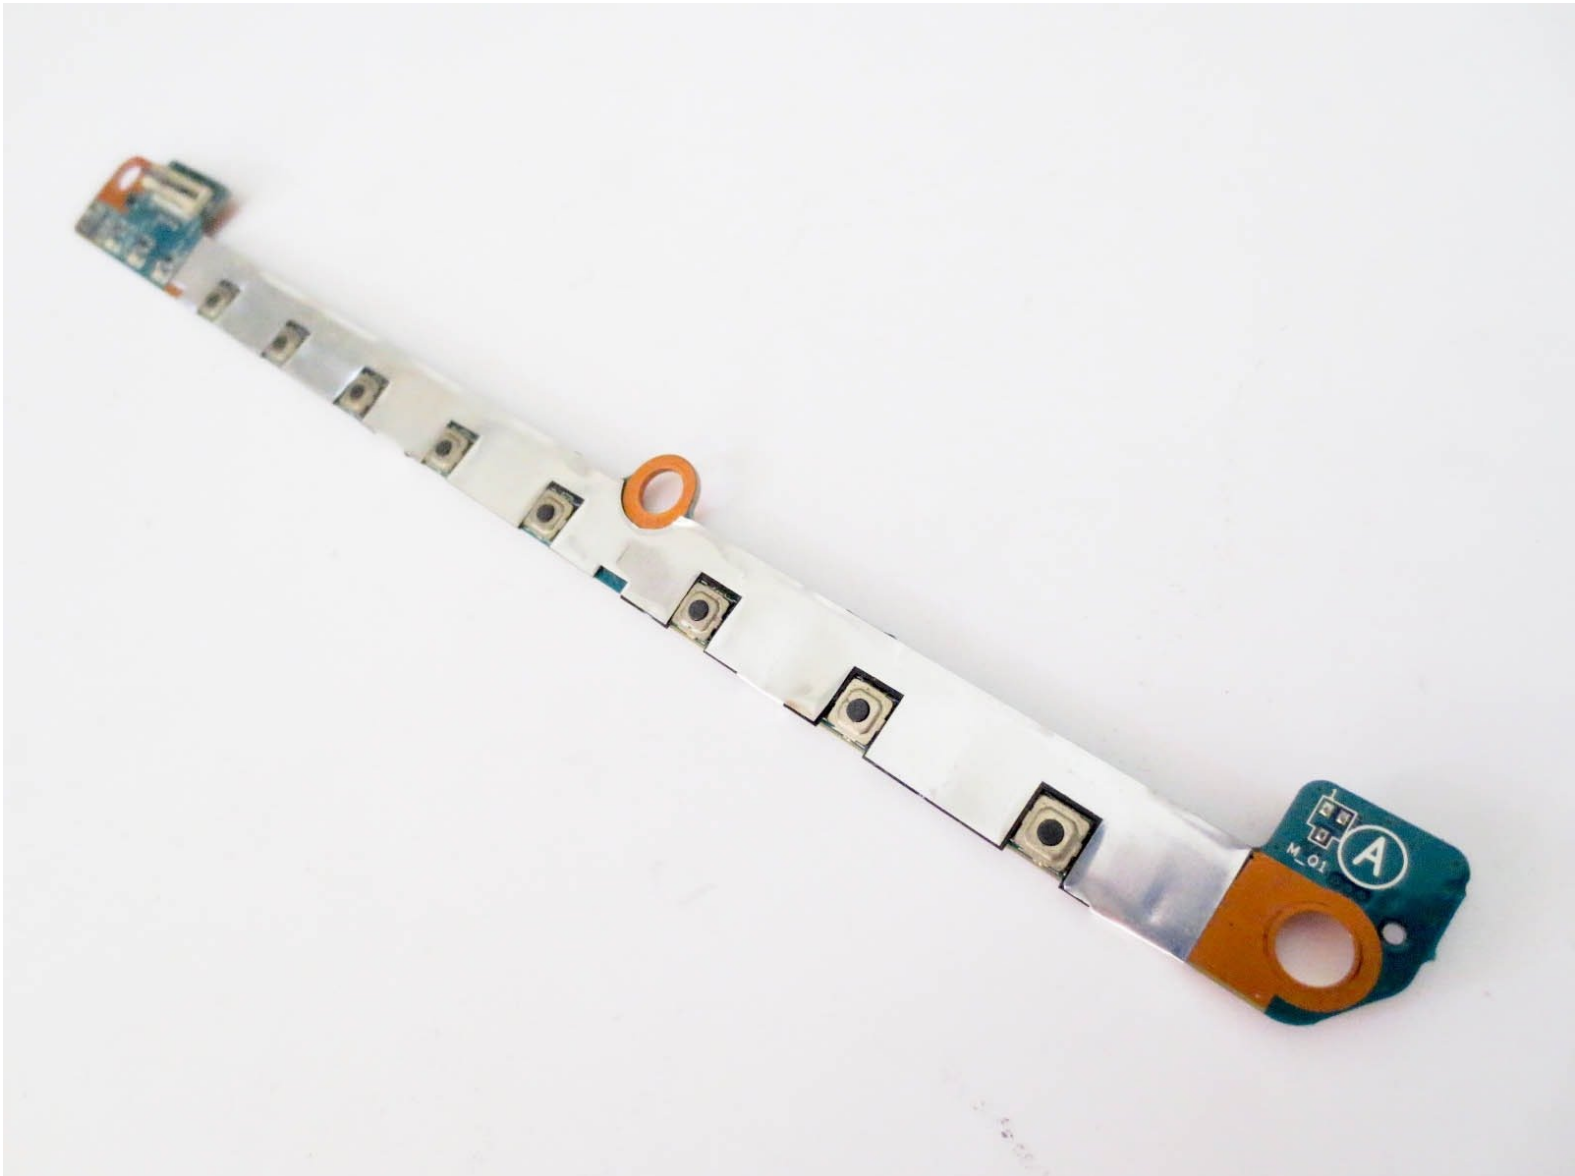

# Sony VAIO VPCF 132FX Media Board Replacement

This will guide you in replacing the Media Board of a Sony Vaio VPCF 132FX

Written By: trickster



---

# INTRODUCTION

This will guide you in replacing the Media Board of a Sony Vaio VPCF 132FX

---



## TOOLS:

- [Pro Tech Toolkit](#) (1)
-

## Step 1 — Battery



- Remove all wires then flip the laptop

## Step 2




- Remove the battery

## Step 3 — Media Board



- Remove the screws and flip it back.


## Step 4

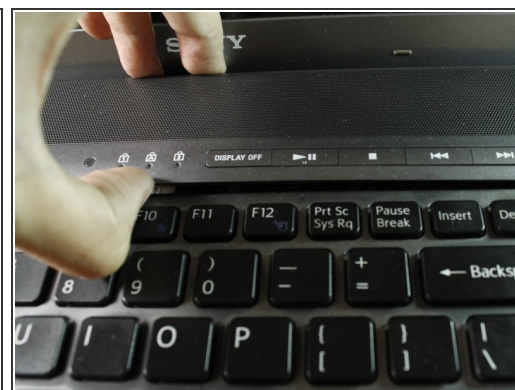

- Lift the screen and slide your nail or any flat plastic to the side of the cover to unclip it.
- Slide from the sides towards the center.





## Step 5

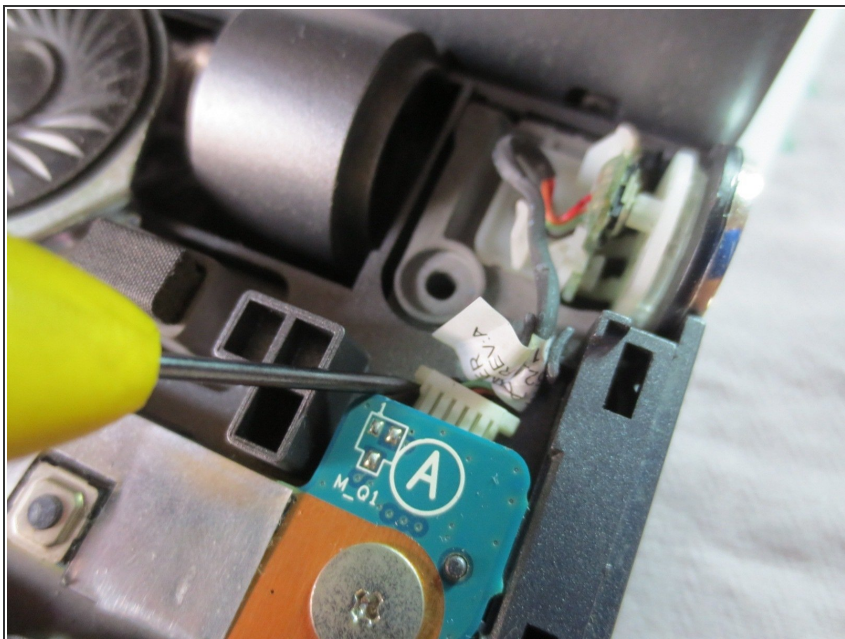

- Gently remove the wire of the Power Button.

## Step 6

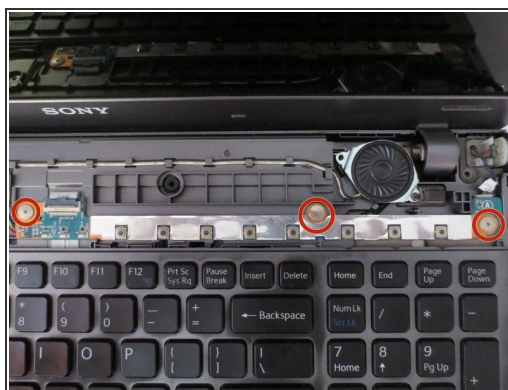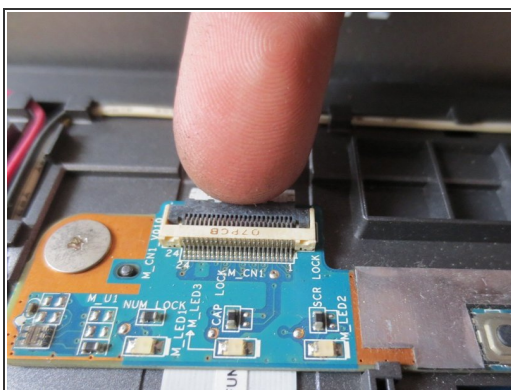

- Unlock the Lock.
- Unscrew the 3 Flat screws and remove the Media Board.
- ☑ You may skip this step if replacing the Power Button.

To reassemble your device, follow these instructions in reverse order.