



Sony Vaio Fit SVF15N26CXB Battery Replacement

Replace the battery on the Sony Vaio Fit SVF15N26CXB so that power returns to your computer.

Written By: Althea McDavid



INTRODUCTION

Unlike many other laptops, the Sony Vaio Fit SVF15N26CXB has its battery within the laptop and thus is not as easy to remove as pulling it out of the back of the computer. This guide will show you how to properly remove the battery. Be sure to use the static wrist strap (shown in the guide) as a precautionary measure and recycle the battery. Also, use the magnetic project mat to keep your screws organized.

TOOLS:

- [Anti-Static Wrist Strap \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Tweezers \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)
- [Magnetic Project Mat \(1\)](#)
- [Spudger \(1\)](#)


Step 1 — Battery



- Remove the following ten screws from the bottom case of the laptop:
 - Two 6.5mm Phillips #00 Phillips screws.
 - Four 8.95mm Phillips #00 screws.
 - Four 6.25mm Phillips #00 screws.

(i) The screws may be hidden underneath a rubber foot that can be removed with a spudger.

Step 2

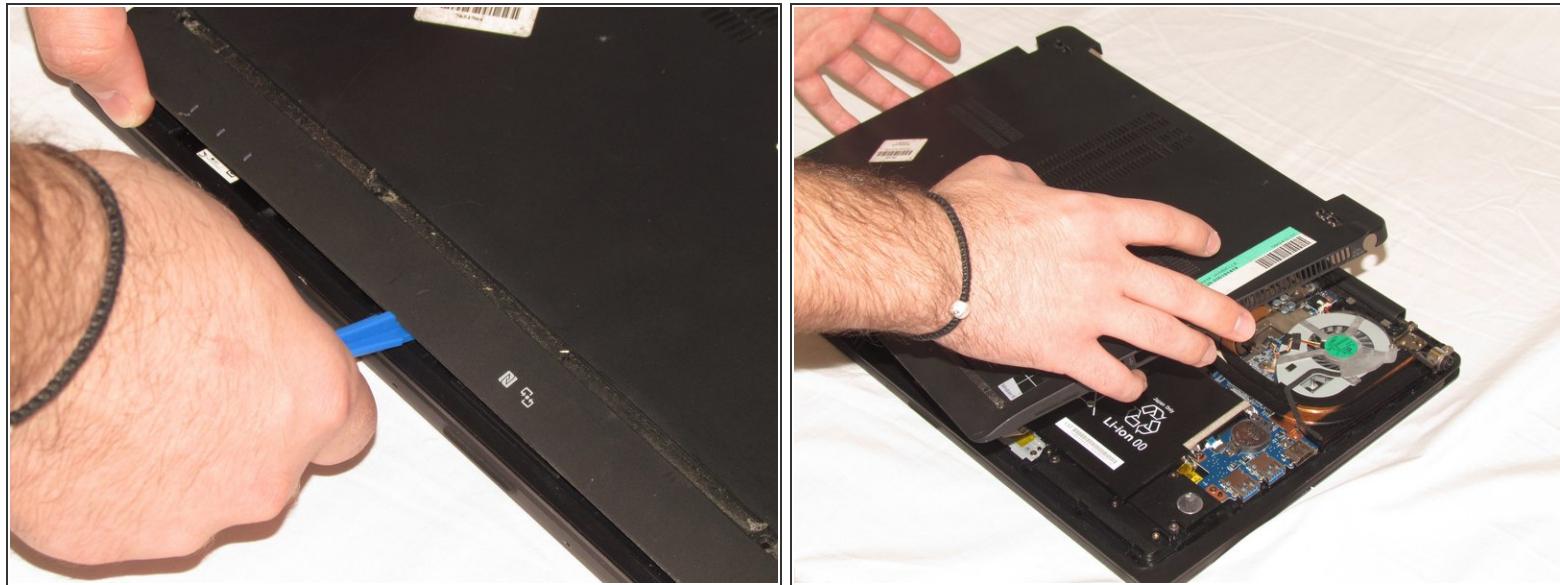

- Use a plastic opening tool to separate the bottom cover from the laptop.
- Lift the lower cover and pull away from the laptop.

Step 3



- Remove the eight Phillips #00 screws from the battery:
 - Six 4.65mm screws.
 - Two 4.65mm screws.

Step 4



- Lift the battery up and pull it out of the laptop.

To reassemble your device, follow these instructions in reverse order.