



# Sony Vaio Fit SVF15N26CXB Hard Drive Replacement

Replace the Sony Vaio Fit SVF15N26CXB hard drive so that computer and application startup and processing improves.

Written By: Althea McDavid



This document was generated on 2019-10-26 03:35:35 PM (MST).

## INTRODUCTION

This guide will show you how to identify and properly remove the hard drive for the Sony Vaio Fit SVF15N26CXB. Use the project mat to keep the screws organized.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Anti-Static Wrist Strap](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Magnetic Project Mat](#) (1)


## Step 1 — Battery



- Remove the following ten screws from the bottom case of the laptop:
  - Two 6.5mm Phillips #00 Phillips screws.
  - Four 8.95mm Phillips #00 screws.
  - Four 6.25mm Phillips #00 screws.

*(i)* The screws may be hidden underneath a rubber foot that can be removed with a spudger.

## Step 2

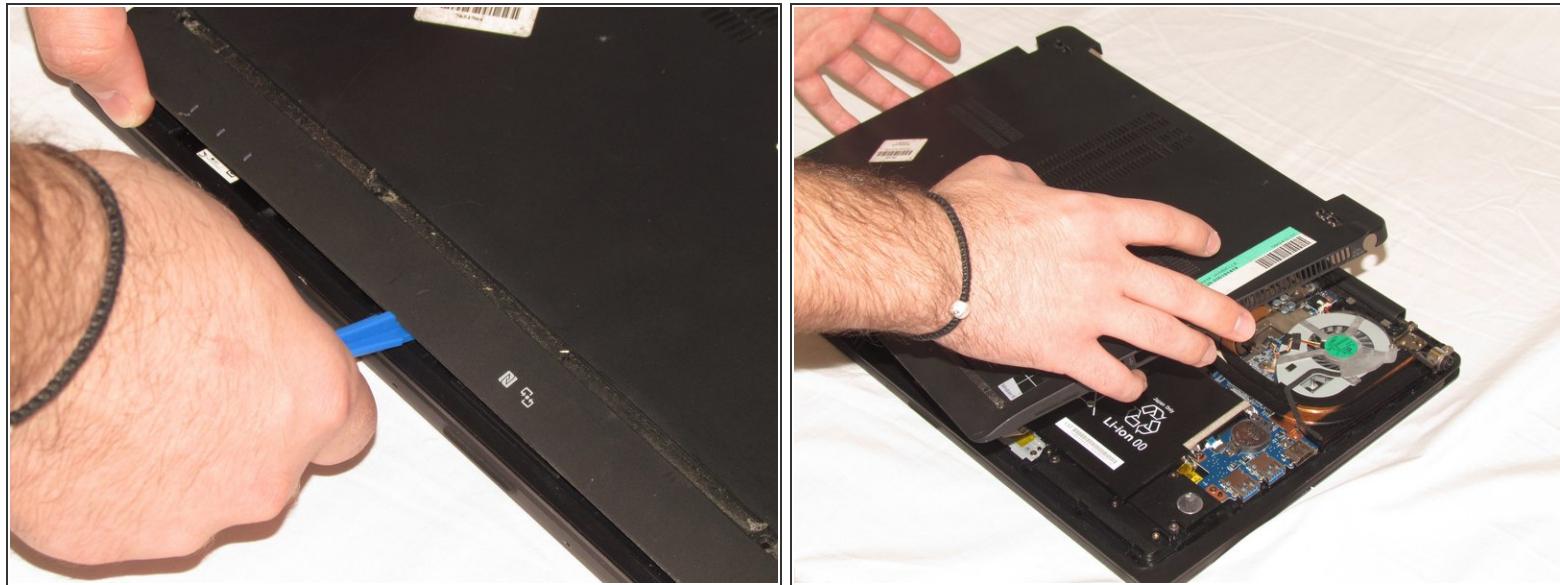

- Use a plastic opening tool to separate the bottom cover from the laptop.
- Lift the lower cover and pull away from the laptop.

## Step 3




- Remove the eight Phillips #00 screws from the battery:
  - Six 4.65mm screws.
  - Two 4.65mm screws.

## Step 4



- Lift the battery up and pull it out of the laptop.

## Step 5 — Hard Drive

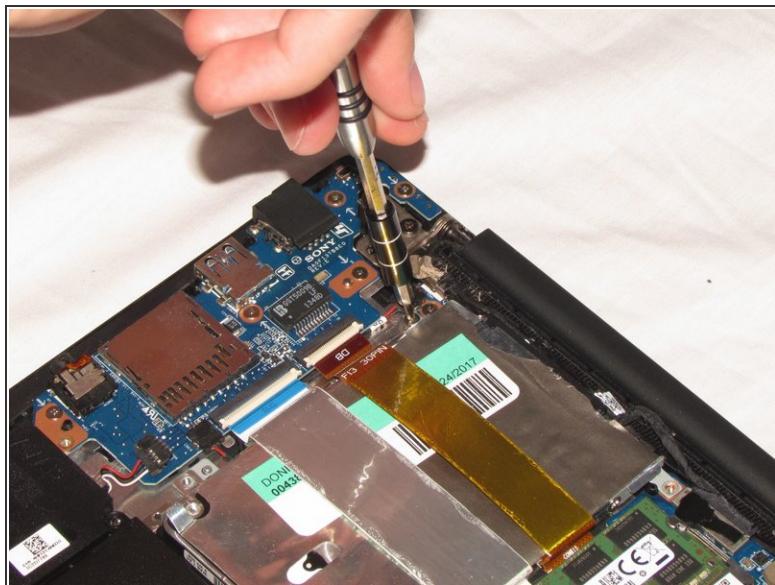


- Remove the four 3.20mm Phillips #00 screws from the hard drive.

## Step 6



- Use a spudger to flip up the black latch on the ZIF connectors.
- Pull the ribbon cables out of the ZIF connectors and fold them over the hard drive.
- Disconnect the hard drive and remove.

## Step 7

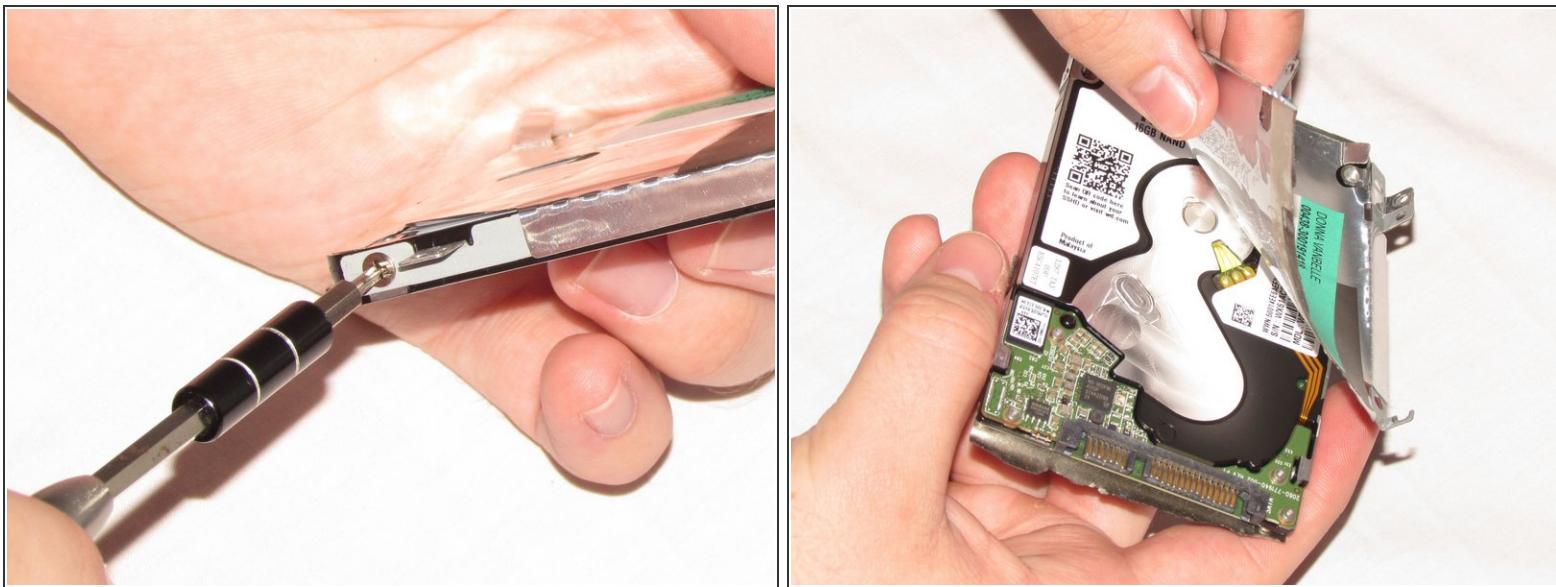

- Remove the four 3.70mm Phillips #00 screws from the hard drive mounting case.
- Carefully peel foil tray off of hard drive.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-10-26 03:35:35 PM (MST).

