




Sony Vaio PCG-3C2L Battery Replacement

This guide provides step by step instructions with pictures to help replace your Sony Vaio PCG-3C2L battery.

Written By: Paris Wyatt

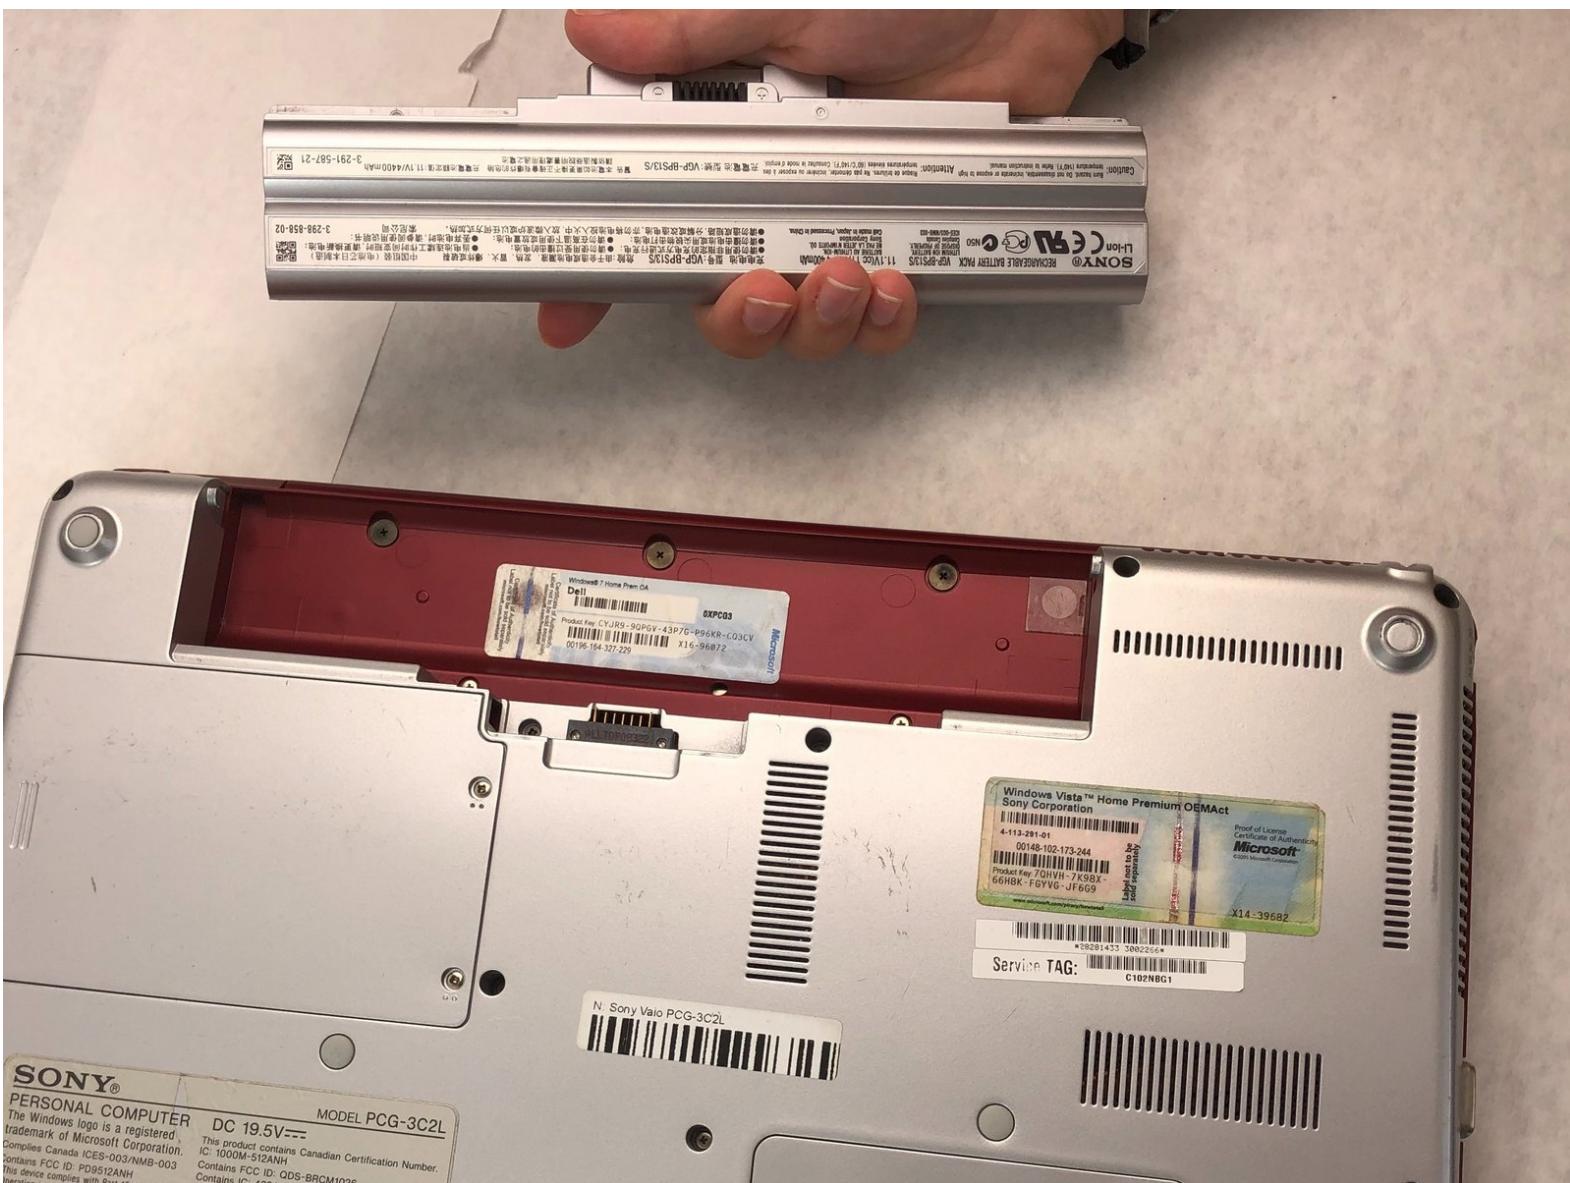

INTRODUCTION


This replacement guide provides step by step instructions with pictures to help replace your Sony Vaio PCG-3C2L battery. You may need to replace your battery if your laptop is failing to power on or if it is not holding a charge. To complete this replacement, an iFixit Opening Tool can be used, but it is optional.

Always check to make sure you have the correct battery. You can find replacement batteries [here](#).

TOOLS:


- [iFixit Opening Tools](#) (1)

Step 1 — Battery

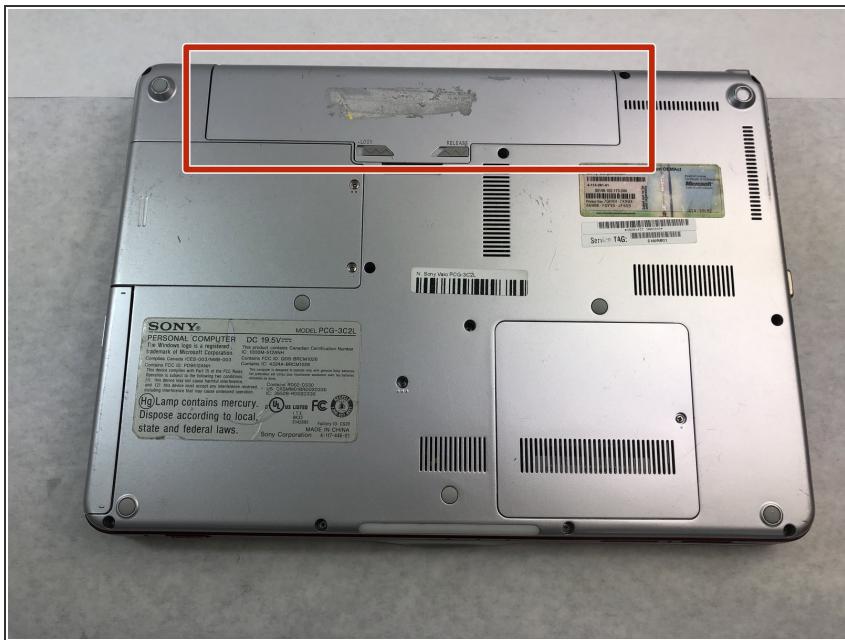

- Turn your computer over so the bottom is facing up.
- The battery should be in the top on the back of the computer.

Step 2

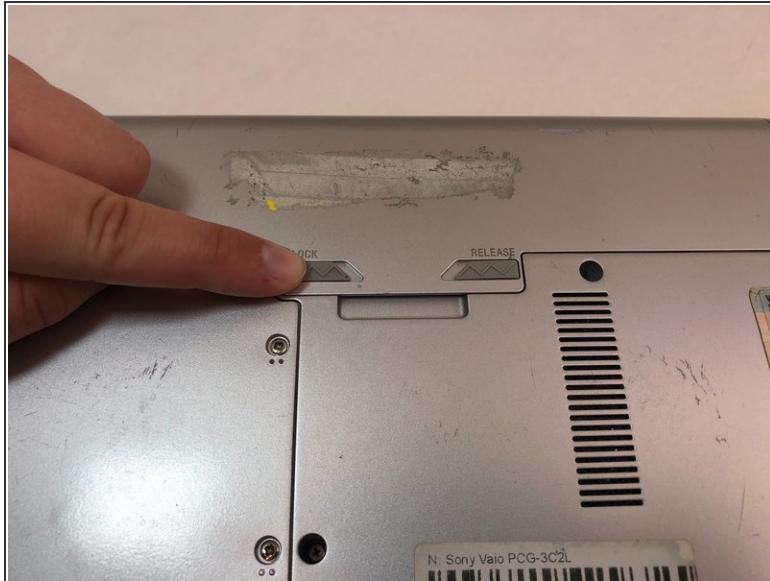


- Initially, the "lock" button should be pushed all the way to the left. To unlock the battery, move the lock button from the left to the right.

Step 3



- After unlocking the battery, hold the "release" button and push to the left.

Step 4

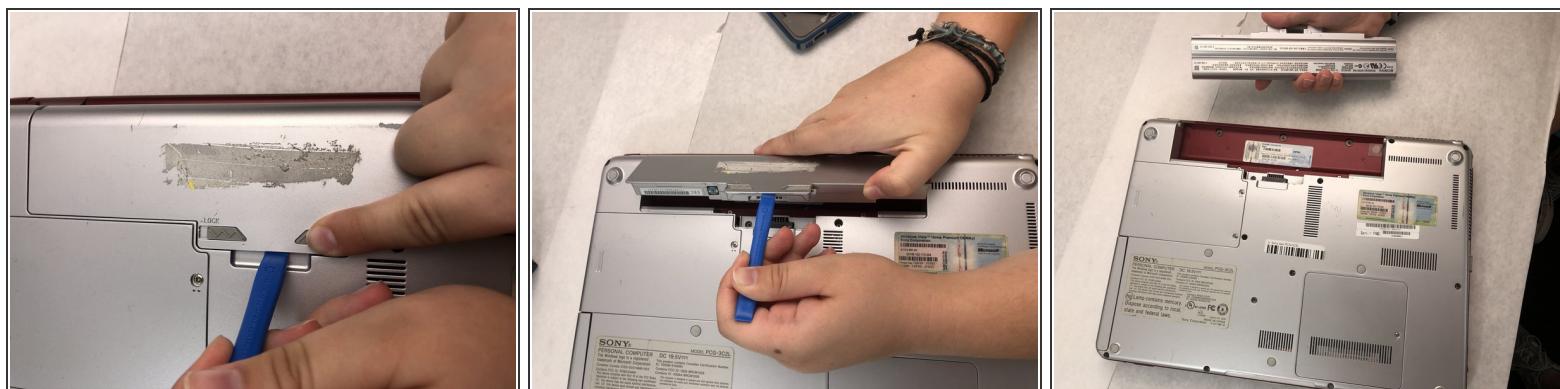

- Keep the "release" button pressed.
- Use the iFixit opening tool (or your hands) to lift the battery up.

To reassemble your device, follow these instructions in reverse order.