



Sony Vaio PCG-4G1L Battery Replacement

This guide shows how to replace the battery on the Sony Vaio PCG-4G1L Notebook.

Written By: Jennifer Nance



INTRODUCTION

A faulty battery is a common problem. Your computer may not turn on or hold a full charge. Use this guide to replace your battery.

Step 1 — Battery



- Locate the battery compartment on the bottom of the notebook.
- Using your thumb, slide the release latch to the left.
- While holding the release latch to the left, firmly grip the three raised horizontal bars located on the center of the battery cover.
- Pull the battery away from the device.

To reassemble your device, follow these instructions in reverse order.