




Sony Vaio PCG-51412L RAM Card Replacement

This guide will walk you through how to replace your RAM cards.

Written By: Kris Fleming

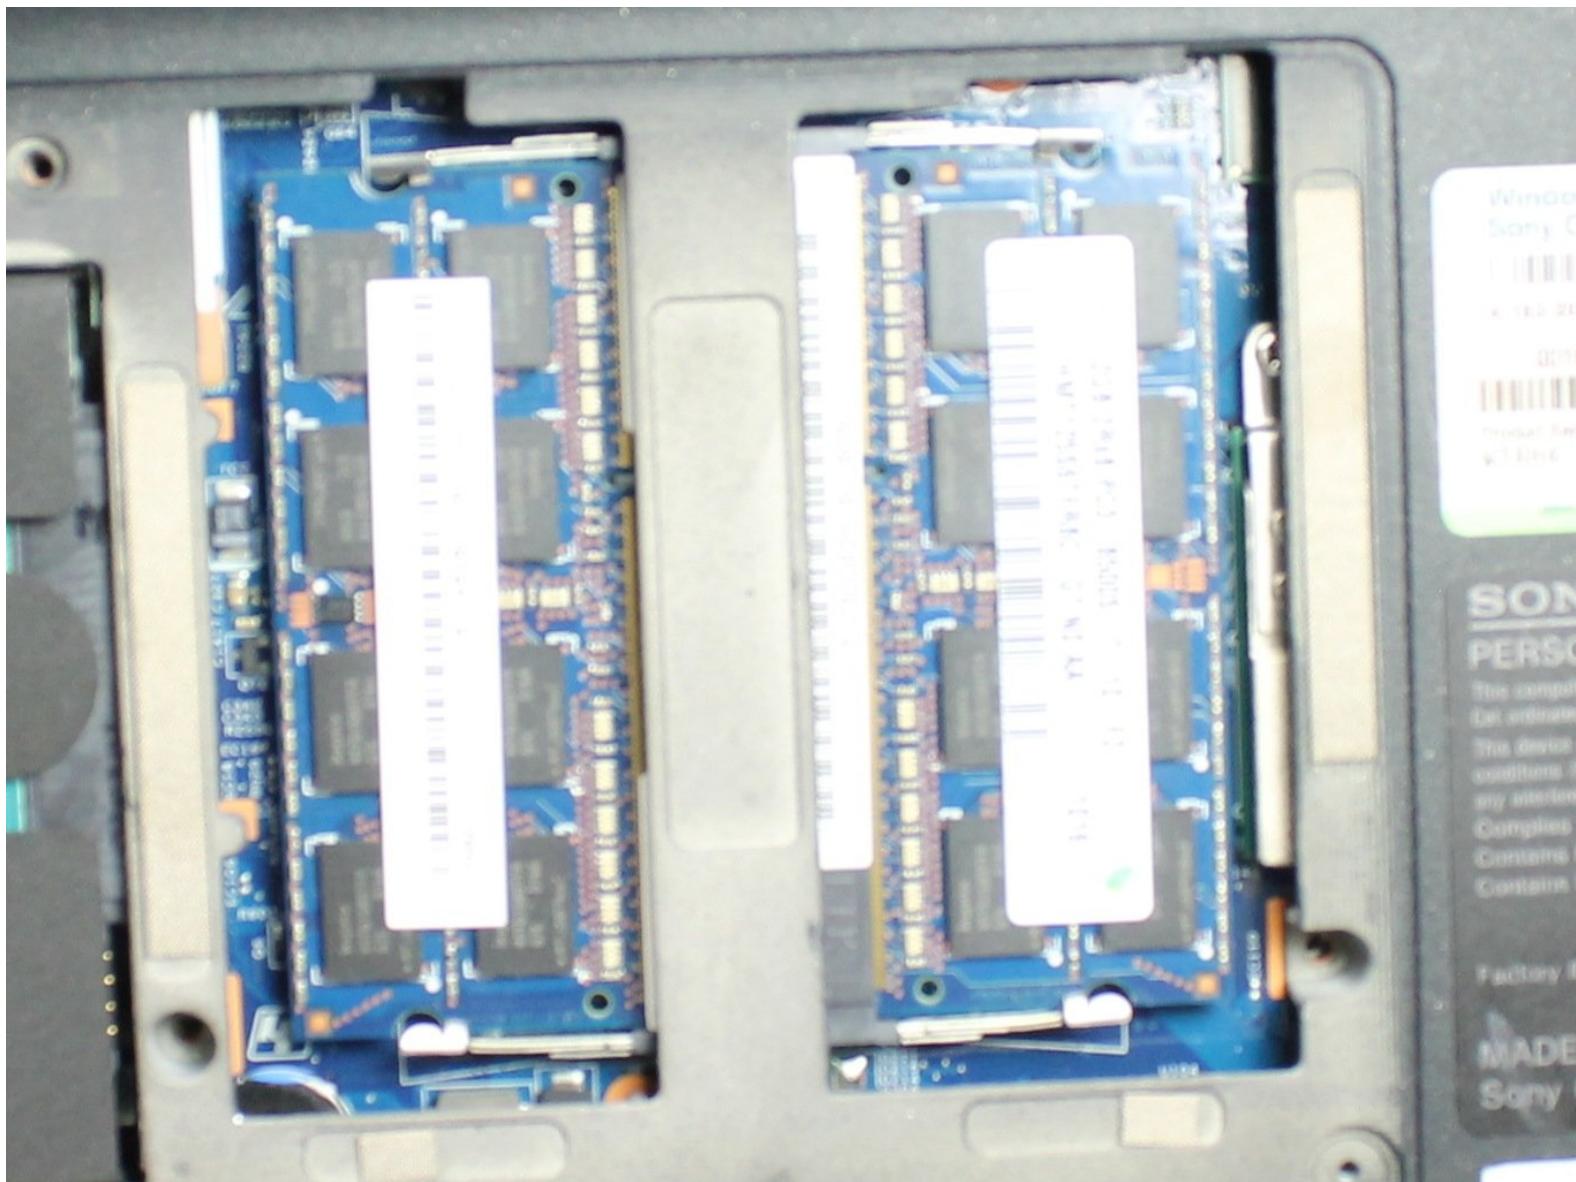

INTRODUCTION

If your computer is only displaying a black screen, or if it is struggling to run multiple programs, you may need to replace your RAM. This guide will walk you through how to remove your RAM cards -- the same process for either card -- requiring only a PH0 screwdriver.

TOOLS:

- Phillips #0 Screwdriver (1)

PARTS:

- Sony VGP - BPS21A (1)
- PC3-8500 2 GB RAM Chip (1)

Step 1 — Battery



- Flip your laptop so that the bottom is facing up.

Step 2




- Slide the “Lock” switch to the right.
- Slide and hold the “Release” switch to the left.

Step 3



- While holding the “Release” switch, lift the lip of the battery.
- Lift the battery up and out of the laptop.

Step 4 — RAM Card

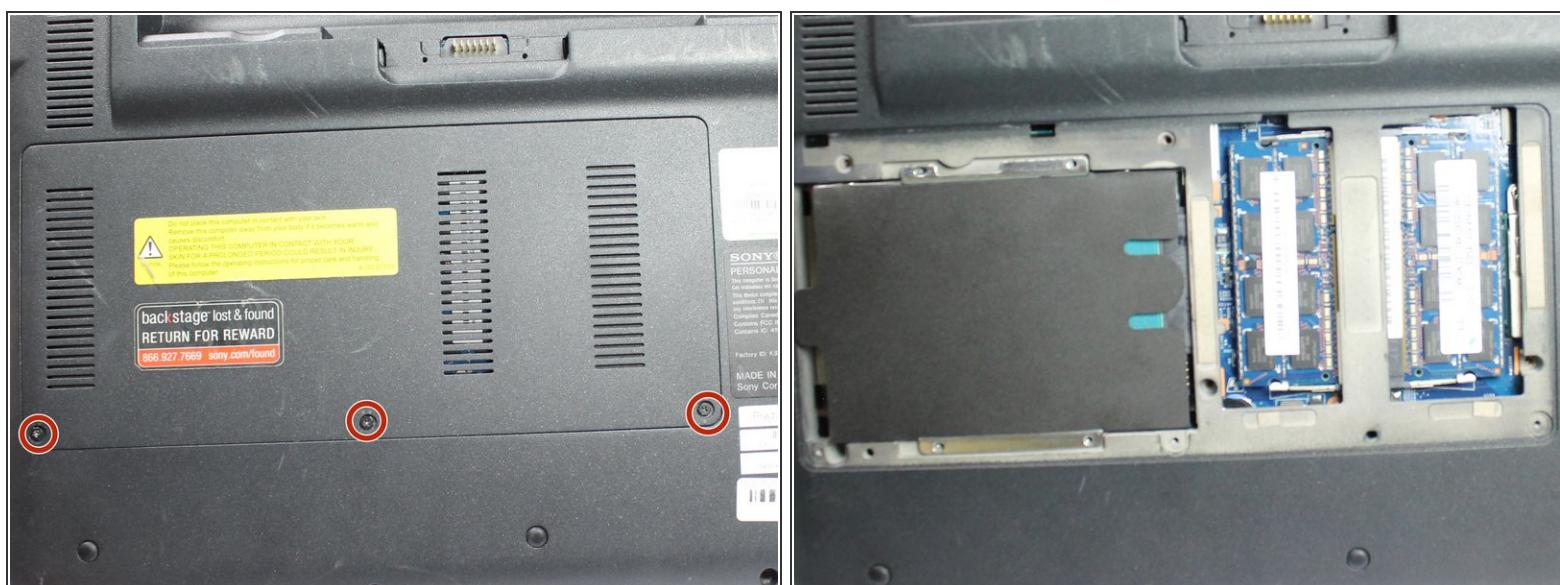

- Use a #0PH screwdriver to unscrew the three 4.80mm screws.
- Remove the panel.

This document was generated on 2020-01-18 06:00:05 PM (MST).

Step 5



- Pull the metal tabs in opposite directions, away from the RAM card.
- The RAM card will swing upwards.

Step 6



- Grab the RAM card from its center.
- Gently pull the RAM card out.

To reassemble your device, follow these instructions in reverse order.