



Sony Vaio PCG-61112L Hard Drive Replacement

Use this guide to aid in the replacement of the Hard Drive on your Sony Vaio PCG-61112L.

Written By: Tiffani Beck



This document was generated on 2019-11-05 04:23:22 PM (MST).

INTRODUCTION

In order to remove the Hard Drive safely, be sure to take out the battery first. The Hard Drive is under a panel on the laptop and can be ejected by removing screws.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)

Step 1 — Hard Drive



- Turn the laptop over and orient it as shown.

Step 2

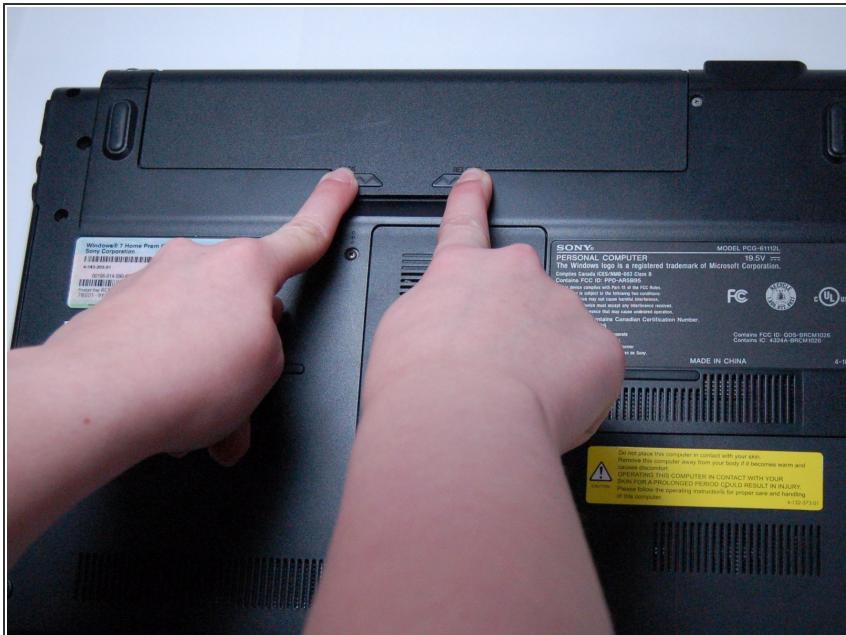

- Slide the two latches towards the center of the battery to release it.

Step 3



- Use your fingernail or a plastic tool to lift the battery. Rotate the battery up and away to remove from the laptop.

Step 4




- Use a Phillips #00 screwdriver to remove the two 7.7 mm screws from the hard drive cover and place it to the side.

Step 5



- Remove the four screws (Length: 7.7 mm) using the Phillips #00 screwdriver that hold the hard drive in place.
- Use the tab to slide the hard drive away from the laptop.
- Set the disconnected hard drive away from the laptop.

Step 6

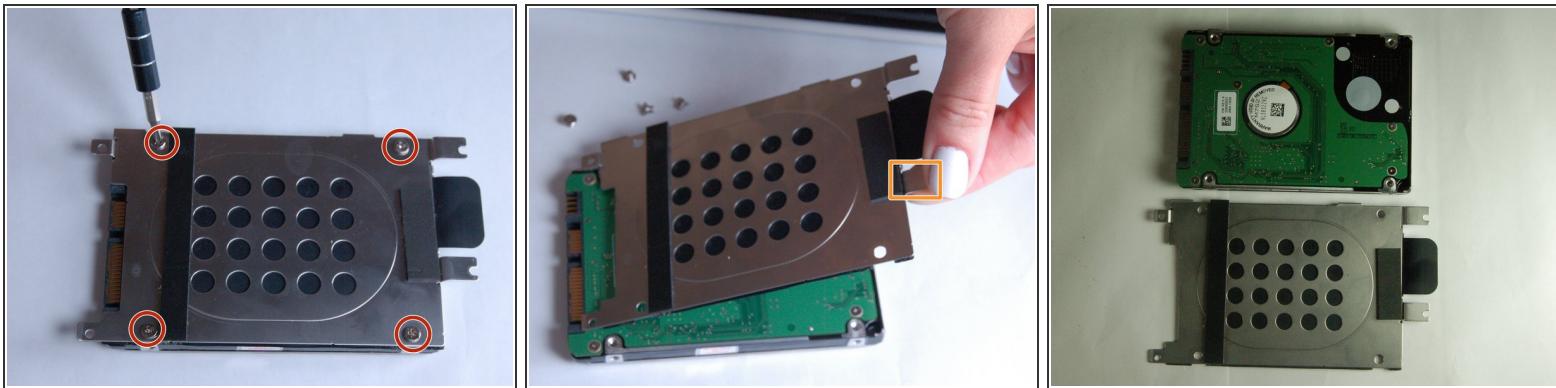

- Remove the four screws (Length: 7.7 mm) using the Phillips #00 screwdriver that cover the hard drive.
- Use the tab to pull up on the metal cover and remove it.
- You are now free to replace the hard drive.

To reassemble your device, follow these instructions in reverse order.

