



Sony Vaio PCG-61112L LCD Screen Replacement

Use this guide to replace the LCD screen on your Sony Vaio PCG-61112L.

Written By: Seowon Song



INTRODUCTION

In order to remove the screen safely, be sure to take out the battery first. The screen can be replaced once you remove the plastic cover located on the back of the laptop with all screws removed.

TOOLS:

- Phillips #0 Screwdriver (1)
- Spudger (1)

Step 1 — LCD Screen



- Turn the laptop over and orient it as shown.

Step 2




- Slide both latches towards the center of the battery to release.

Step 3



- Use your fingernail or a plastic tool to lift the battery. Rotate the battery up and away to remove from the laptop.

Step 4

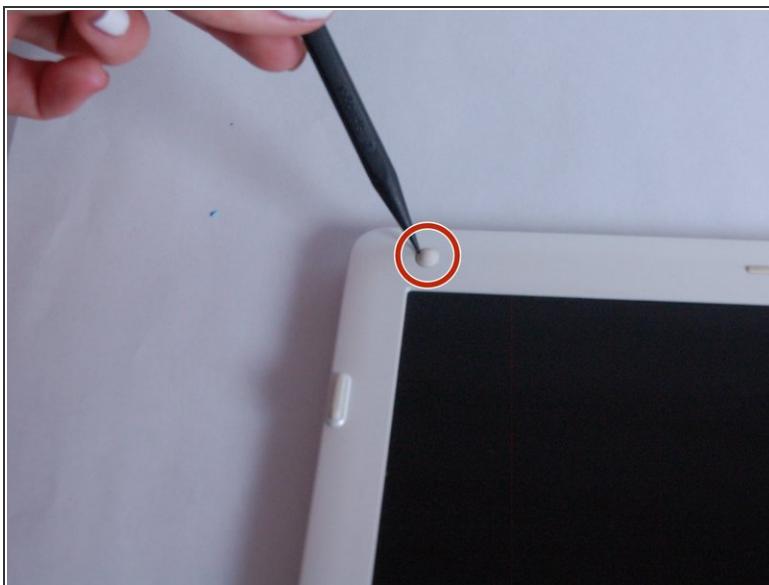


- Remove the rubber pads on all four corners of the screen bezel using the spudger.
- Remove the four screws (Length: 7.7 mm) using the Phillips #0 screwdriver.

Step 5



- Remove the screen's plastic bezel.
- *(i)* You need to use slight pressure to release the clips.

Step 6

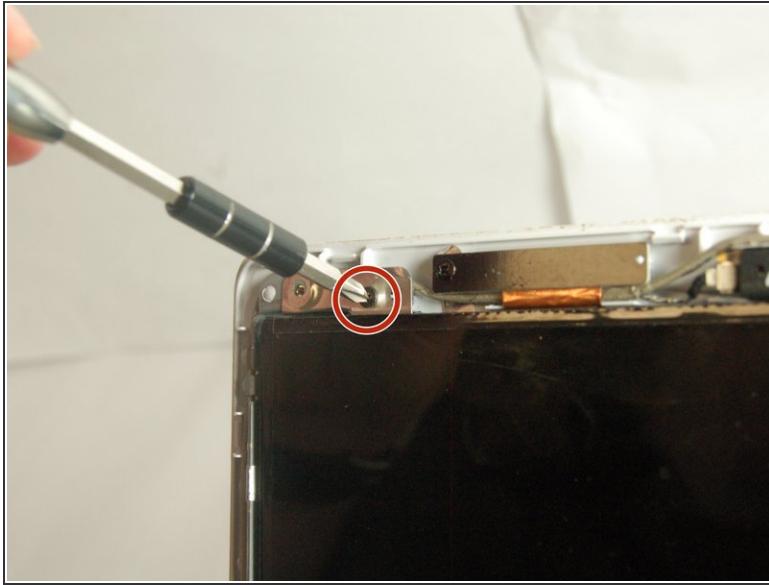

- Remove all four screws (Length: 7.7 mm) using a Phillips #0 screwdriver. Make sure to hold the screen while removing the screws so it doesn't fall.
- Using your thumb, carefully lower the glass and place it on the keyboard.

⚠ Do this slowly to avoid damaging the screen.

This document was generated on 2019-09-25 09:43:00 PM (MST).

Step 7



- Pull off the tape and disconnect the display cable connector by gently sliding up to remove it from its socket.

Step 8



- The screen can now be removed.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-25 09:43:00 PM (MST).

