




Sony Vaio PCG-61112L RAM Replacement

In this guide, you will find step-by-step instructions on how to remove the RAM from the Sony Vaio PCG-61112L laptop.

Written By: Mia Martinez

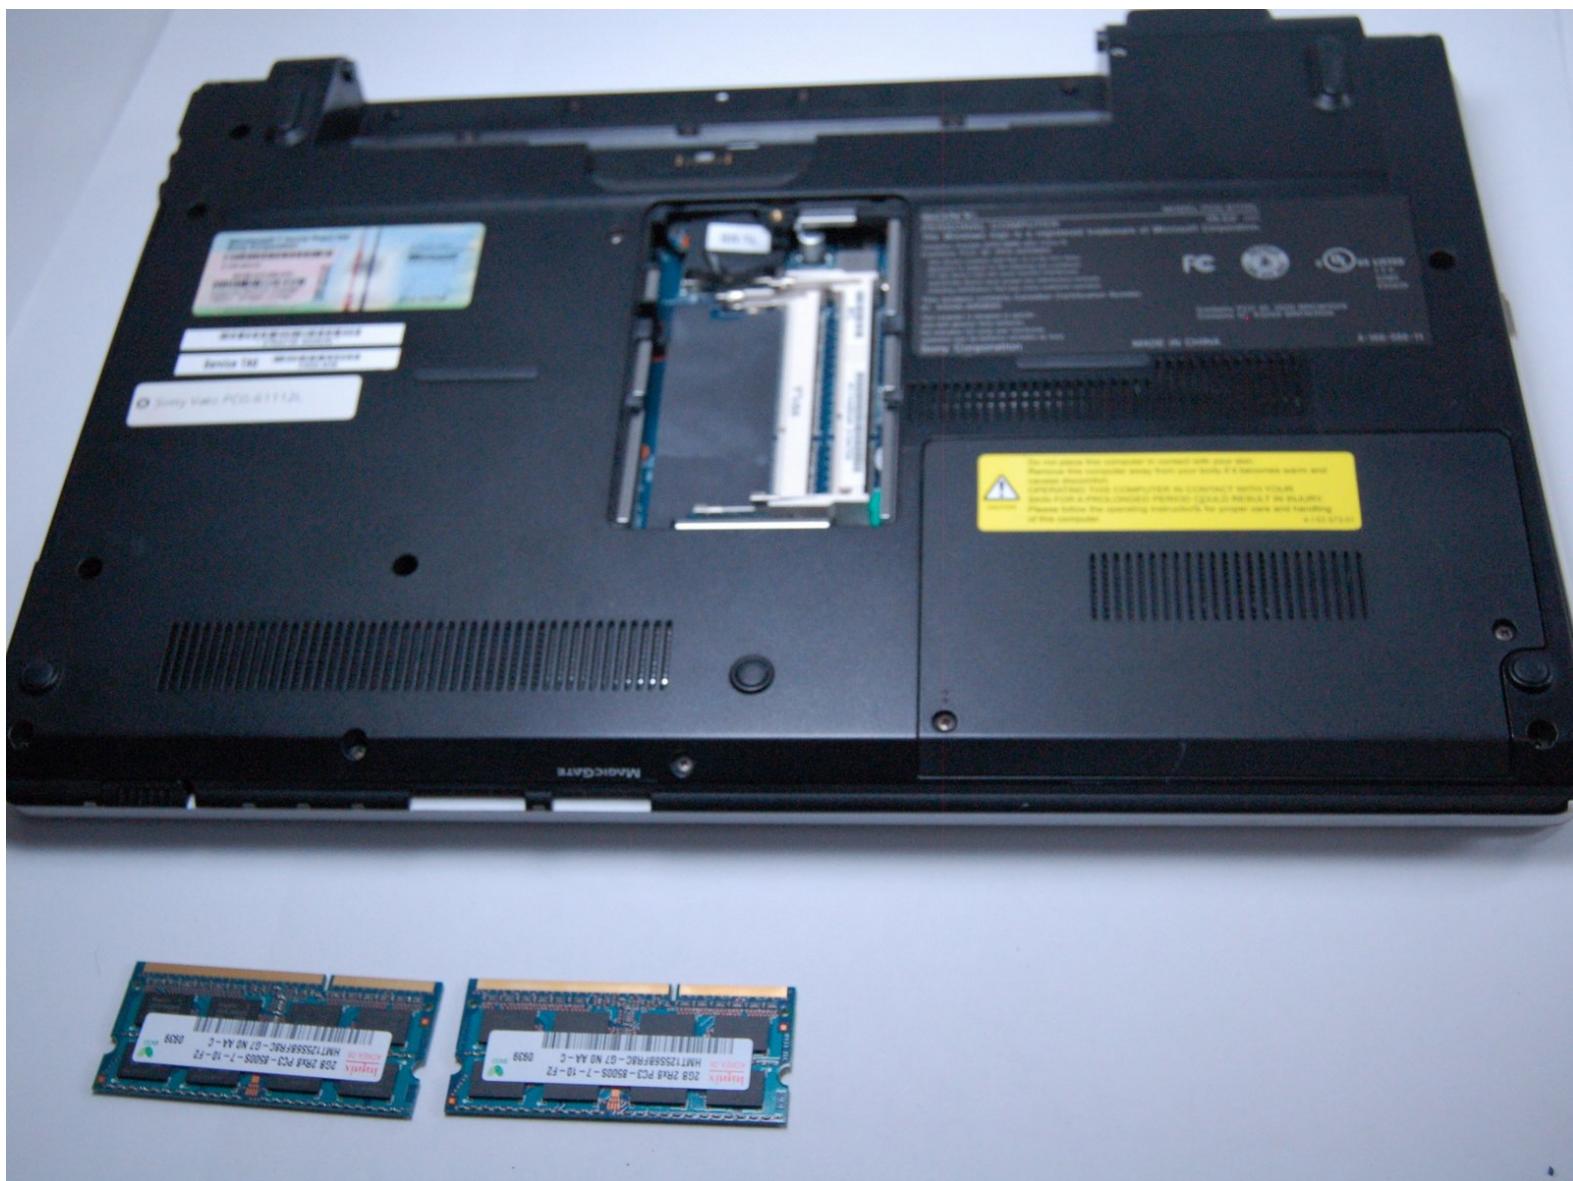

INTRODUCTION

In order to remove the RAM safely, be sure to take out the battery first. The RAM is under a panel on the laptop and can be ejected by hand.

TOOLS:

- Phillips #0 Screwdriver (1)

Step 1 — RAM



- Turn the laptop over and orient it as shown.

Step 2



- Slide both latches to the center of the laptop in order to release the battery.

Step 3



- Use your fingernail or a plastic tool to lift the battery. Rotate the battery up and away to remove from the laptop.

Step 4




- Using a Phillips #0 screwdriver, remove the one screw (Length: 7.7 mm) that is covering the RAM.

Step 5




- Lift the black plastic cover to assess the RAM.

Step 6

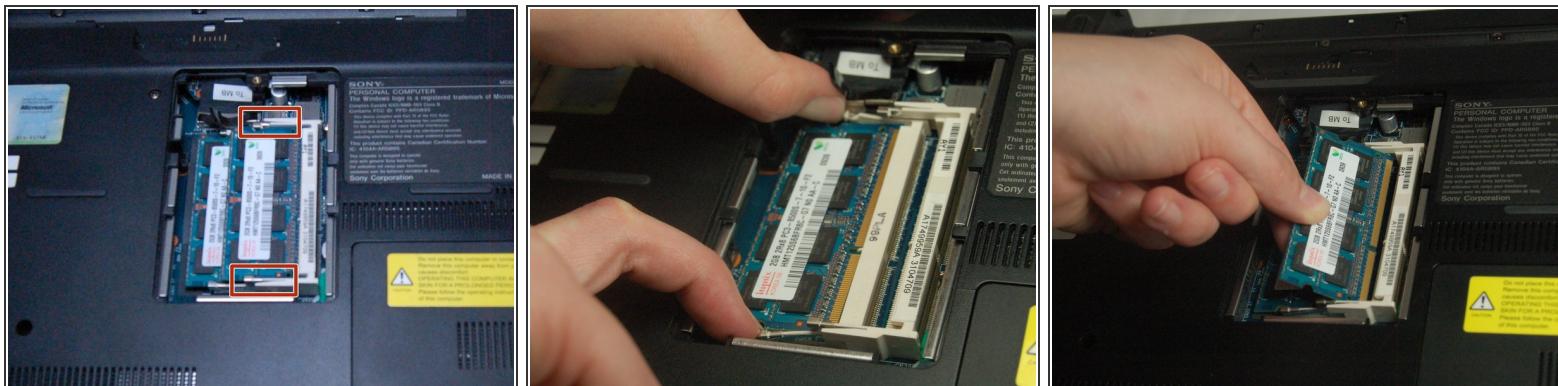

- Apply light, outward pressure to the locks on both sides of the RAM.
- Rotate the RAM up and slowly pull towards you to remove it.

Step 7

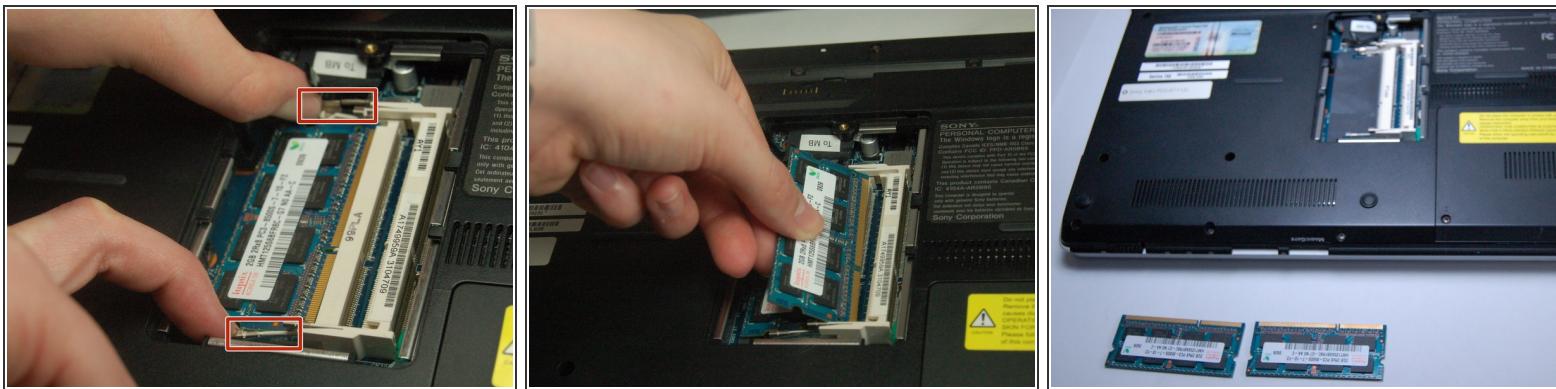

- In order to remove the secondary RAM, use the same outward pressure on the locks.
- Lift and slide out the RAM to remove it from the slot.

To reassemble your device, follow these instructions in reverse order.