



# Sony Vaio PCG-61A12L RAM Replacement

Use guide to replace the RAM of the Sony Vaio PCG-61A12L


Written By: Brayelly Servellon



 **TOOLS:**



- Phillips #1 Screwdriver (1)

## Step 1 — Battery

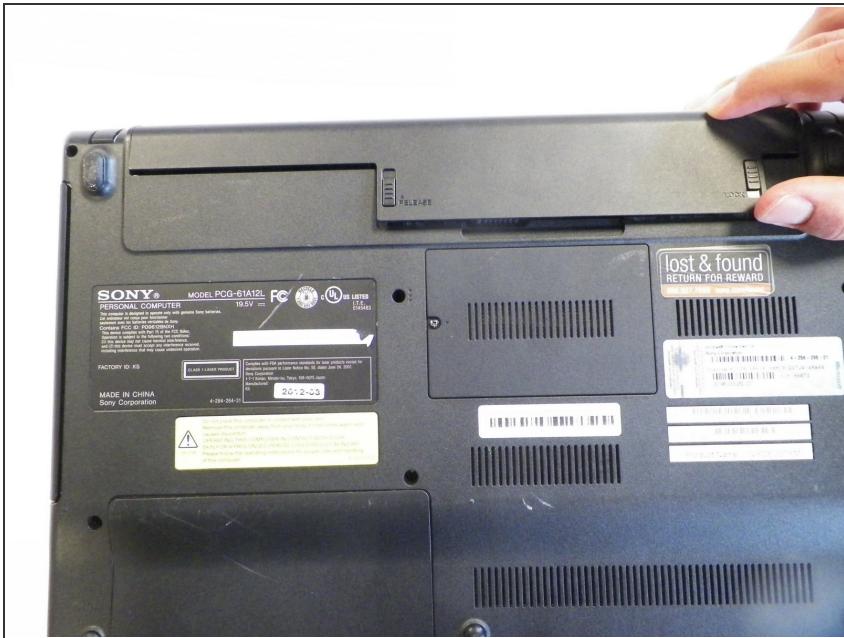


- Unlock the battery by sliding the lock upwards.

## Step 2

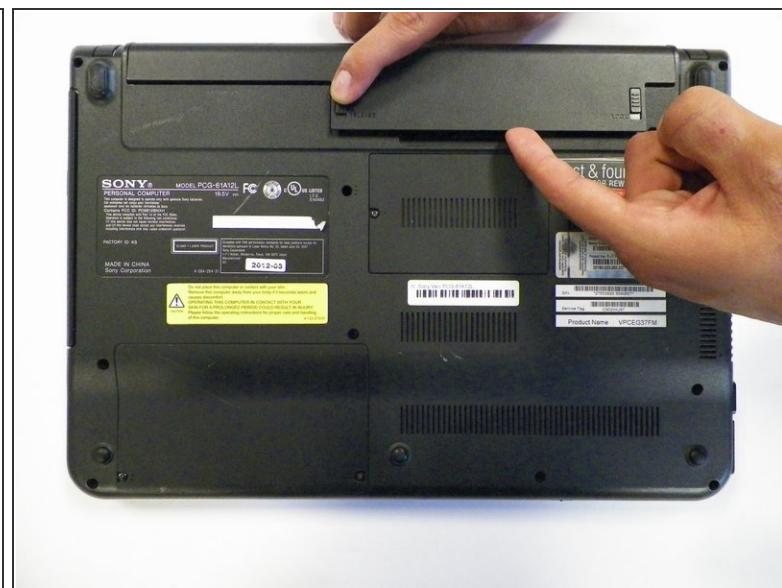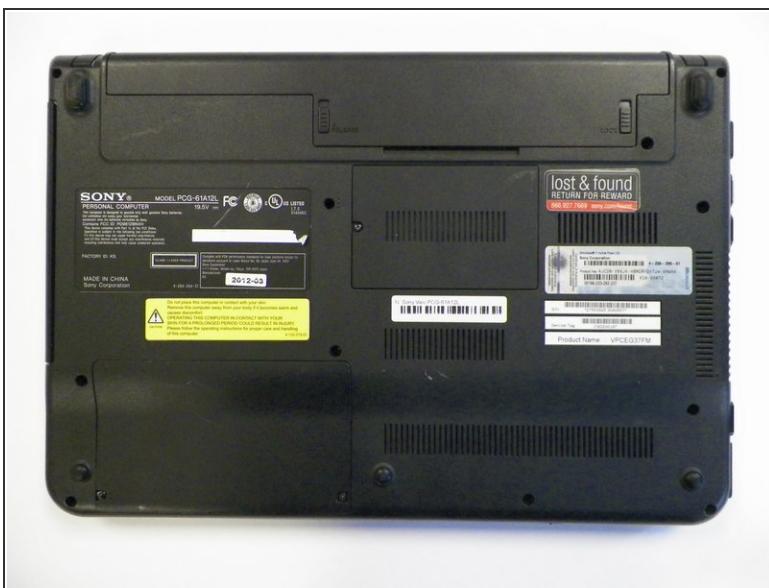

- Slide the release upwards and lift out the battery to remove.

## Step 3 — RAM

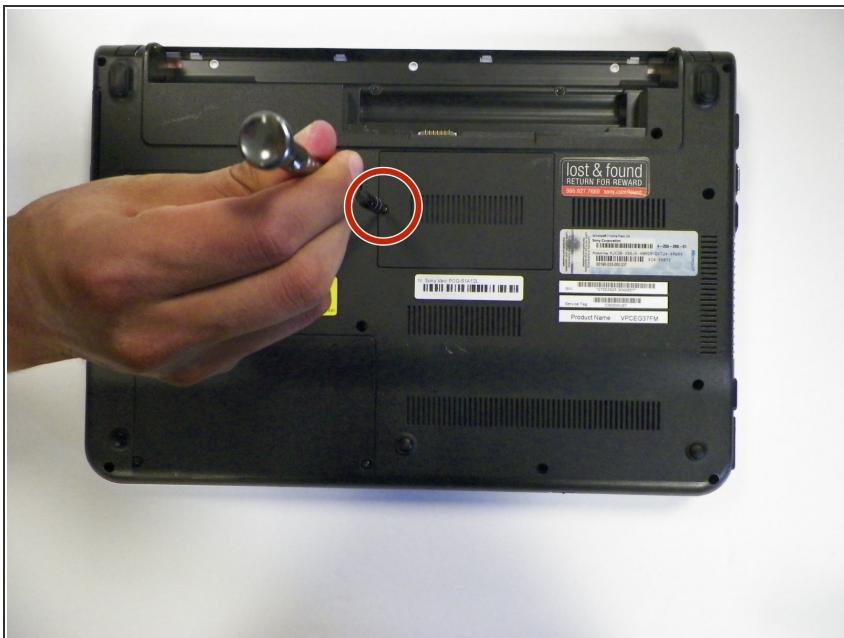


- Use a Phillips #1 screw to unscrew the 6.5 mm screw keeping the cover.

## Step 4



- Gently lift cover up to expose the RAM.
- *i* Screw will stay attached to cover when being removed.

## Step 5

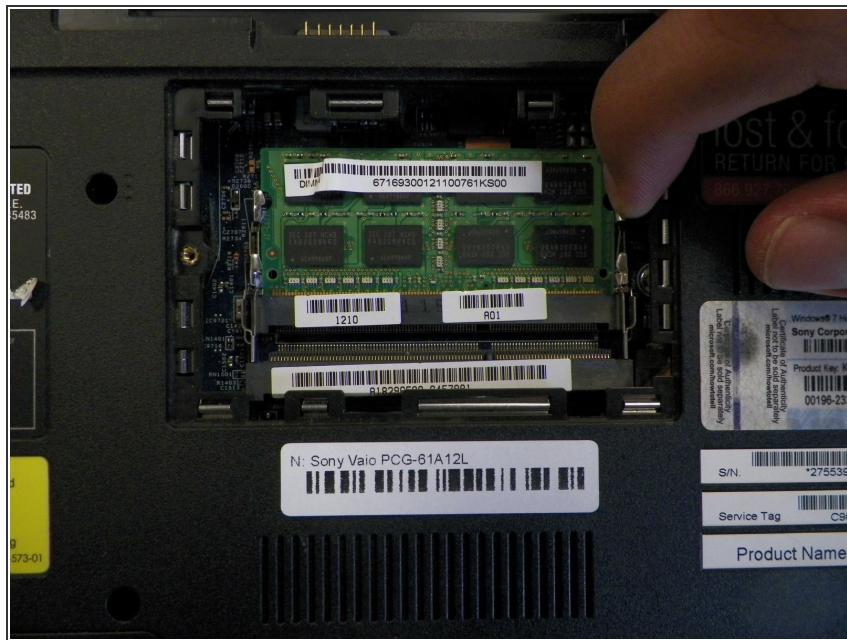

- Pull the clips, holding the RAM in place, to the side to pop the RAM out. Then remove the RAM.

 Avoid contact with black squares. Hand oils may damage memory.

To reassemble your device, follow these instructions in reverse order.