



Sony Vaio PCG-61A14L Battery Replacement

Through following this guide, you will learn how to replace the battery on a Sony Vaio PCG-61A14L laptop.

Written By: Sara Alfaro



INTRODUCTION


The goal of this guide is to walk you through the process of replacing the battery of a Sony Vaio PCG-61A14L Laptop step-by-step. The battery needs to be replaced if the laptop needs to be charged very frequently or cannot be used without being plugged in. Be careful of using force to remove the battery. It has a rail system that requires correct alignment to remove.



PARTS:


- [VGP-BPS26A Battery \(1\)](#)

Step 1 — Battery

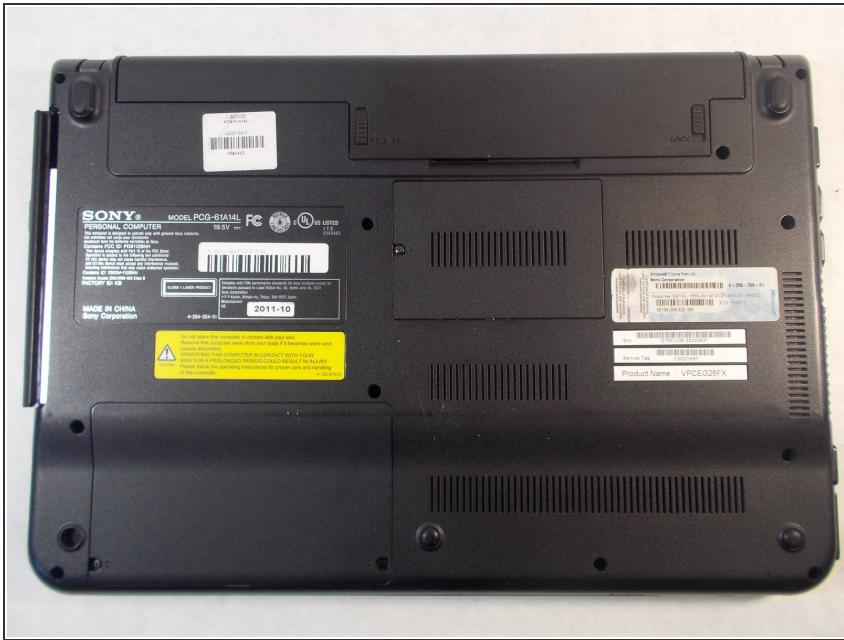


- Flip the laptop so the bottom is facing up with the model number visible.

Step 2

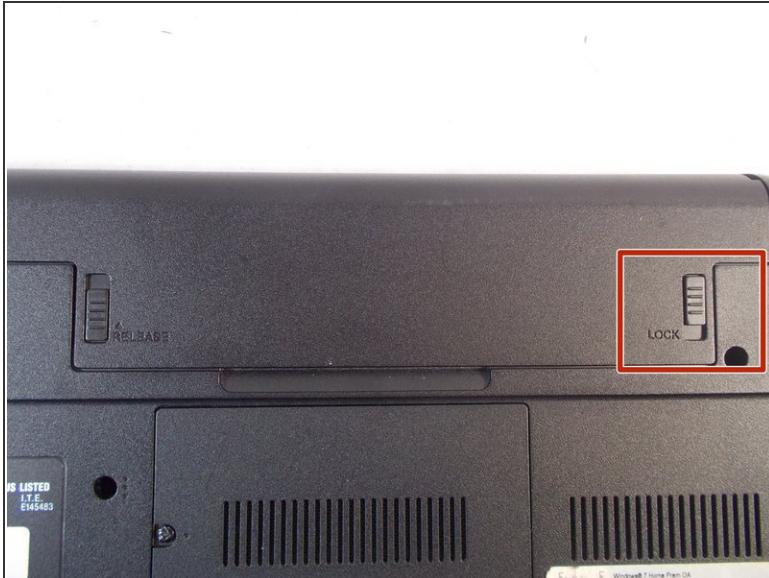

- Slide the lock switch down until you hear a click to unlock the battery.

Step 3

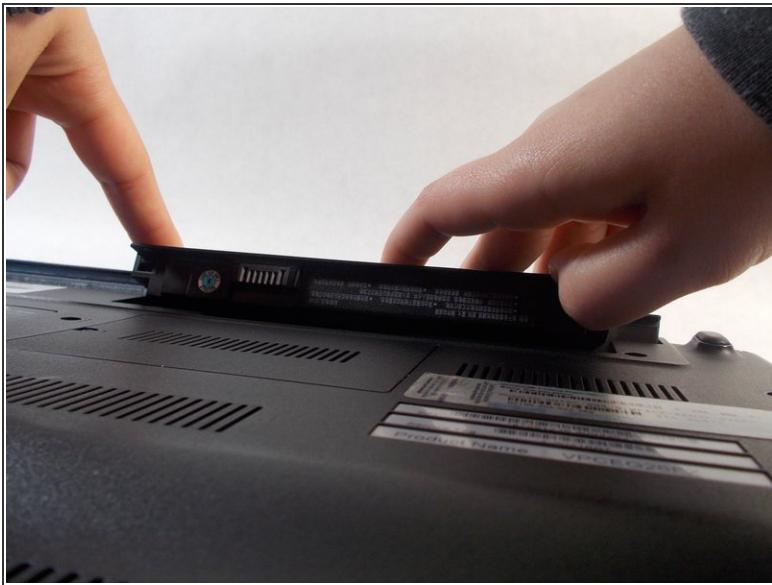

- Slide the release slider up and simultaneously push the battery upwards away from the device until it falls out of place.

Step 4



- Remove the battery from the battery compartment.

To reassemble your device, follow these instructions in reverse order.