




# Sony Vaio PCG-61A14L Hard Drive Replacement

Through following this guide, you will be able to successfully remove and replace the hard drive of a Sony Vaio PCG-61A14L Laptop

Written By: Sara Alfaro

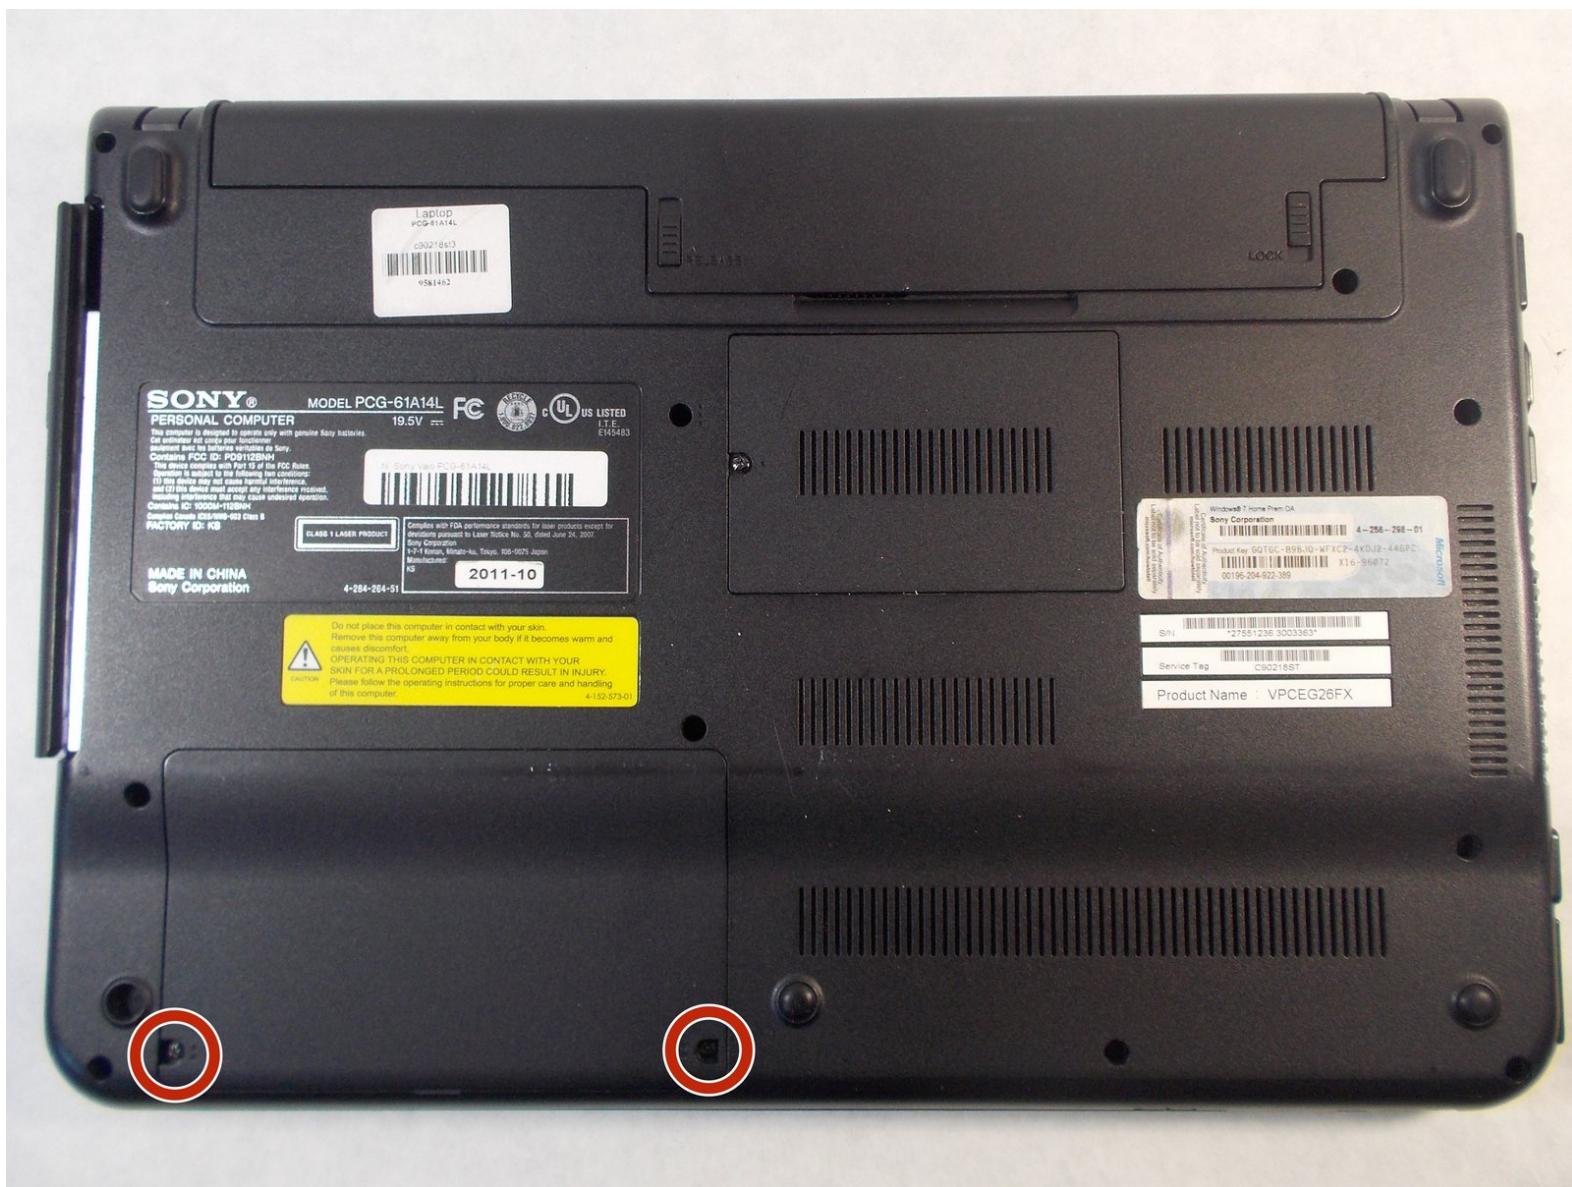

This document was generated on 2020-01-03 11:18:39 PM (MST).


## INTRODUCTION

In order to successfully complete this guide, please first look at the prerequisite guide. The hard drive needs to be replaced if the laptop is out of storage or the laptop crashes unexpectedly. This would be made apparent through messages when using it. Make sure the replacement hard drive has an operating system installed on it. It should be a 2.5" hard drive size.

## TOOLS:


- [JIS #0 Screwdriver](#) (1)
- [Magnetic Project Mat](#) (1)

## Step 1 — Hard Drive

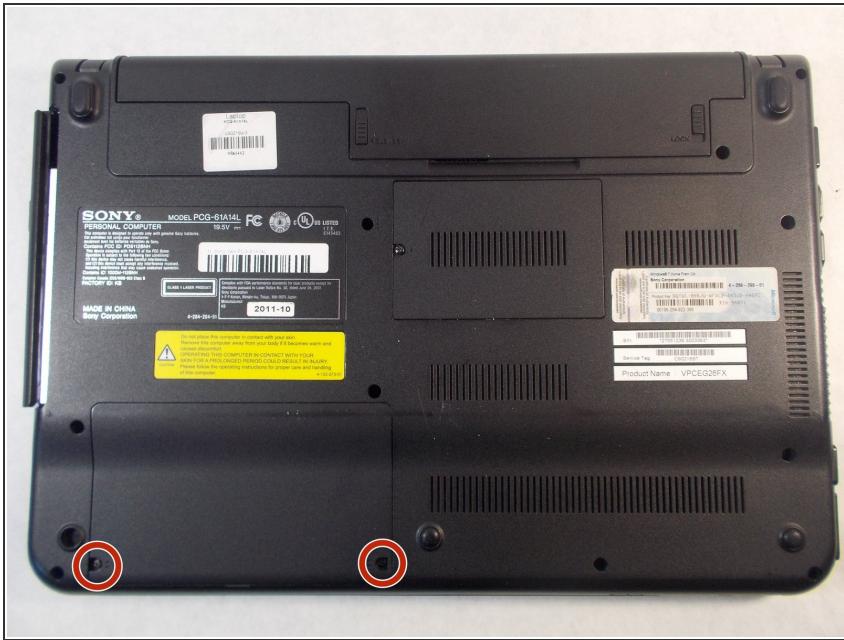


- Loosen the two (7mm) screws that hold the hard drive panel in place with a JIS #0 screwdriver.
- (i)* These screws cannot be removed.

## Step 2

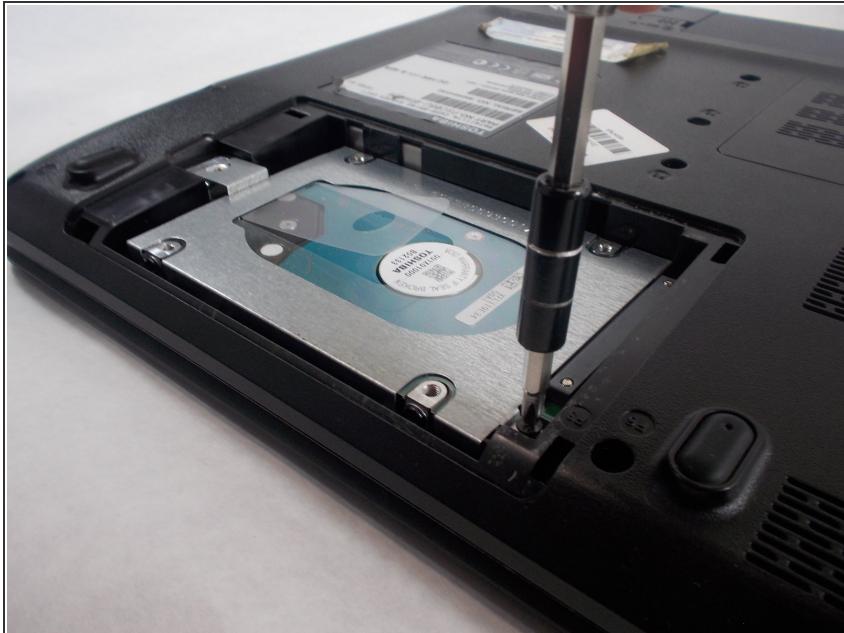

- Remove the plastic and unscrew the screw on the hard drive using the JIS #0 screwdriver.

## Step 3

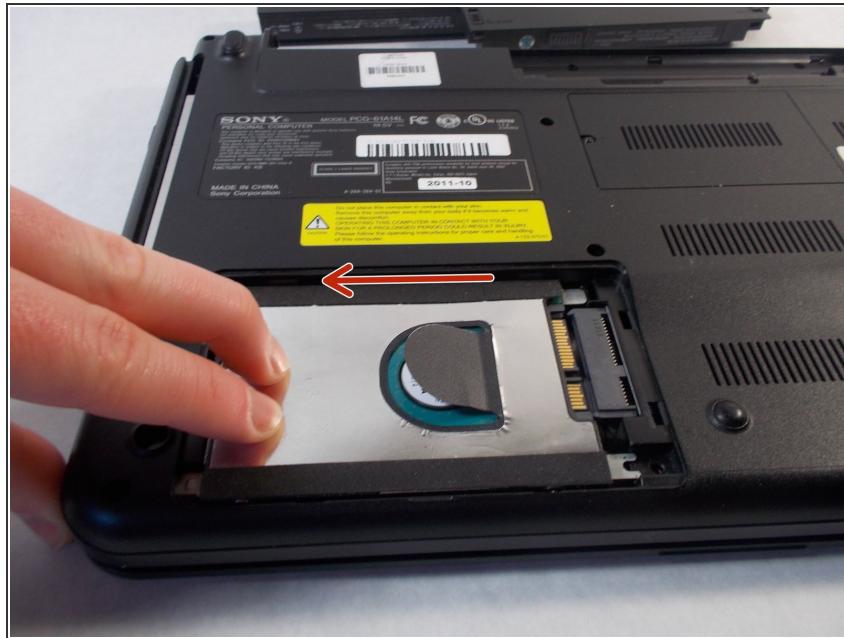

- Push the hard drive towards the optical reader to unlock it.

## Step 4



- Remove the hard drive from the device.

To reassemble your device, follow these instructions in reverse order.