




Sony Vaio PCG-71312I Battery Replacement

Quick guide covering battery removal.

Written By: Maxine Filcher

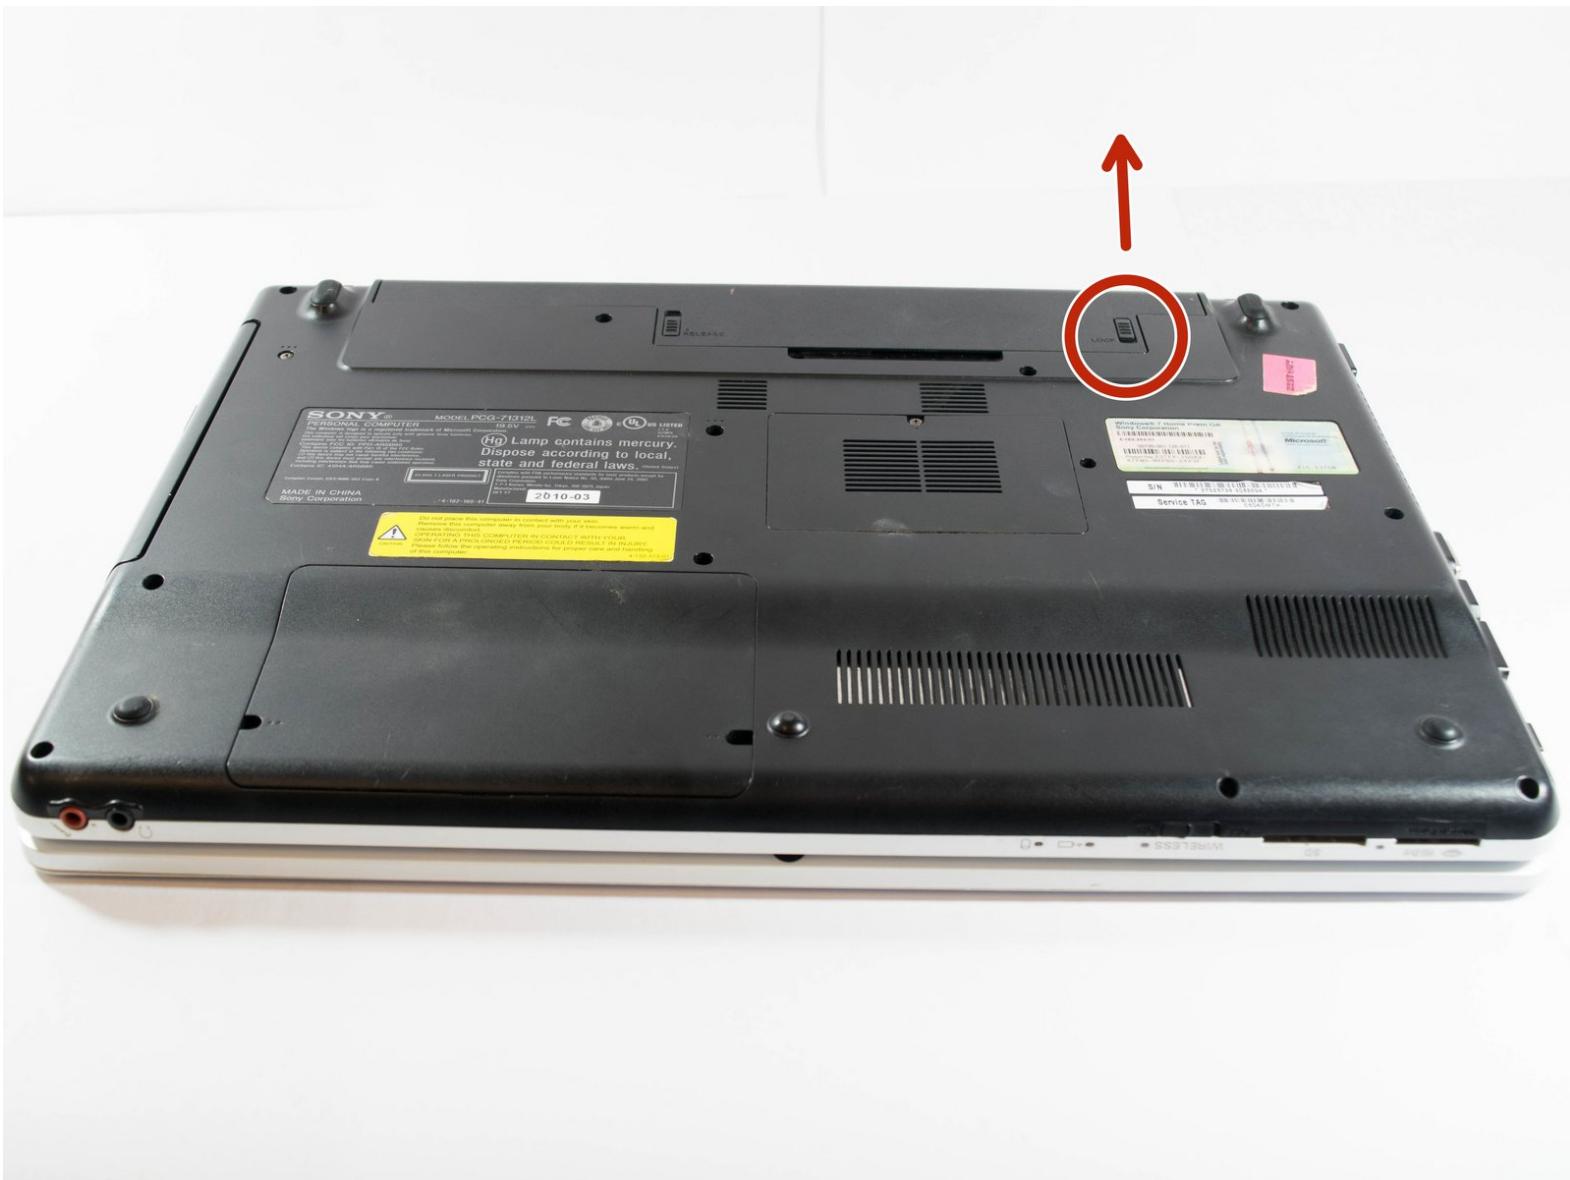

INTRODUCTION

Replacing a battery doesn't require any tools.


Step 1 — Battery



⚠ Power down and disconnect from power supply.

- Use your finger to unlock the tab by pressing the slide away from you.

Step 2

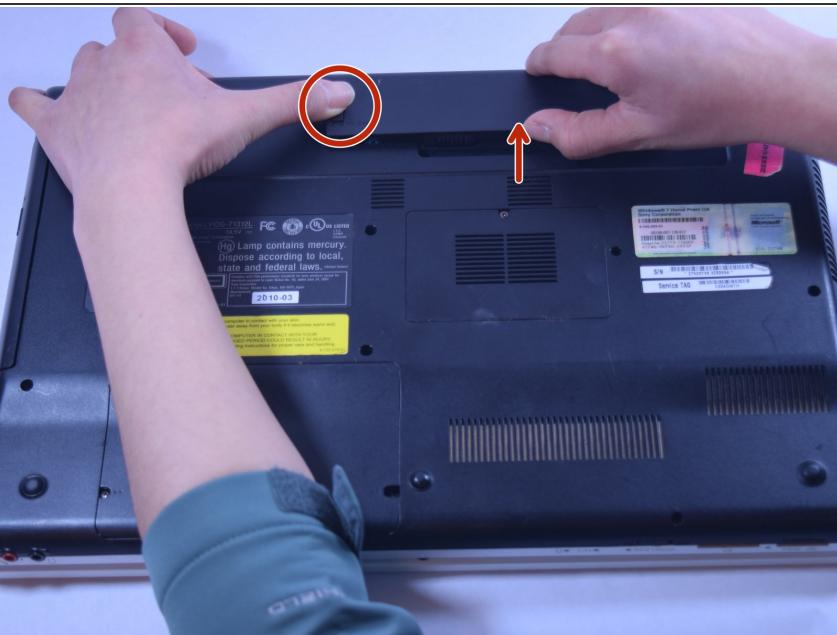

- Hold the release slide, while using thumb to apply upward pressure.

Step 3



- Pull the battery off.

To reassemble your device, follow these instructions in reverse order.