


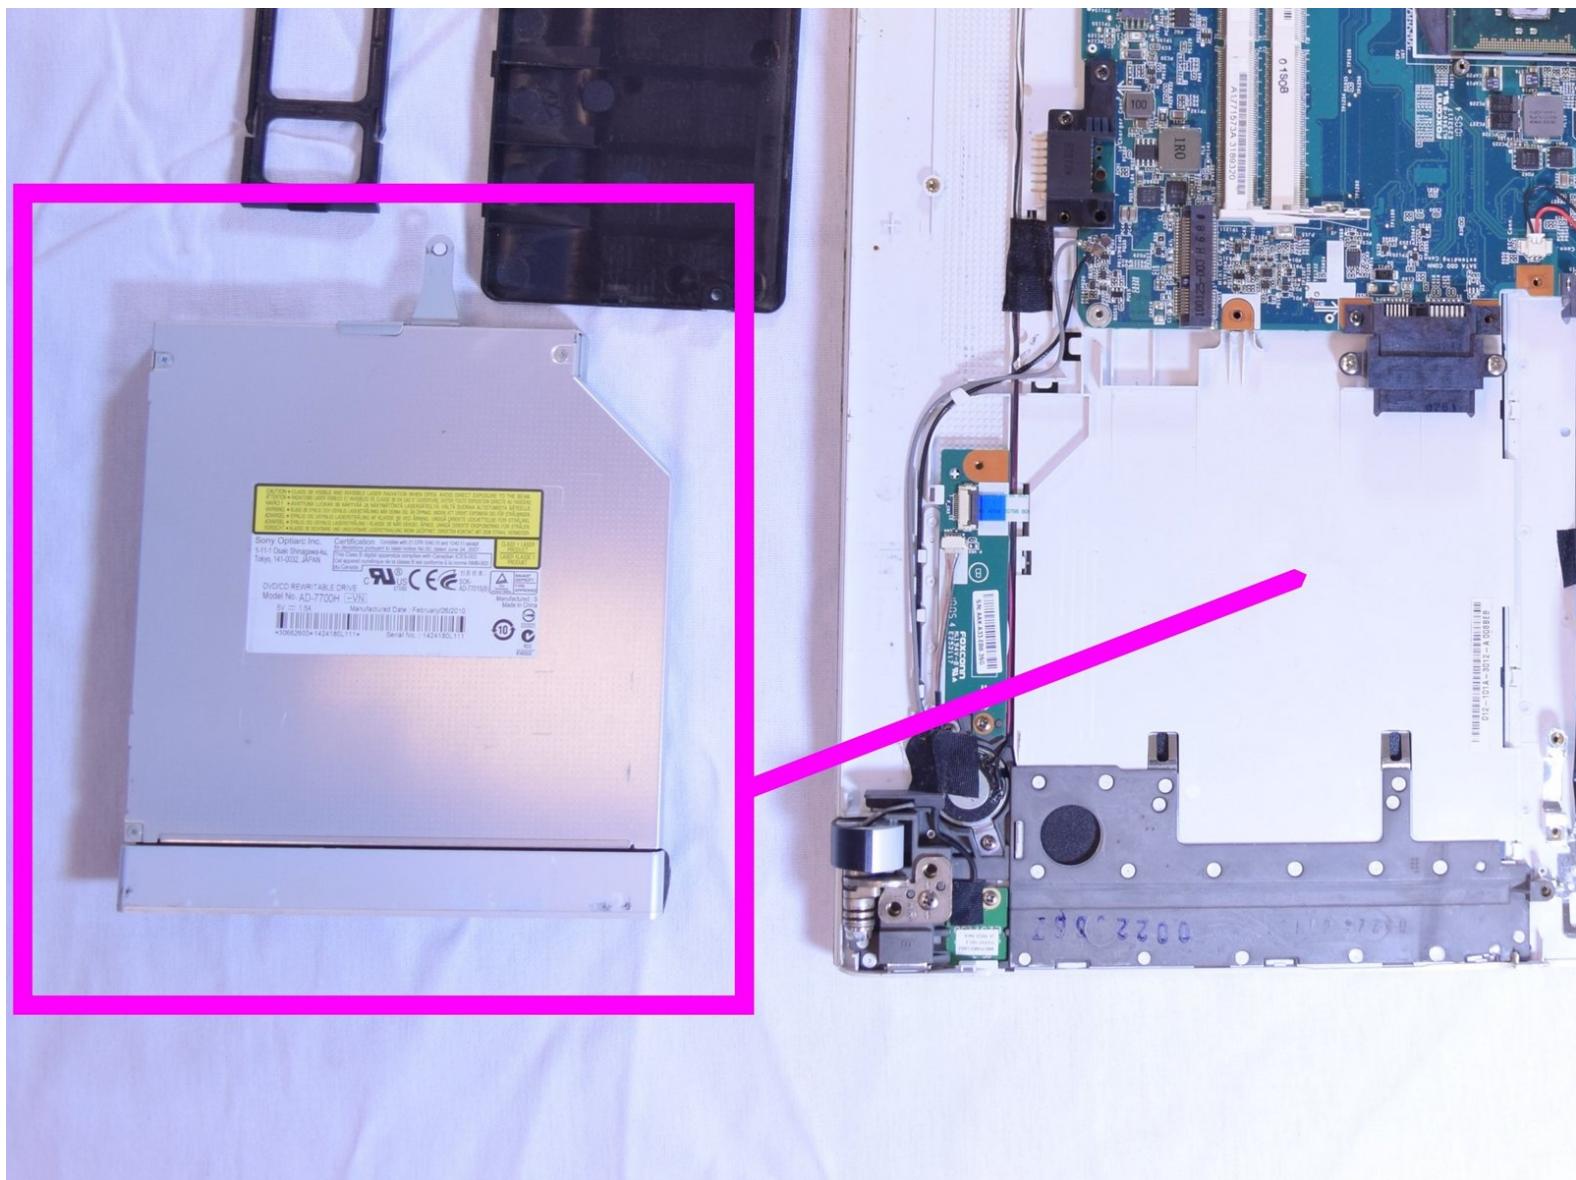

Sony Vaio PCG-71312I DVD Drive Replacement

Short guide covering the removal of the on-board DVD drive.

Written By: Maxine Filcher



 **TOOLS:**

- Phillips #1 Screwdriver (1)


Step 1 — Battery



⚠ Power down and disconnect from power supply.

- Use your finger to unlock the tab by pressing the slide away from you.

Step 2

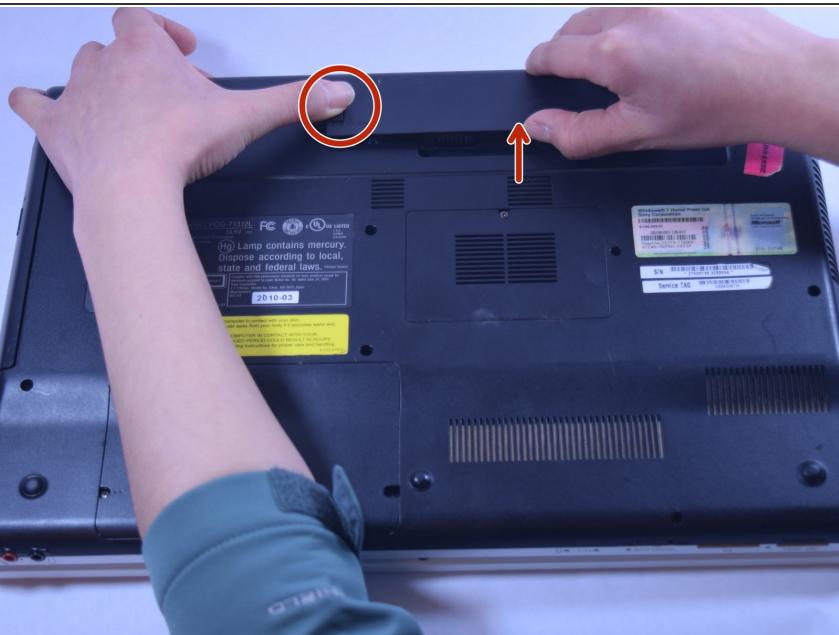


- Hold the release slide, while using thumb to apply upward pressure.

Step 3



- Pull the battery off.

Step 4 — DVD Drive

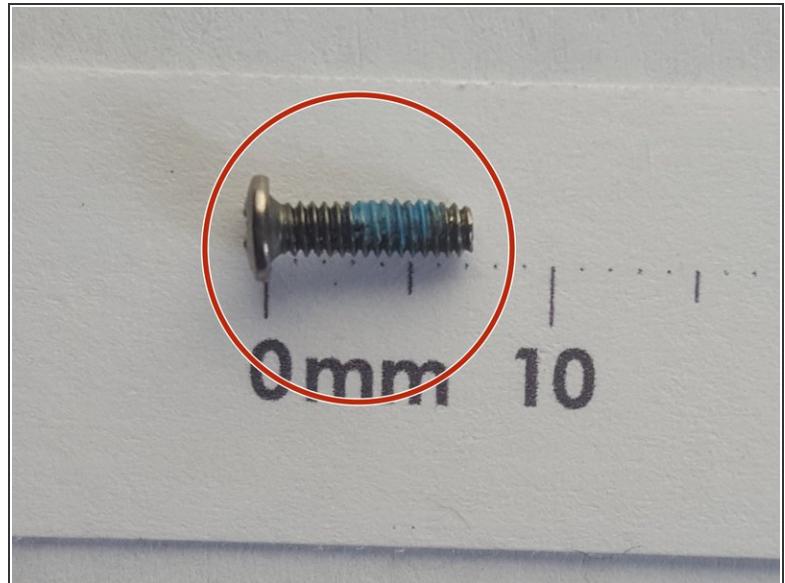

- Remove two 7mm PH01 screws

Step 5



- Grasp the DVD drive's face plate with your fingers, and pull out.

To reassemble your device, follow these instructions in reverse order.