




Sony Vaio PCG-71312I Keyboard Replacement

Short guide to replace a non-functioning keyboard.

Written By: Maxine Filcher

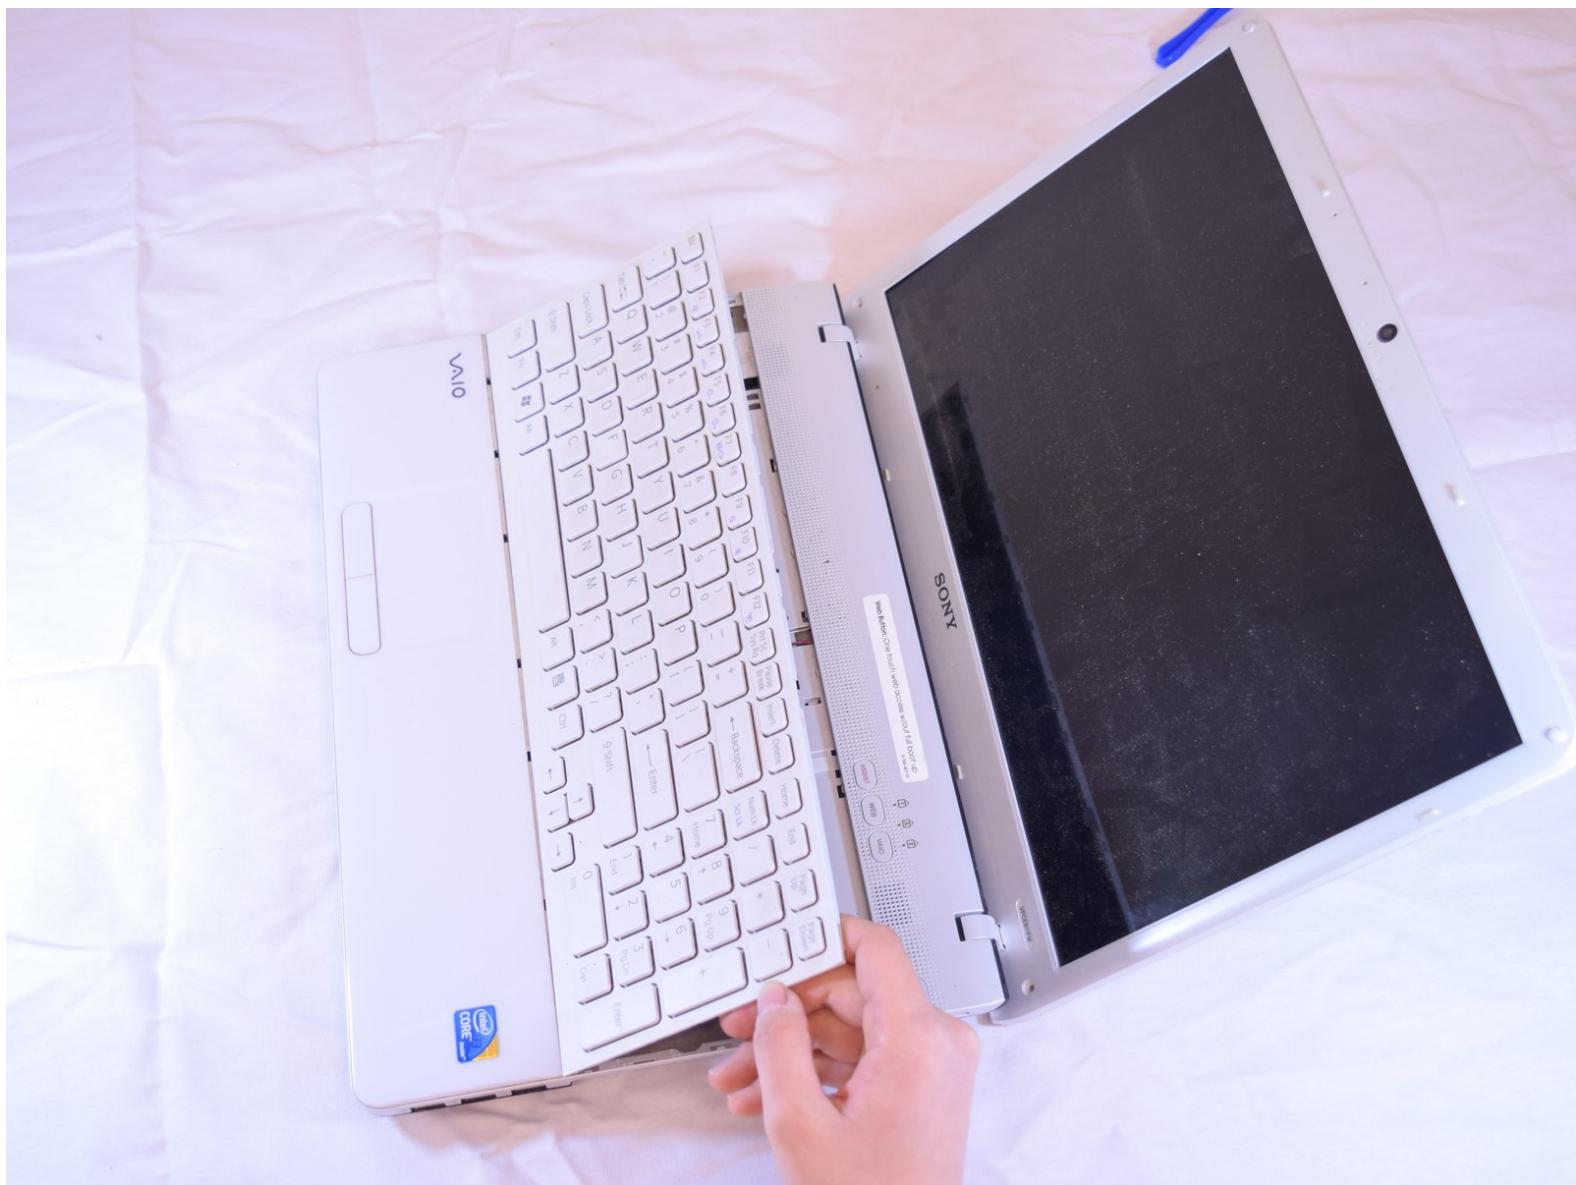

INTRODUCTION

Outline what you are going to teach someone how to do.

TOOLS:

- Phillips #1 Screwdriver (1)
- iFixit Opening Tools (1)

PARTS:

- keyboard panel (1)


Step 1 — Battery



⚠ Power down and disconnect from power supply.

- Use your finger to unlock the tab by pressing the slide away from you.

Step 2

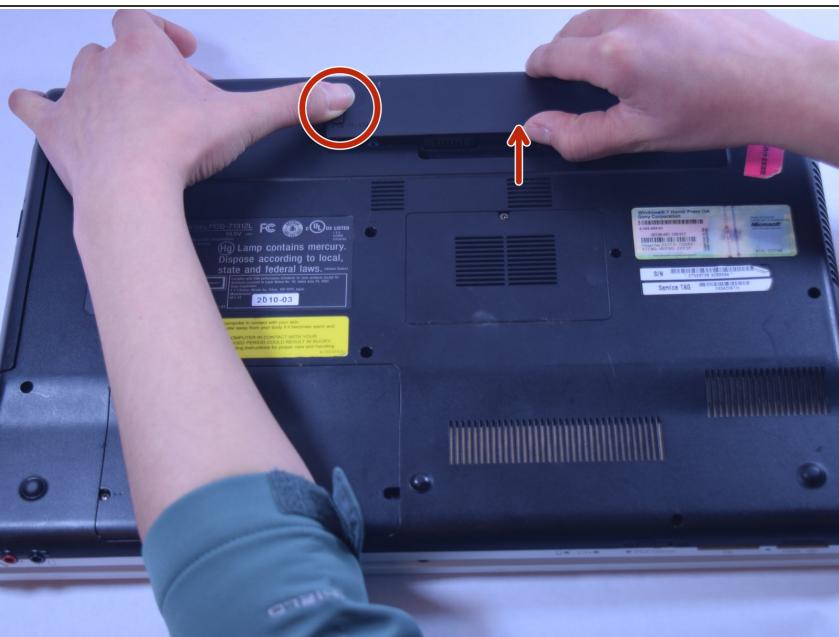


- Hold the release slide, while using thumb to apply upward pressure.

Step 3



- Pull the battery off.

Step 4 — DVD Drive

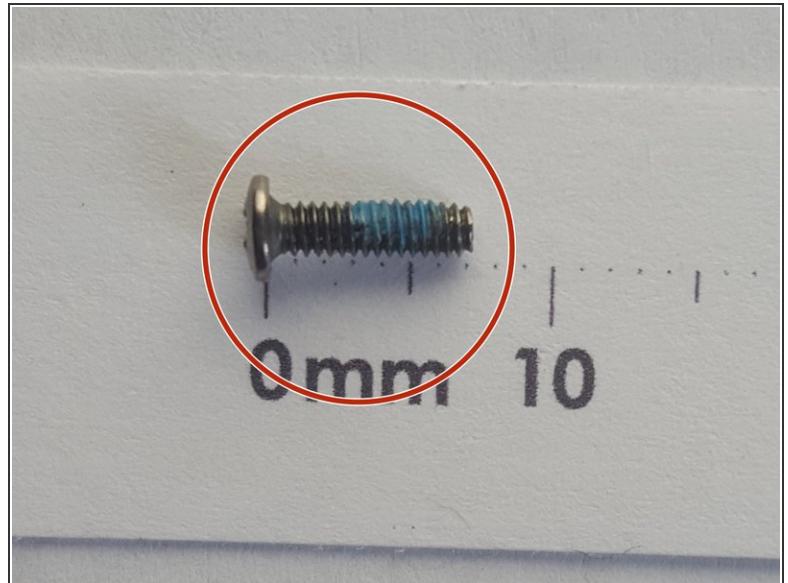


- Remove two 7mm PH01 screws

Step 5




- Grasp the DVD drive's face plate with your fingers, and pull out.

Step 6 — Keyboard

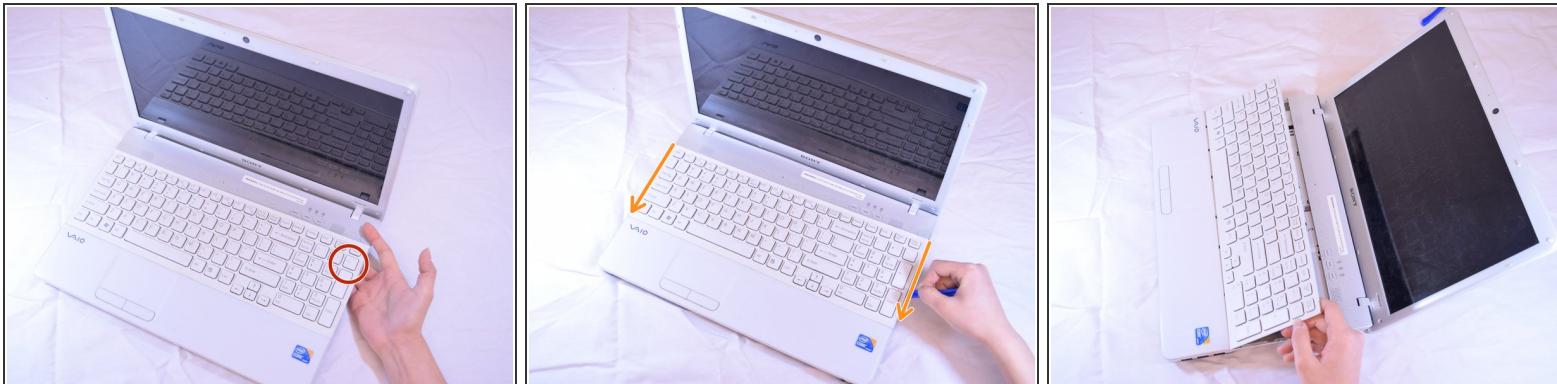

- Within the DVD drive compartment, press on the hole to push the keyboard out of its placement.
- The keyboard may need to be loosened on its edges with a plastic spudger.

Step 7

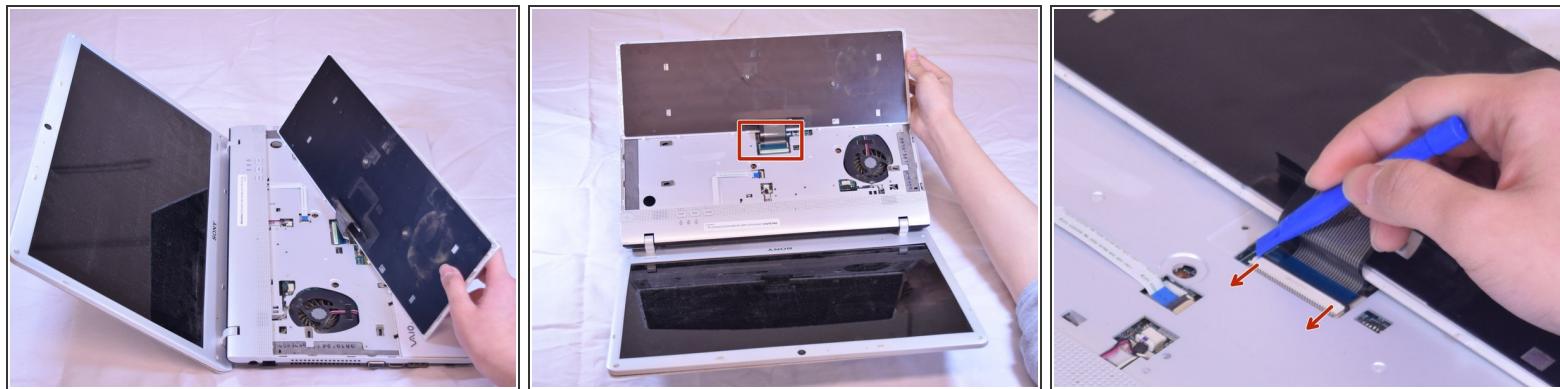

⚠ Carefully pull the keyboard back to expose ribbon connector.

- Using a spudger, or your finger tips, carefully slide the the ribbon keeper open.

To reassemble your device, follow these instructions in reverse order.