



Sony Vaio PCG-71713L Hard Drive Replacement

The hard drive is replaced due to malfunctions and/or defects.

Written By: Eric Martinez




INTRODUCTION

Here you will learn how to replace the hard drive on a Sony Vaio PCG-71713L Laptop.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [Anti-Static Wrist Strap](#) (1)
Use this to ground yourself to a piece of metal on the device. Failure to use this may end up short circuiting the device.
- [Heavy-Duty Spudger](#) (1)

Step 1 — Hard Drive

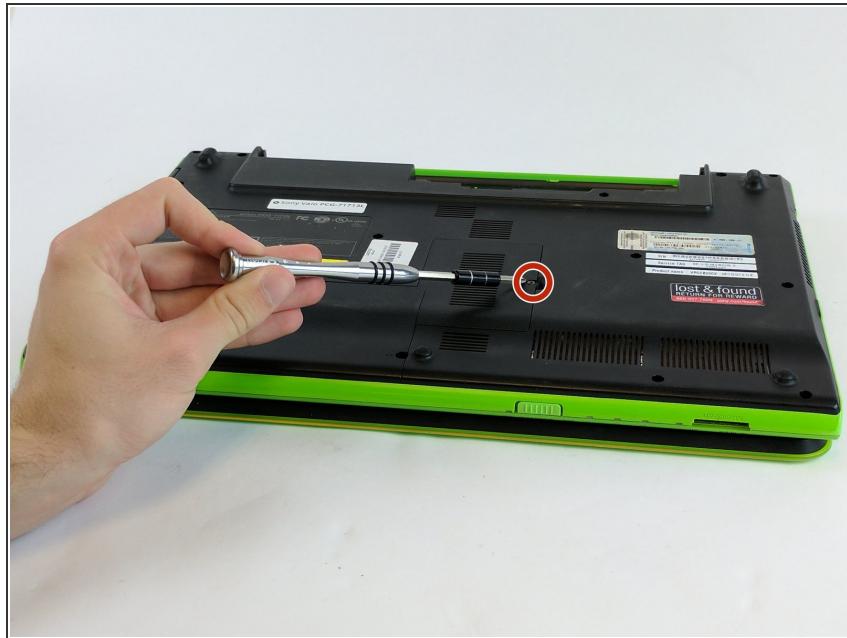


- First remove screws from the plastic cover on the bottom of the device using a Phillips head #1 screw driver.

Step 2



- Remove the screws that hold the hard drives metal tray in place. Use a spudger (as seen in the photo) to lift up the hard drive's metal tray.

Step 3

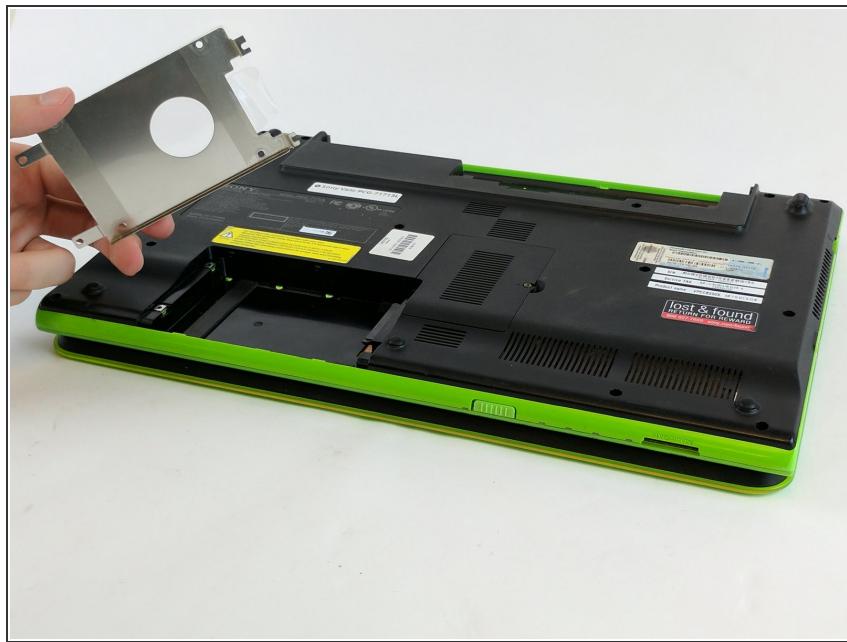

- Remove the metal tray and the hard drive which is attached to it.

To reassemble your device, follow these instructions in reverse order.