



Sony Vaio PCG-7184L (VGN-NW240F) Battery Replacement

This guide will go through the necessary steps to remove the Vaio PCG-7184L battery.

Written By: Brian Luu



This document was generated on 2019-09-17 07:39:14 PM (MST).

INTRODUCTION

The battery of the Vaio PCG-7184L is on the underside on the laptop. The removal of the battery is an important step that should be taken for any other repair, displacement, or dis-assembly.

Step 1 — Battery




- Power off the laptop.
- Unplug the charging cable and any other cables plugged into the laptop.

⚠ Failure to remove or unplug any cables could result in electric shock.


- Turn the laptop over so that the back panel is facing upwards.

Step 2

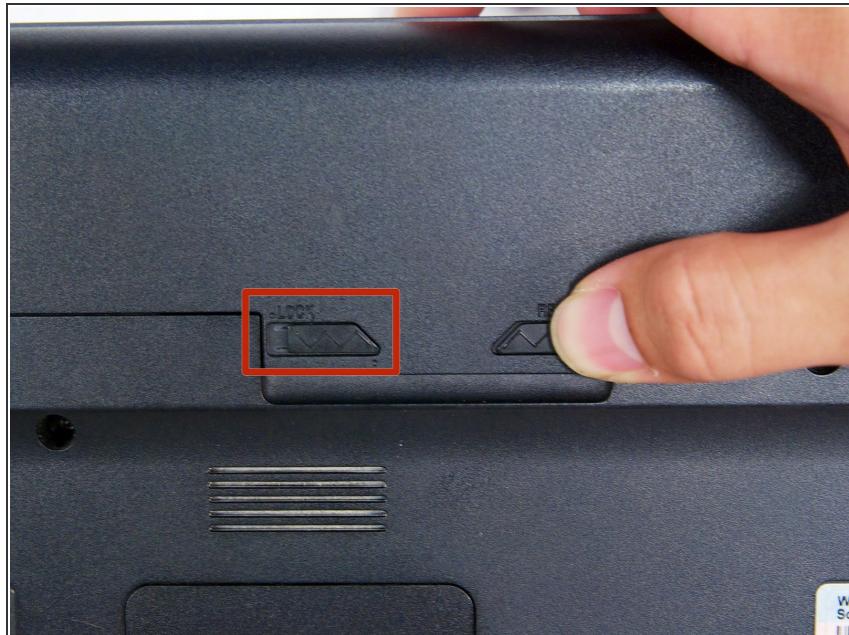

- Locate two switches above the battery that lock it into place.
- Push the left-hand switch, that says "lock" above it, so that it is unlocked.

Step 3

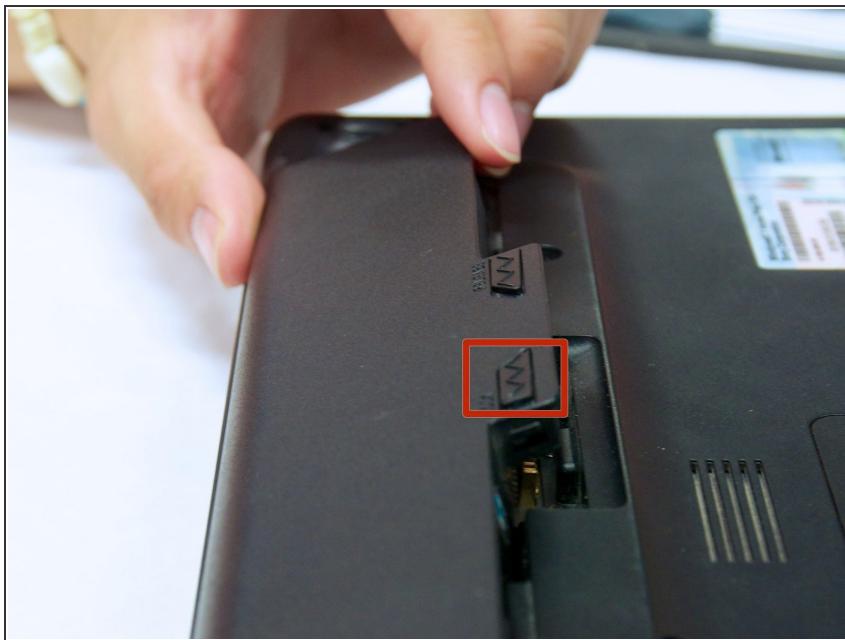

- Push and hold the right-hand switch, which says "release" above it, and lift the battery up out of its place.

To reassemble your battery, line up the battery and slide it in until the second lock (left hand switch) clicks. Then lock the 1st switch.