


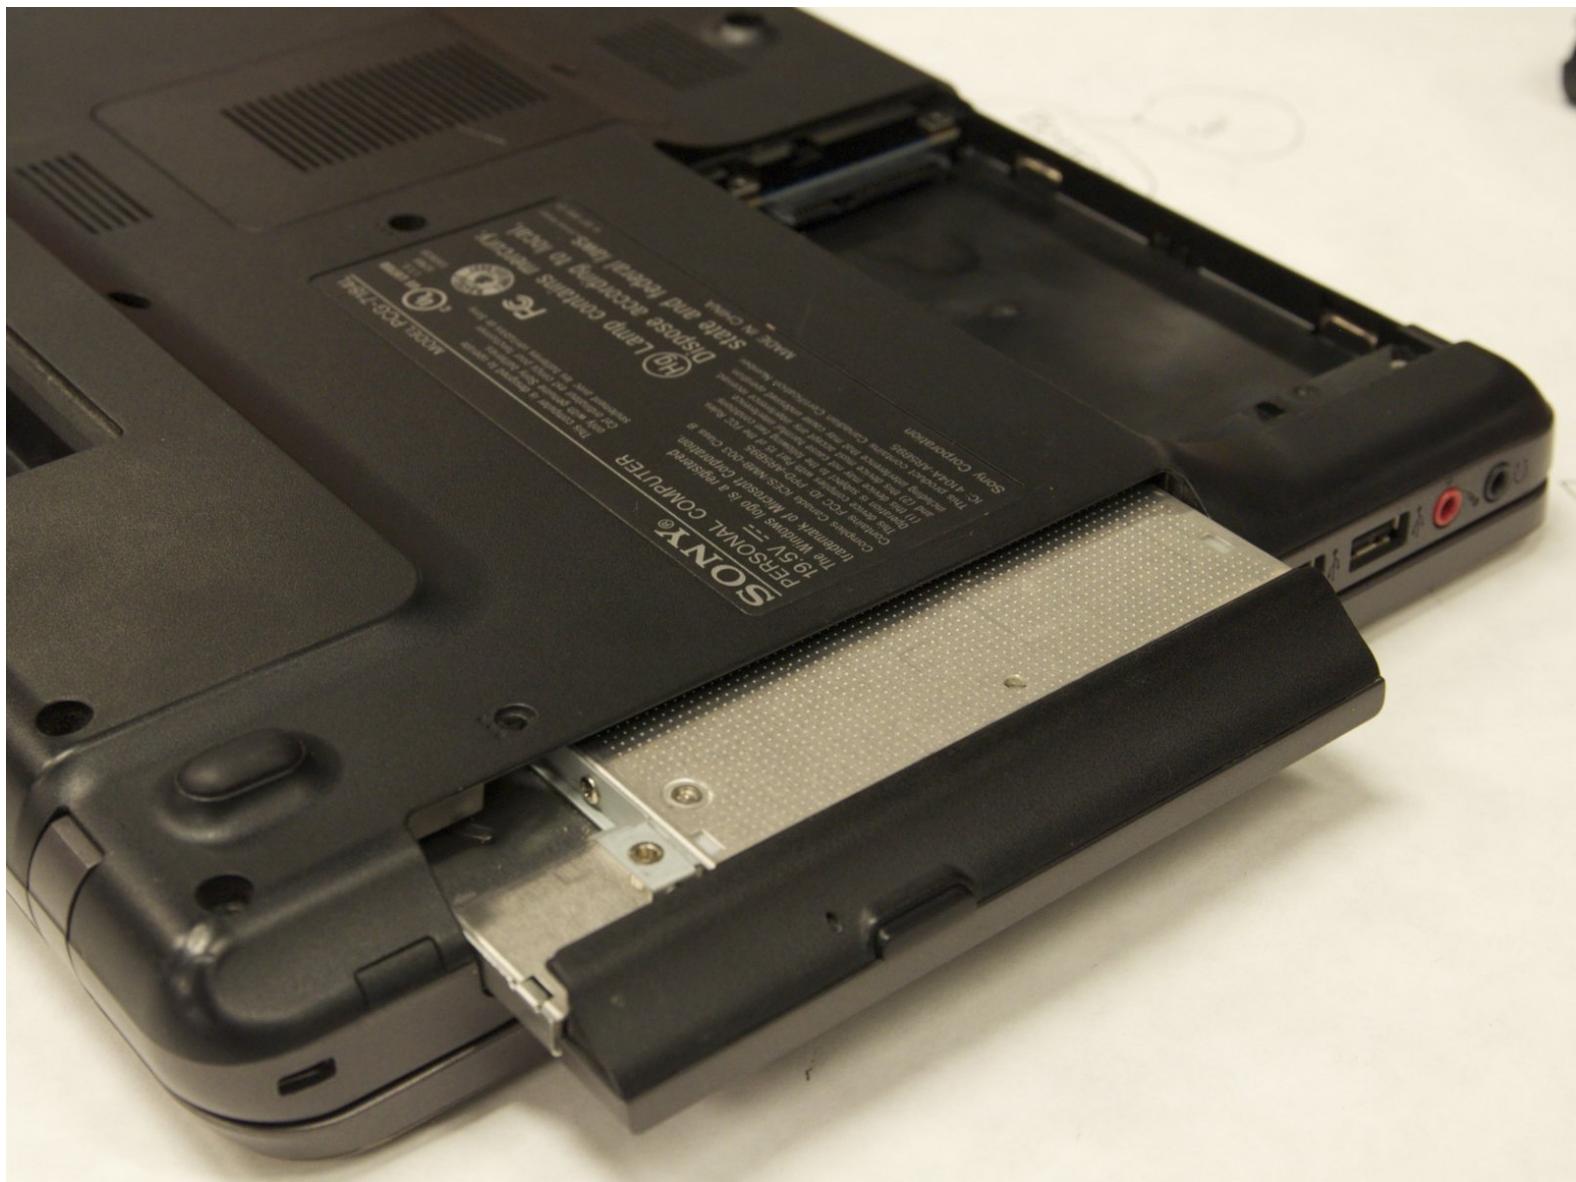

# Sony Vaio PCG-7184L (VGN-NW240F) Optical Drive Replacement

This guide will help with the replacement of the Sony Vaio PCG-7184L's optical drive.

Written By: Kevin McGowan



This document was generated on 2019-09-18 05:43:52 AM (MST).

## INTRODUCTION

This guide will assist with the replacement of the Sony Vaio PCG-7184L's optical drive. Please review the [Troubleshooting Guide](#) before replacing your optical drive.

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)

## Step 1 — Optical Drive



- Locate and unscrew the two highlighted 8 mm Phillips #1 screws.
- There will be three dots next to the desired screws*

## Step 2



- Grip the cover of the optical drive and slide it out.
- !** If it does not come out, do not force it. Double check to make sure the screws are entirely removed.

To reassemble your device, follow these instructions in reverse order.