



Sony Vaio PCG-71C11L Battery Replacement

This guide will show and demonstrate how to remove and replace the battery in a Sony Vaio PCG-71C11L laptop.

Written By: charles cochran



INTRODUCTION

This guide will show and demonstrate how to remove and replace the battery in a Sony Vaio PCG-71C11L laptop.

TOOLS:


- Fingers (1)

Step 1 — Battery



- Slide the switch with the word "lock" above it to the unlocked position.

Step 2

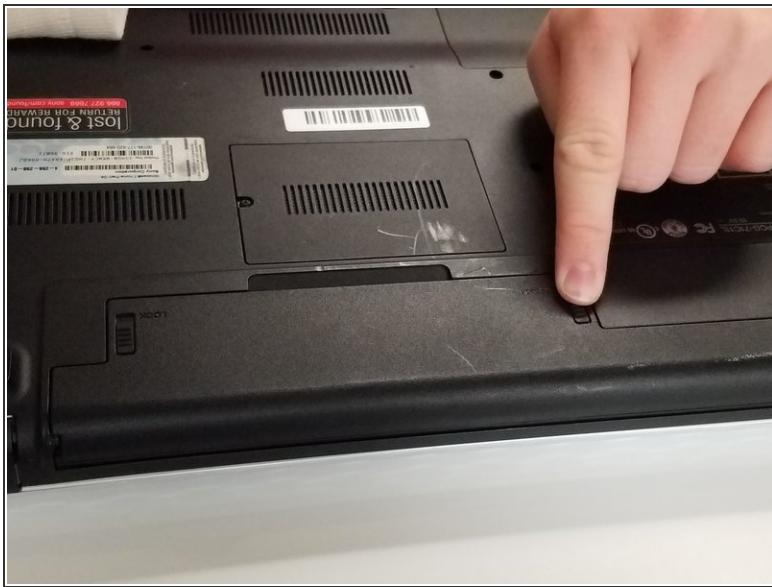

- Hold the switch that says "Release" to the open position while pulling up on the side of the battery with the groove. Once the battery is flipped up, it can easily be removed.

To reassemble your device, follow these instructions in reverse order.