



Sony Vaio PCG-81312L Optical Drive Replacement

This guide will show you how to remove the optical drive in order to replace it.

Written By: Alejandro Lopez



INTRODUCTION

If you are experiencing trouble with your optical drive, you may need to use this guide in order to replace it. This is a beginner level process. There is no background knowledge or special requirements you need in order to successfully replace your optical drive.

TOOLS:

- Phillips #0 Screwdriver (1)

Step 1 — Optical Drive




- Remove the first of two screws located at the marker in the photo.

Step 2



- Remove the second of the two screws located at the marker in the photo.

Step 3

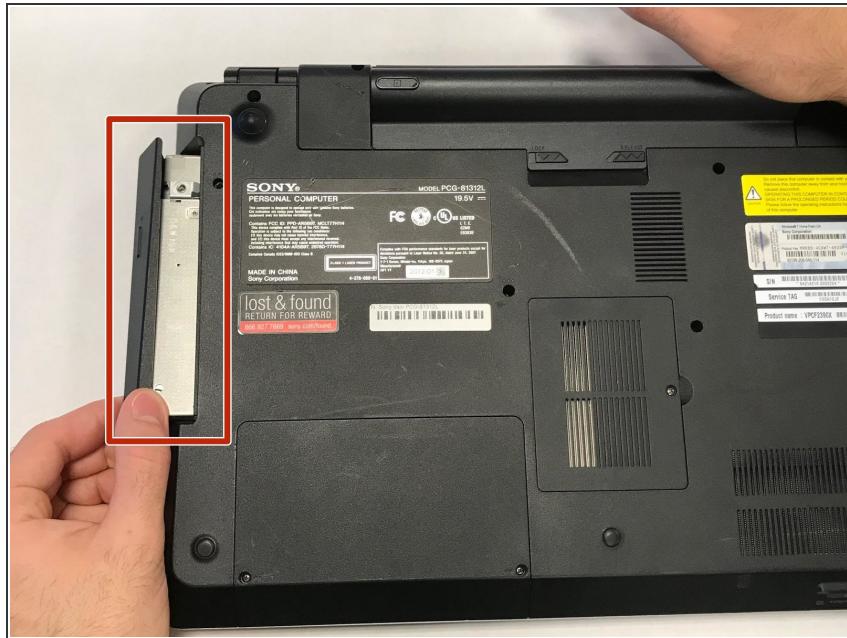

- Grab and slide out the tray from the side of the laptop after both screws have been removed.

Step 4



- Slide in new CD drive and repeat steps 2 and 1 in reverse to screw the new drive down.

To reassemble your device, follow these instructions in reverse order.