


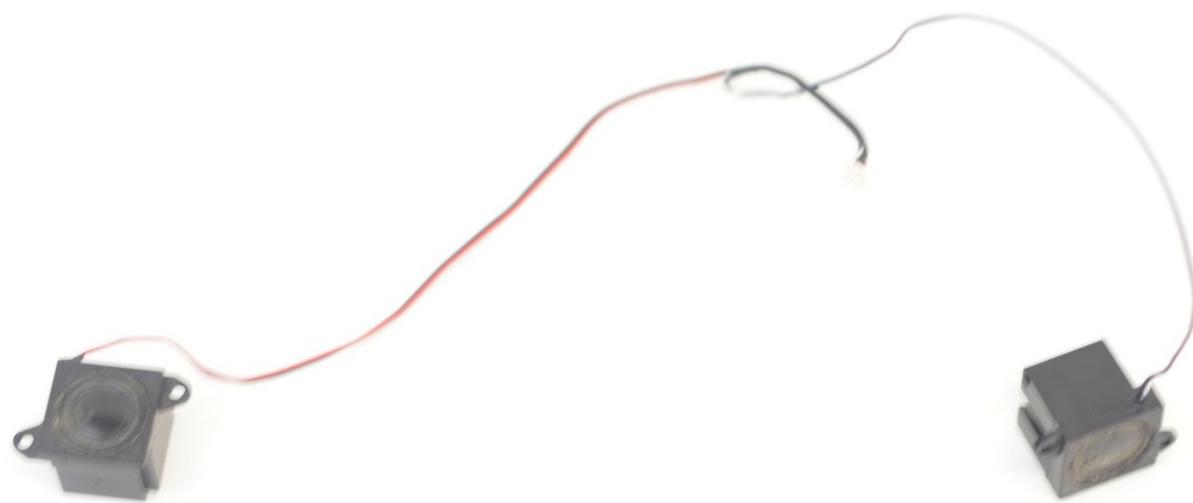

Sony Vaio SVE151G11L Speaker Replacement

This is a comprehensive guide for replacing the internal speakers of the Sony Vaio SVE151G11L laptop.

Written By: Alex Theg



INTRODUCTION

The speakers allow the laptop to play sounds such as music. This guide shows the steps to remove the speakers for repair or replacement.

TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [Phillips #0 Screwdriver](#) (1)

Step 1 — Battery



- Turn the laptop over so its underside is facing upwards and visible.

Step 2



- Standing so that the barcode and warning labels are upright and legible, push the **left tab** up and away from yourself.

Step 3



- Standing so that the barcode and warning labels are upright and legible, push the **right tab** up and away from yourself.

Step 4



- Locate the small gap where the battery and the laptop shell meet. Lift from the gap and rotate the battery up and away from yourself.

Step 5

- Pull battery away from laptop.



Step 6 — Hard Disk Drive

- Flip laptop over so the bottom is facing upwards.



Step 7

- Remove 2 bottom screws in the top right on the HDD cover, with a size P000 screwdriver.




Step 8



- Pop open the cover to the HDD.

Step 9

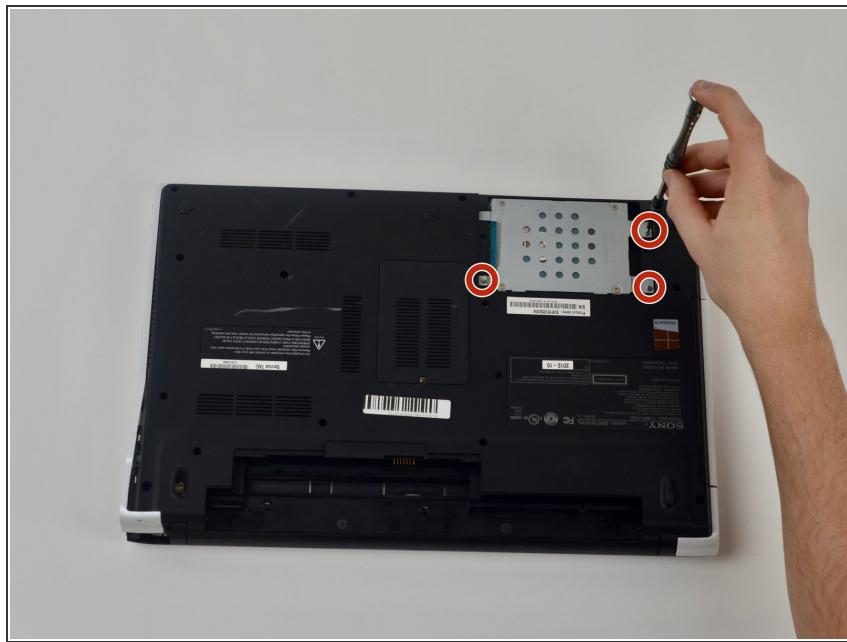


- Remove the screws on the HDD with a Phillips #000 screwdriver.

Step 10




- Pull plastic tab away from the laptop.
- Lift HDD away from laptop.

Step 11 — Speakers

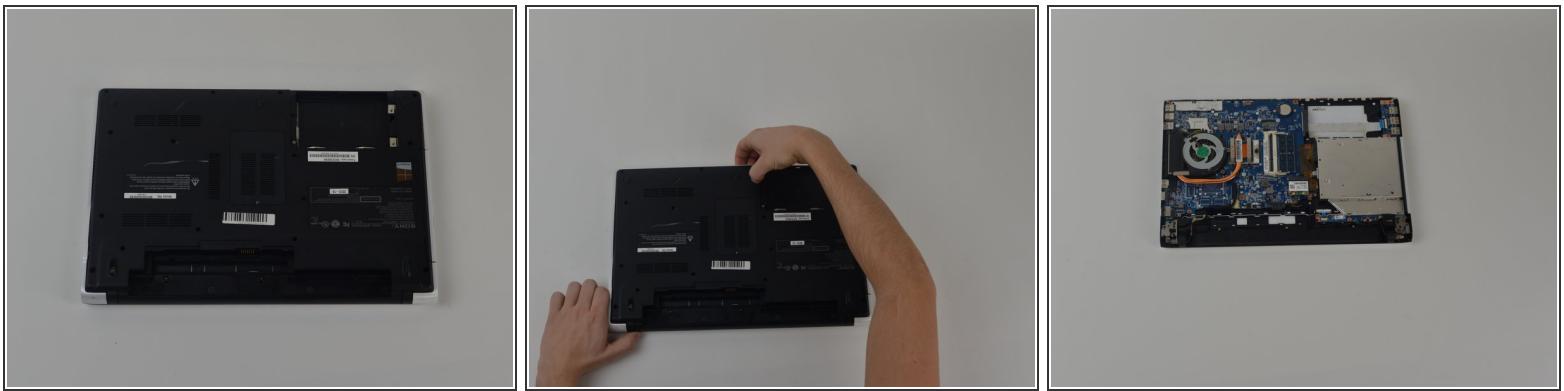


- Remove the back cover.

Step 12

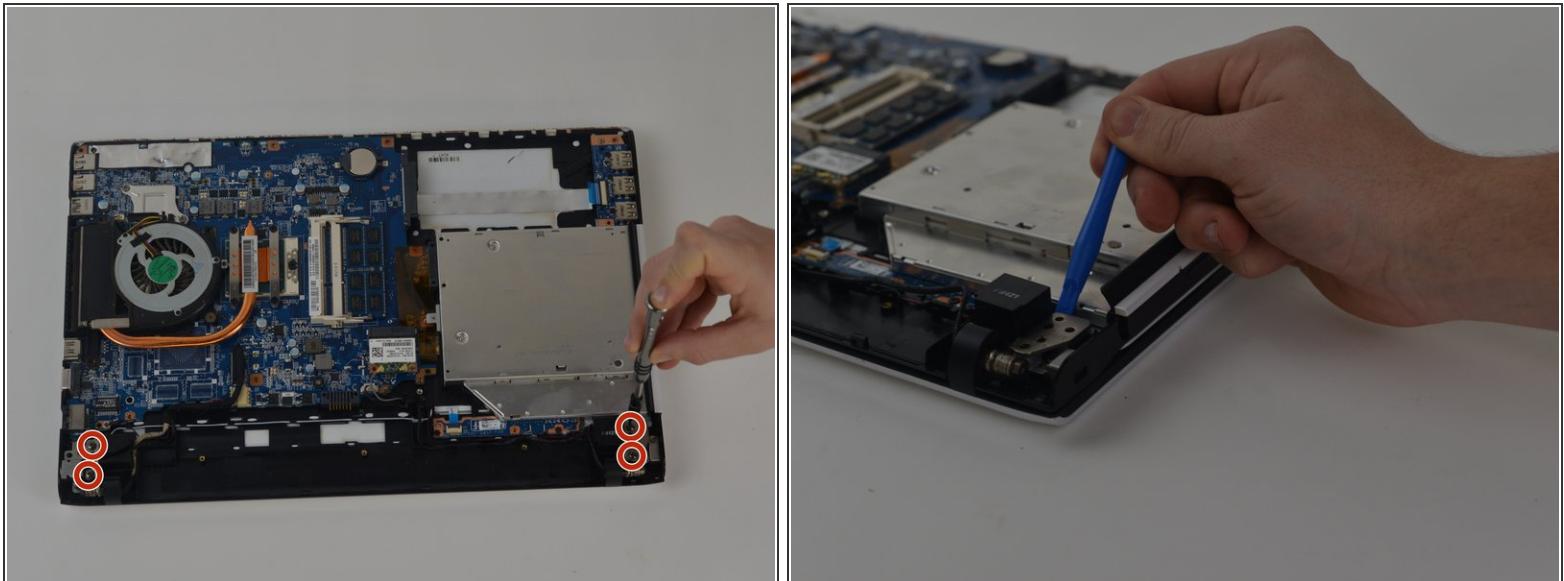


- Remove 4 hinge screws with a Phillips #0 screwdriver.

Step 13

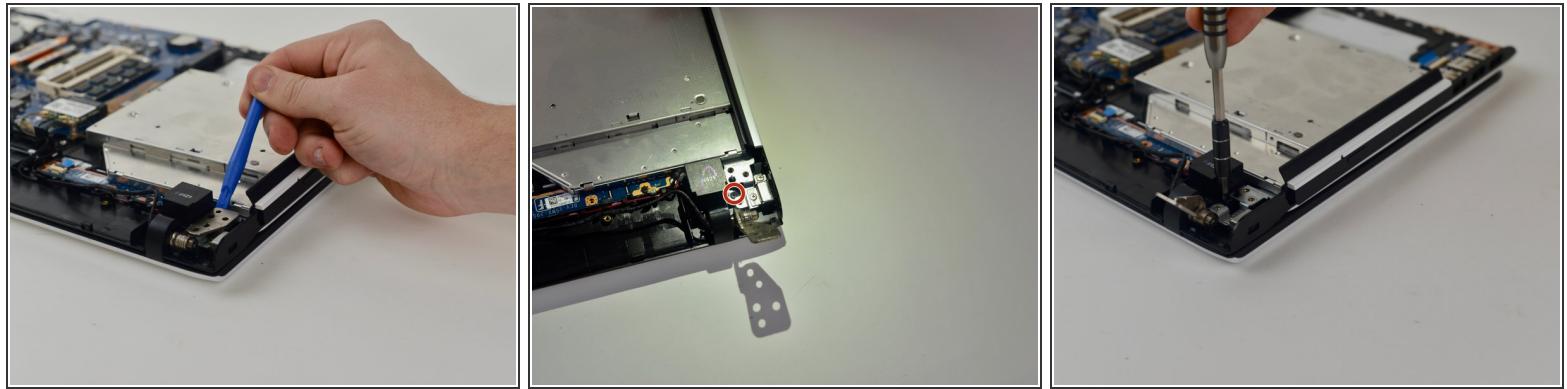


- Pop open hinge.
- Remove black screw size P000.

Step 14

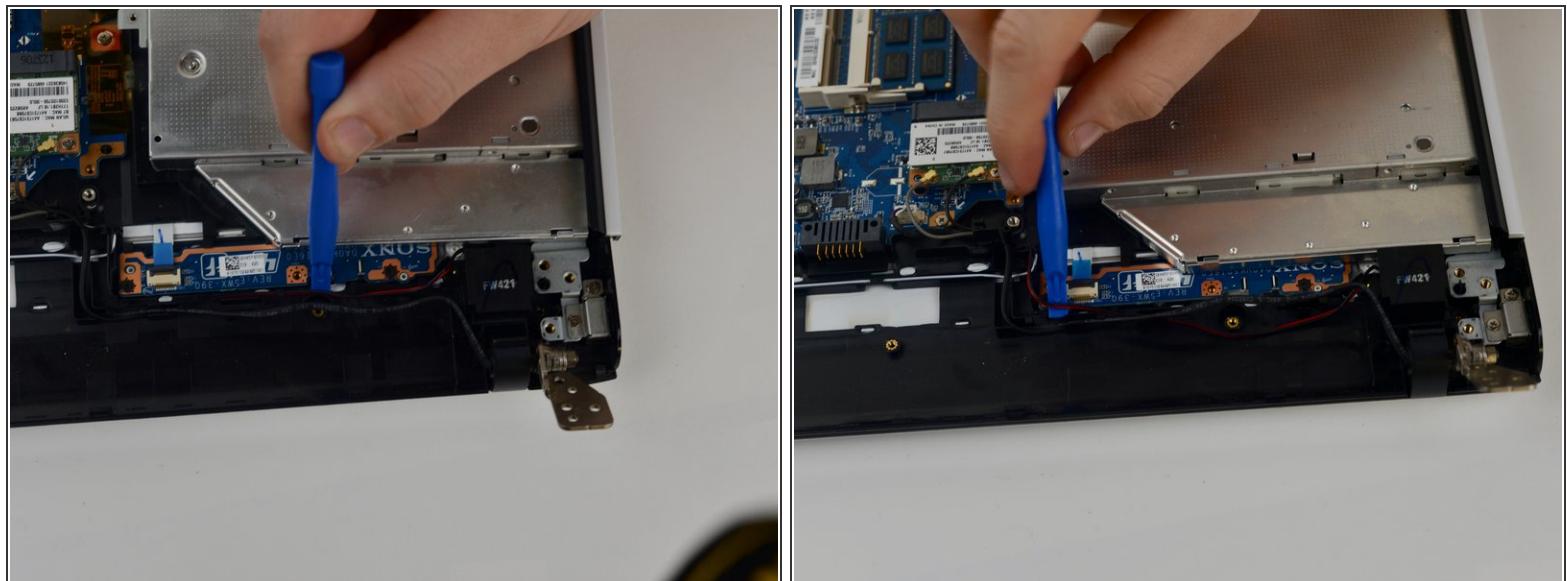


- Remove wiring along its guide.

Step 15

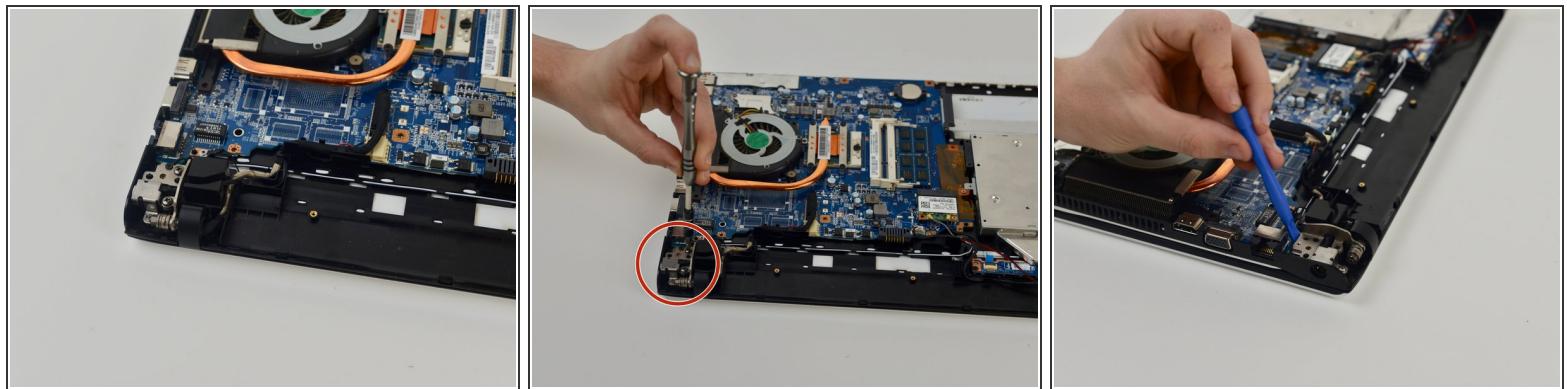


- Remove two hinge screws size P00.
- Pop open hinge.

Step 16

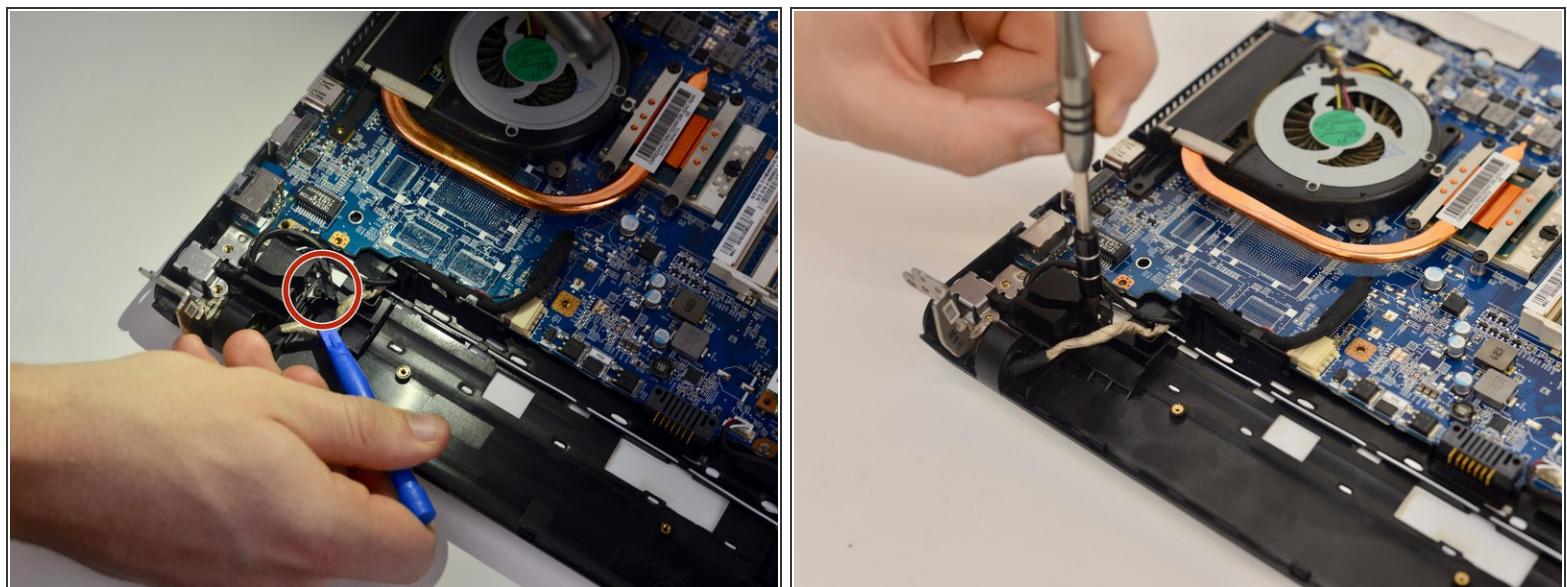


- Remove black screw.

Step 17

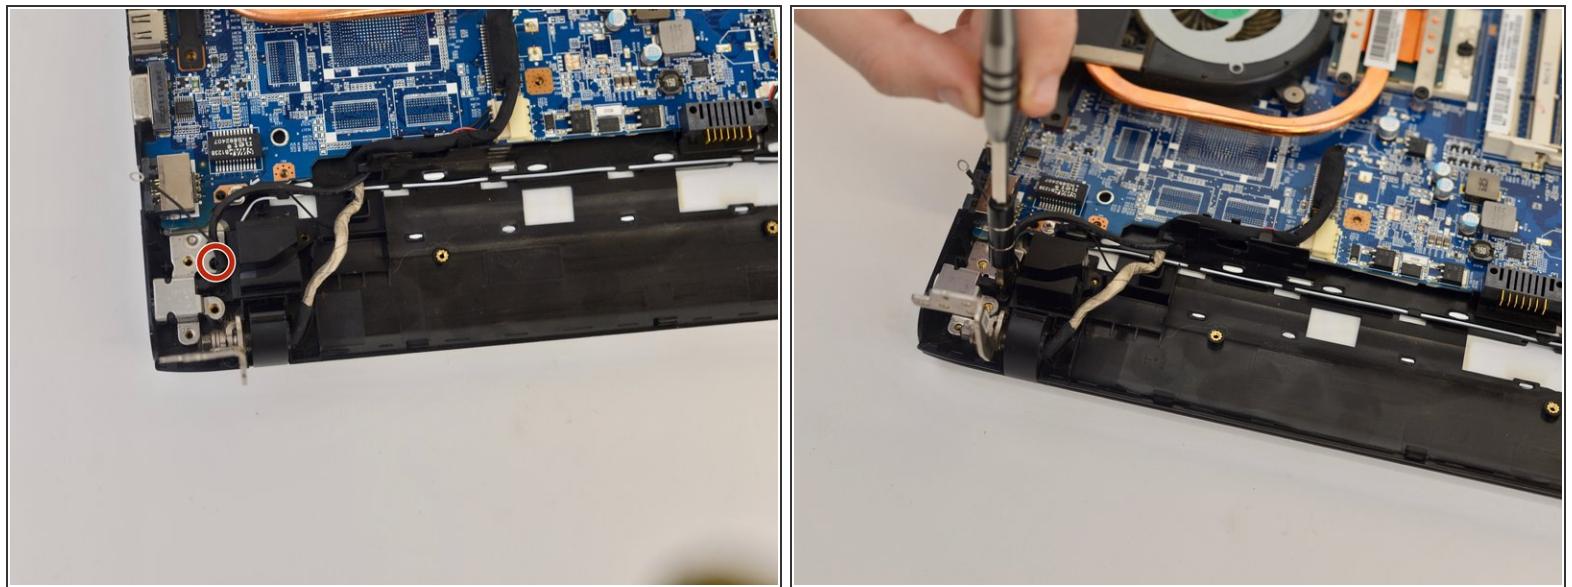


- Remove secondary black screw.

Step 18

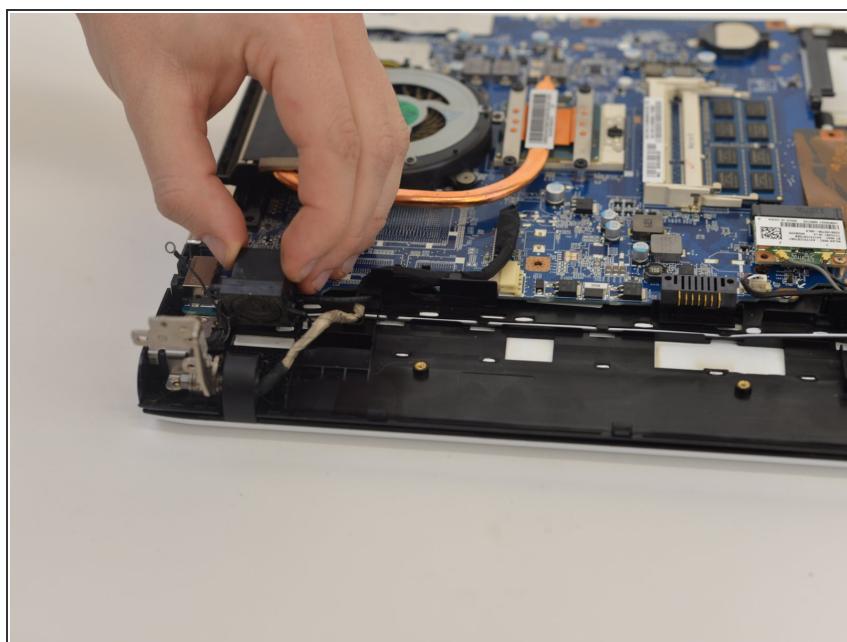

- Remove speaker.

Step 19

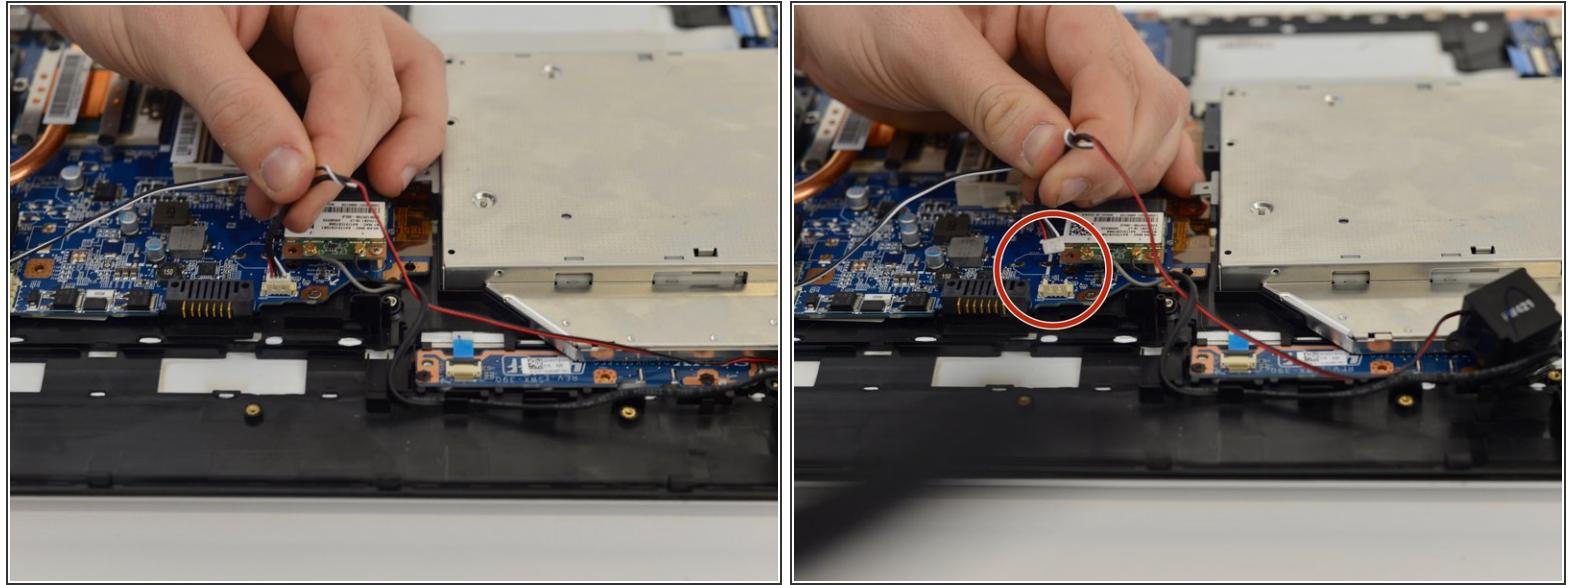

- Follow wire down its wire channel and remove it from the channel.
- Pull up on the connector to disconnect the speakers to the motherboard.

Step 20



- Remove speaker and wire from the laptop.

To reassemble your device, follow these instructions in reverse order.