




Sony Vaio Tap 11 Power Jack Replacement

This guide will assist the user in device power jack removal.

Written By: Alexander Bridges

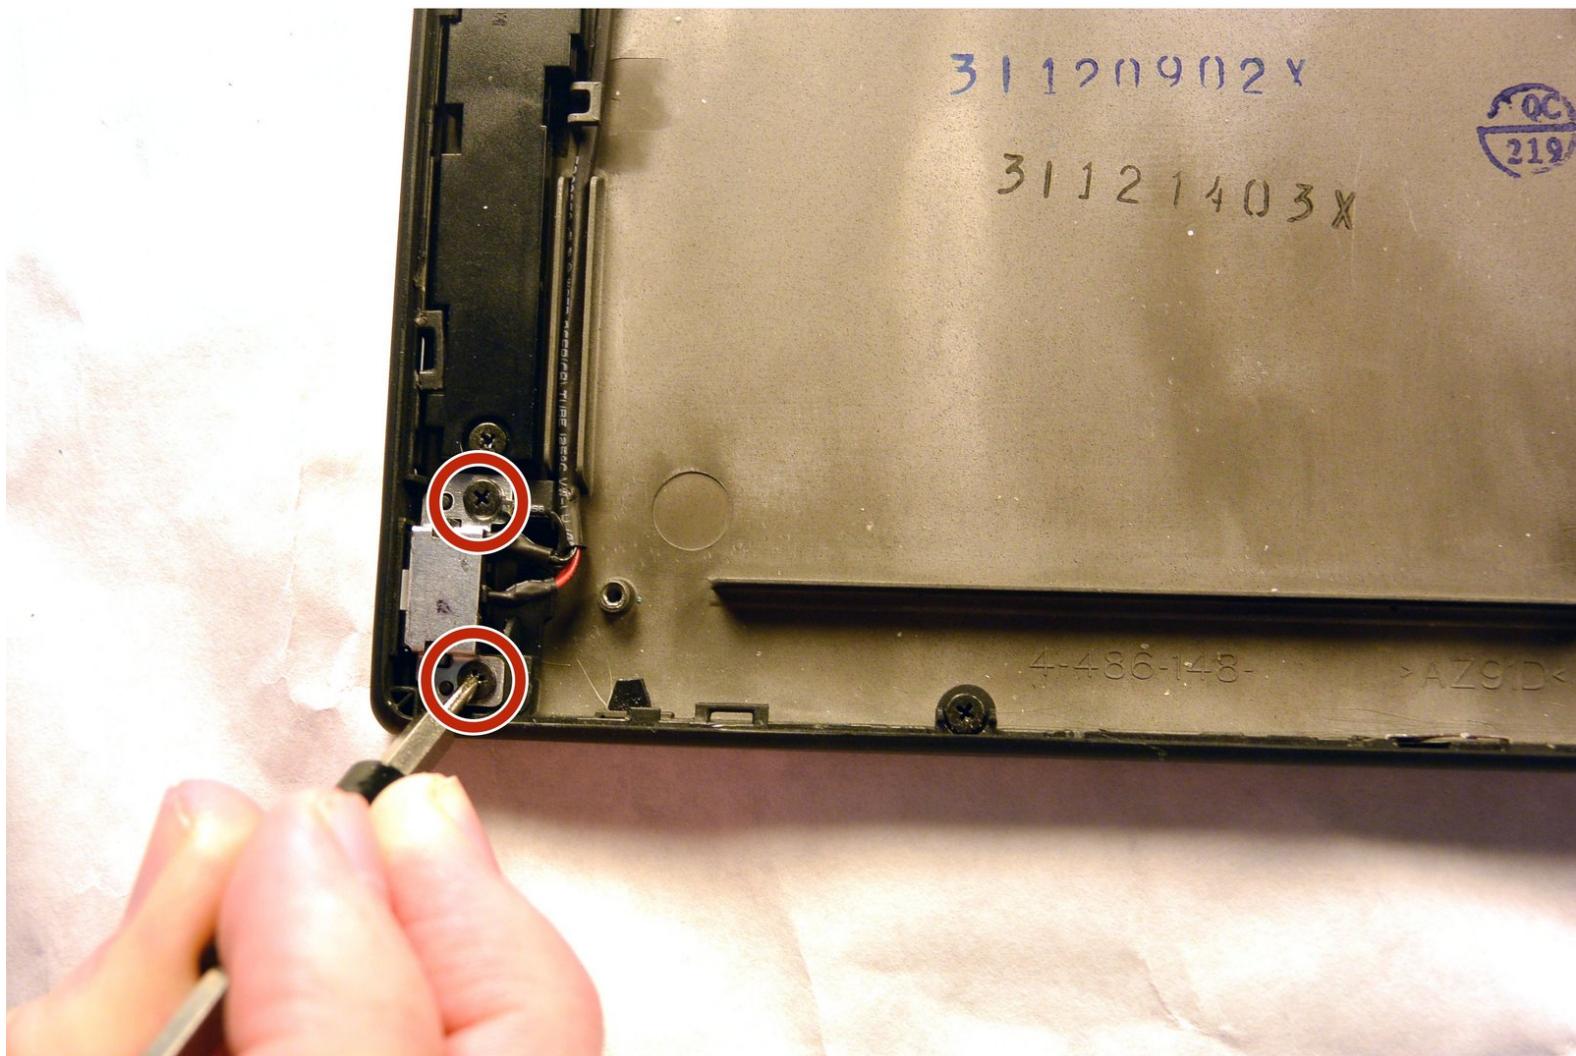

INTRODUCTION

The power plug is one of the most important parts of a laptop or tablet device. Without it, charging the internal battery is impossible!

TOOLS:


- [Phillips #000 Screwdriver](#) (1)
- [Suction Handle](#) (1)

Step 1 — Screen Assembly




- Begin by popping open the HDMI/USB port cover on the left edge.
- Remove the three #000 headed, 3 mm long screws located underneath the port cover.

Step 2

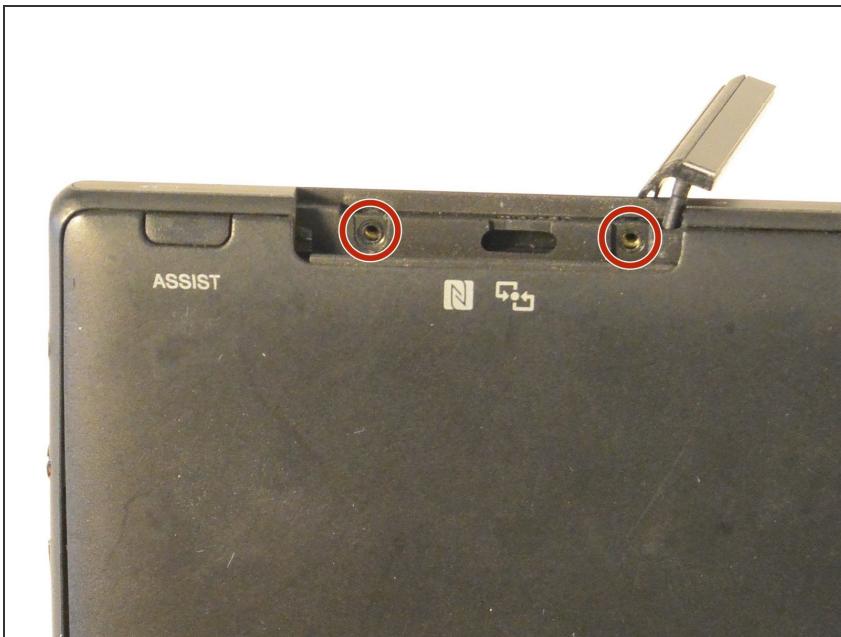

- There are two #000 headed, 3 mm long screws under a similar cover covering the Micro SD slot on the top side of the device.
- Remove the two screws beneath the Micro SD card slot cover.


Step 3

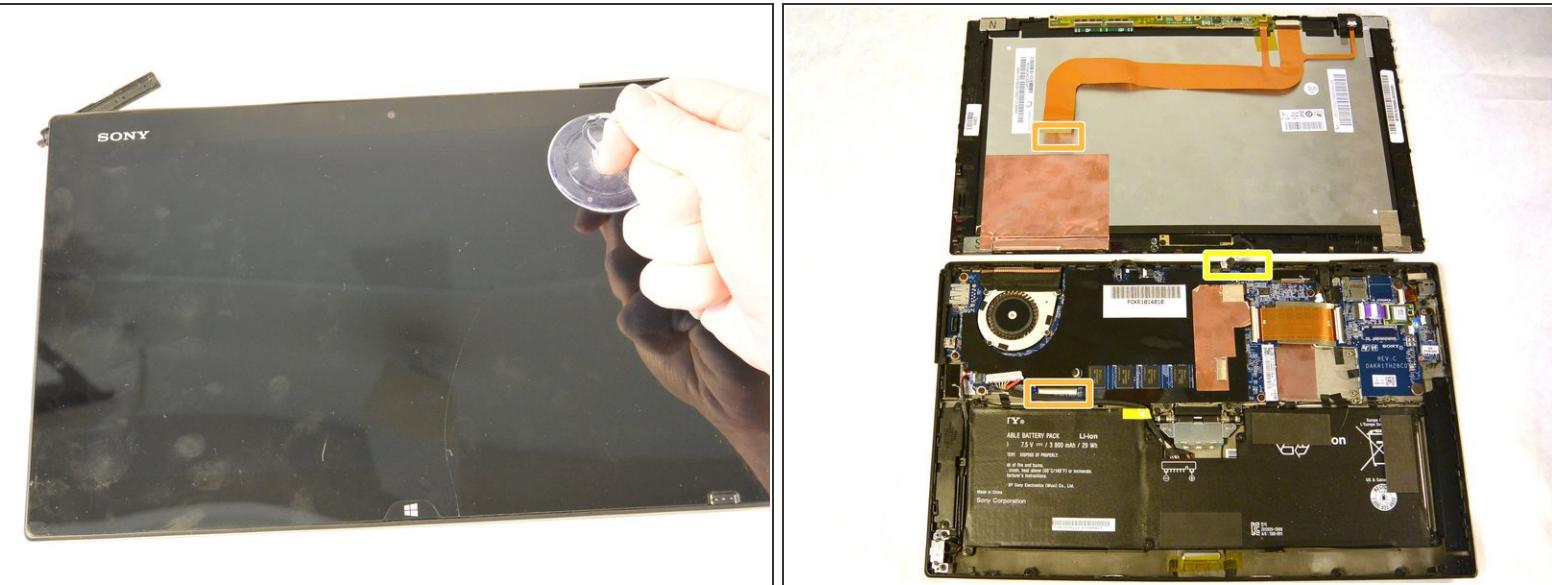

- Attach the suction cup to the top right area of the screen.
- Pull to remove the screen from the rest of the device.


! Watch out for the front camera cable connected to the top middle of the device. The display ribbon cable should just slide out.

Step 4 — Battery

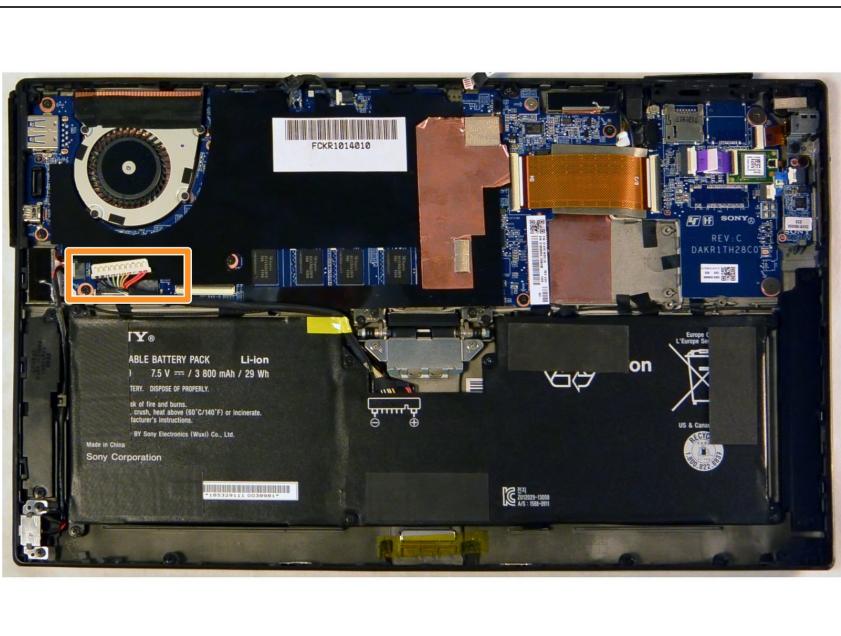


- Disconnect the battery from the motherboard by pulling out the cable below the fan.

Step 5

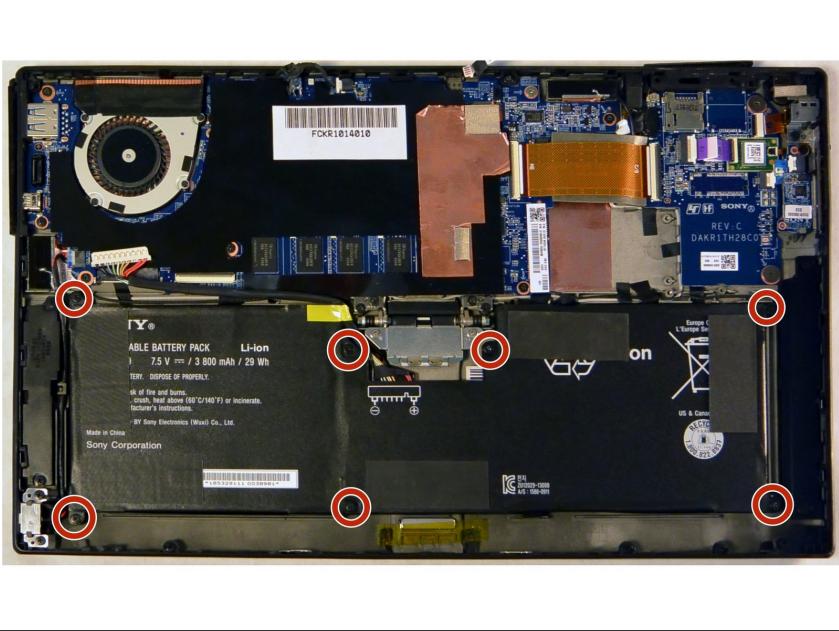


- Remove the seven 3 mm Phillips #000 screws that hold the battery in place.
- Carefully remove the battery from the back assembly.

Step 6 — Power Jack

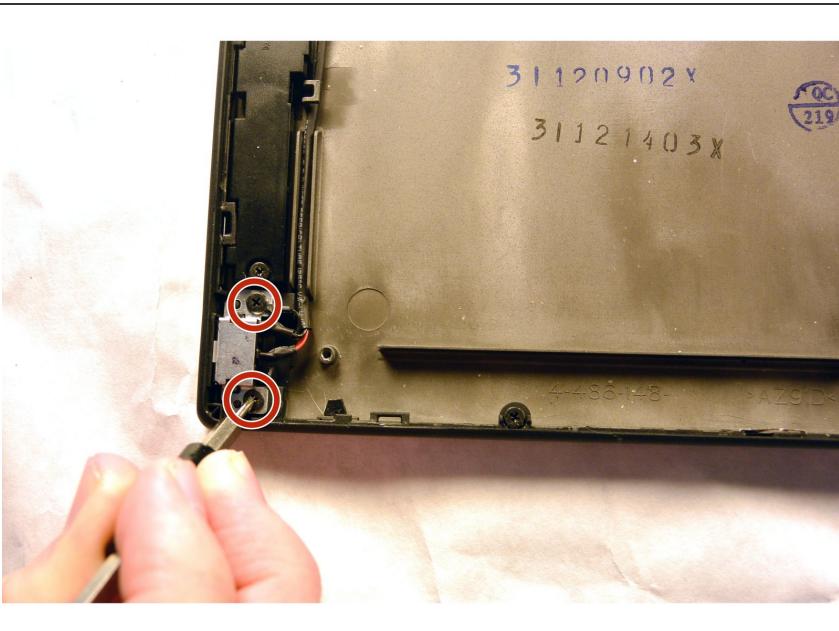


- Remove the two 3mm Phillips #000 screws from the bottom left corner of the device.

Step 7

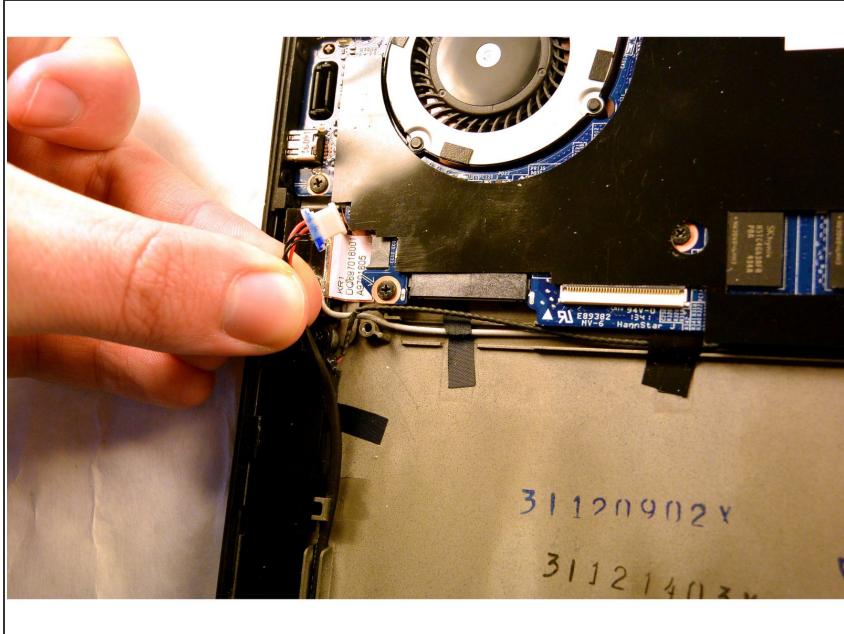

- Unplug the jack from the motherboard.

Step 8

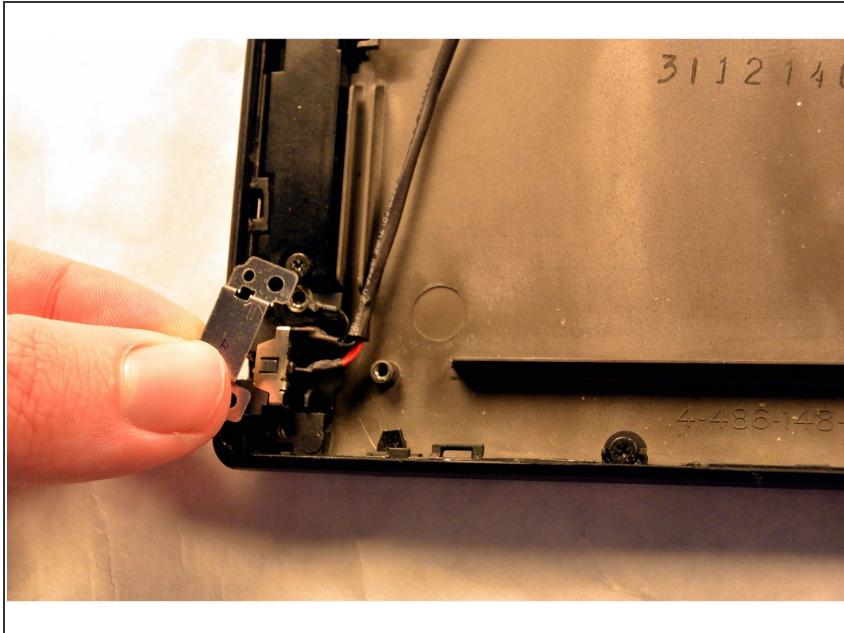

- Remove the metal covering.

Step 9



- Pull out the cable and jack assembly.

To reassemble your device, follow these instructions in reverse order.