


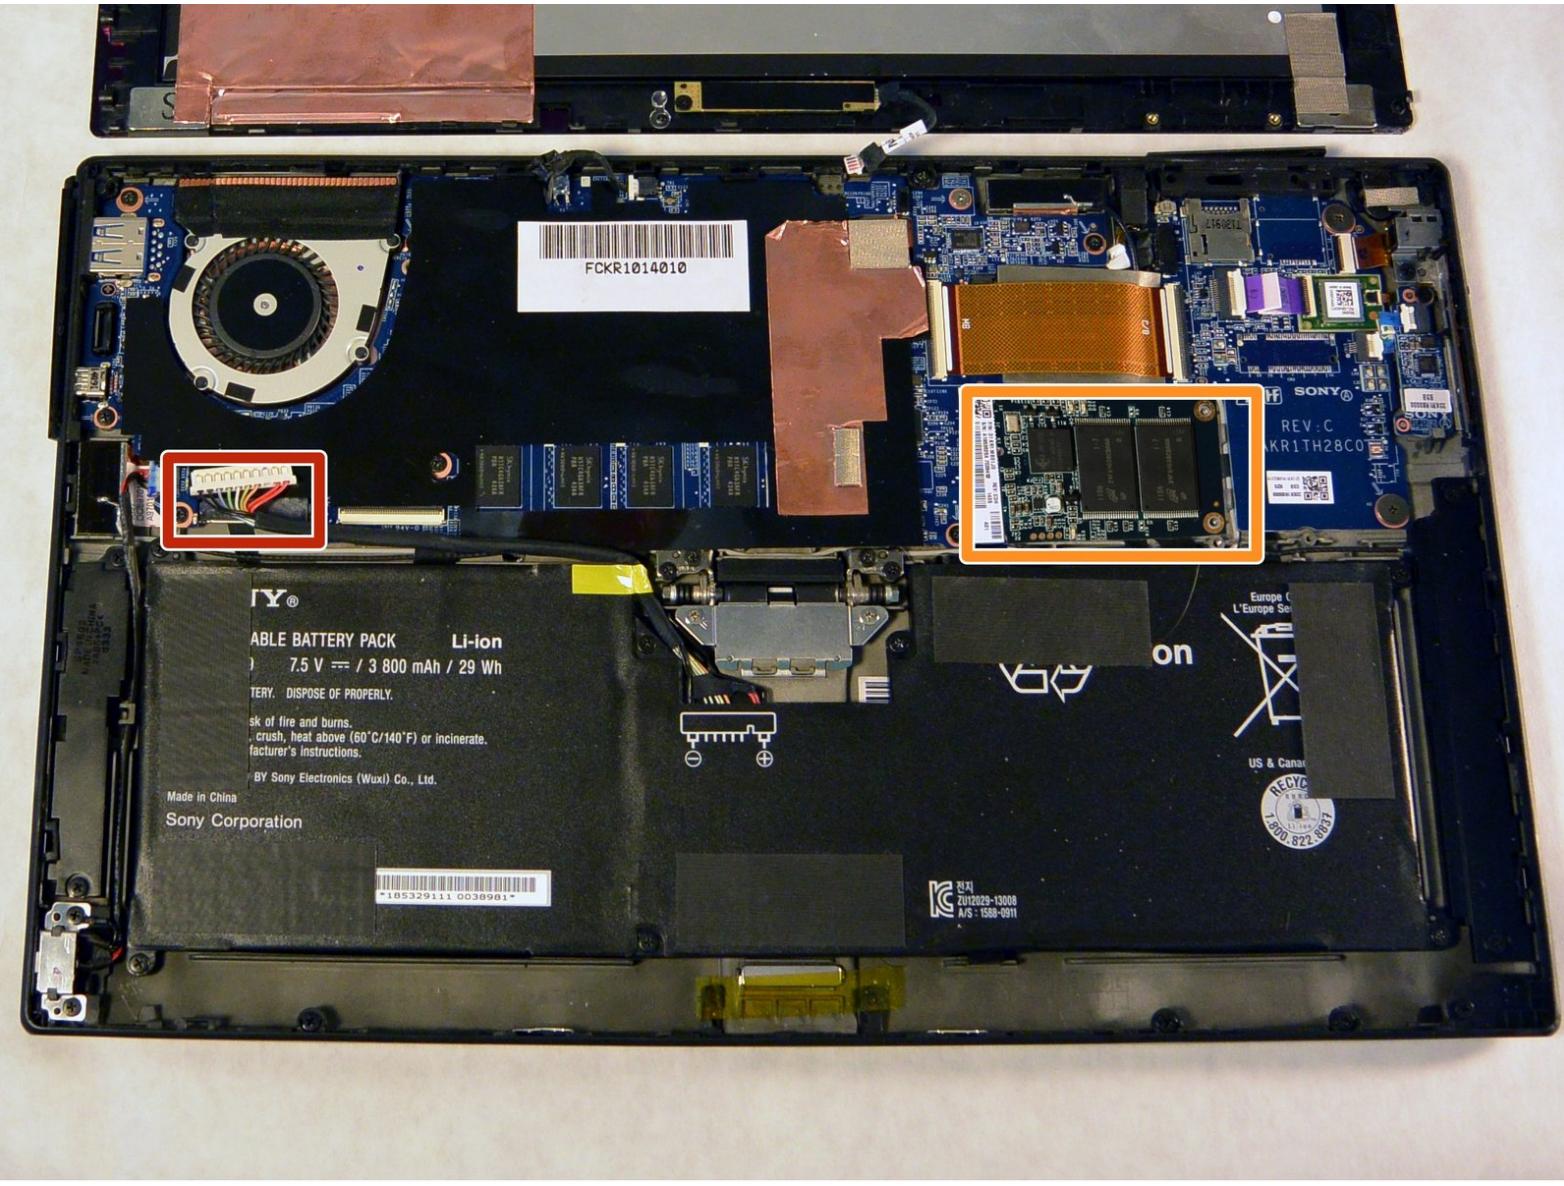

Sony Vaio Tap 11 Solid State Disk Replacement

This guide will take you through replacing the solid state disk or SSD. This will give the tablet more storage.

Written By: Alexander Bridges



This document was generated on 2019-09-29 08:30:17 AM (MST).

INTRODUCTION

The SSD is what stores the operating system, program executables, and the personal files of every user. If the device is constantly displaying warnings about disk usage, replacing with a larger capacity module will allow for additional file storage.

TOOLS:


- [Phillips #000 Screwdriver](#) (1)
- [Suction Handle](#) (1)

Step 1 — Screen Assembly




- Begin by popping open the HDMI/USB port cover on the left edge.
- Remove the three #000 headed, 3 mm long screws located underneath the port cover.

Step 2

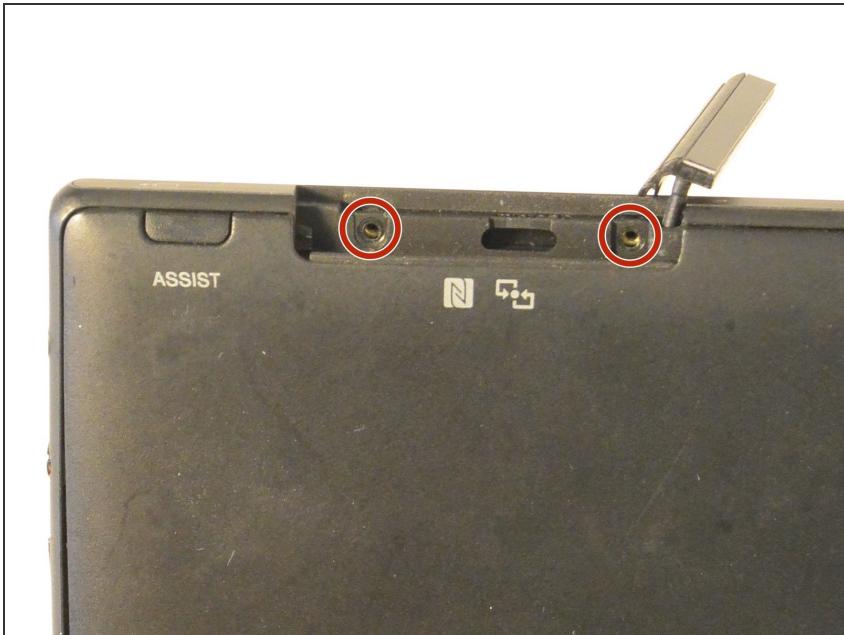

- There are two #000 headed, 3 mm long screws under a similar cover covering the Micro SD slot on the top side of the device.
- Remove the two screws beneath the Micro SD card slot cover.


Step 3

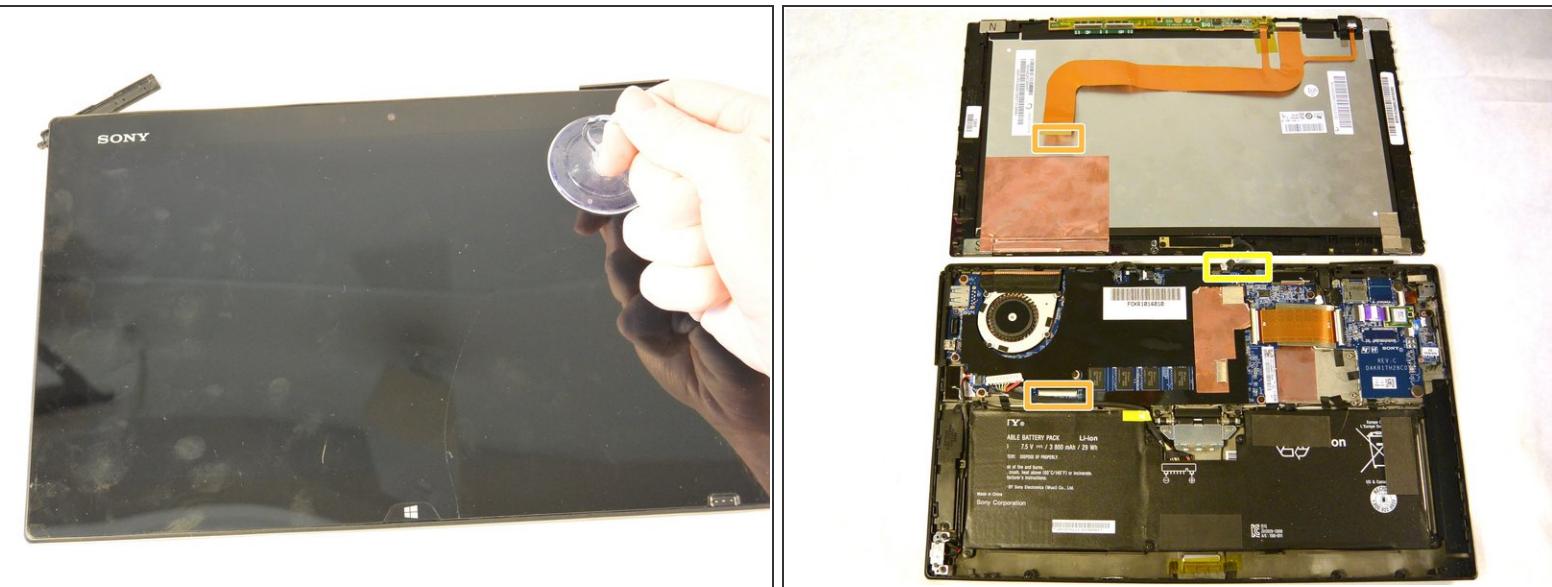

- Attach the suction cup to the top right area of the screen.
- Pull to remove the screen from the rest of the device.

⚠ Watch out for the front camera cable connected to the top middle of the device. The display ribbon cable should just slide out.


Step 4 — Solid State Disk

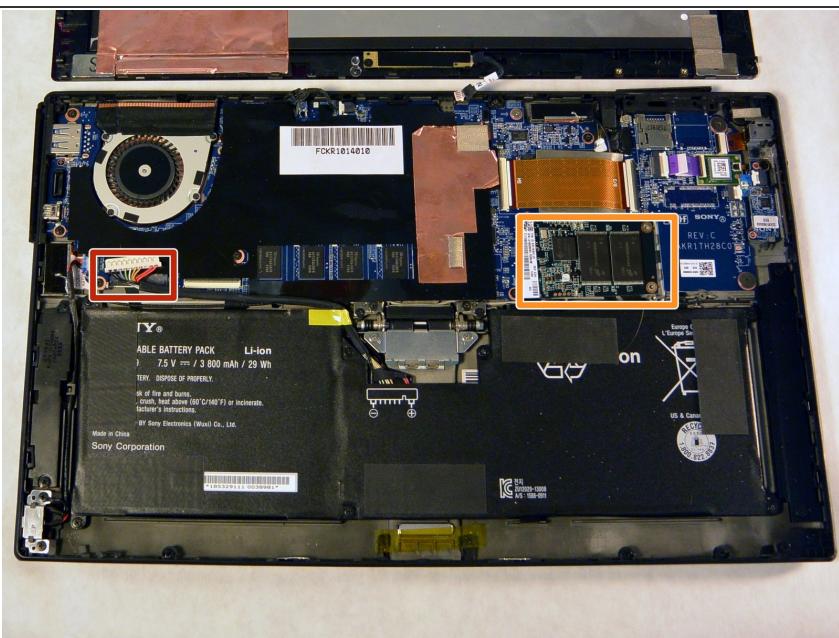

⚠ Unplug the battery connector located beside the fan.


ℹ Locate the SSD on the right side of the device, above the battery and beneath the WiFi chip.

Step 5

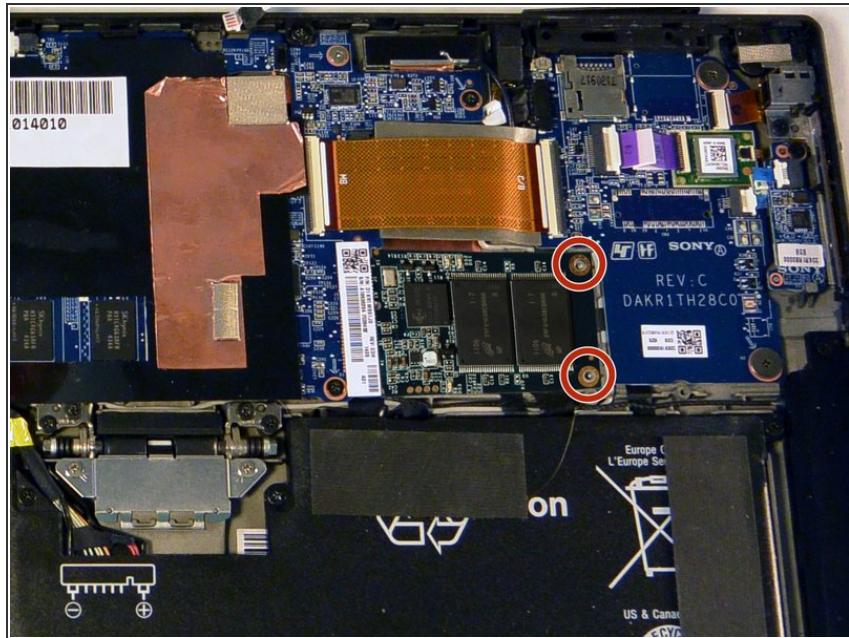

- Remove the two 3 mm Phillips #000 screws from the right edge of the SSD.

Step 6

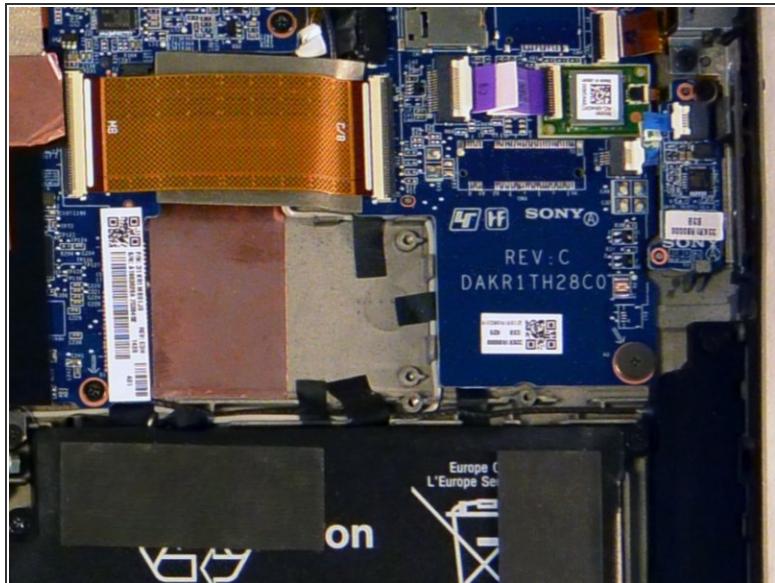

- Pull the SSD towards the right and slightly up, removing it from the back assembly.

To reassemble your device, follow these instructions in reverse order.