




# Sony Vaio VGN-S260 Optical Drive Replacement

Written By: Jeffrey Bryan

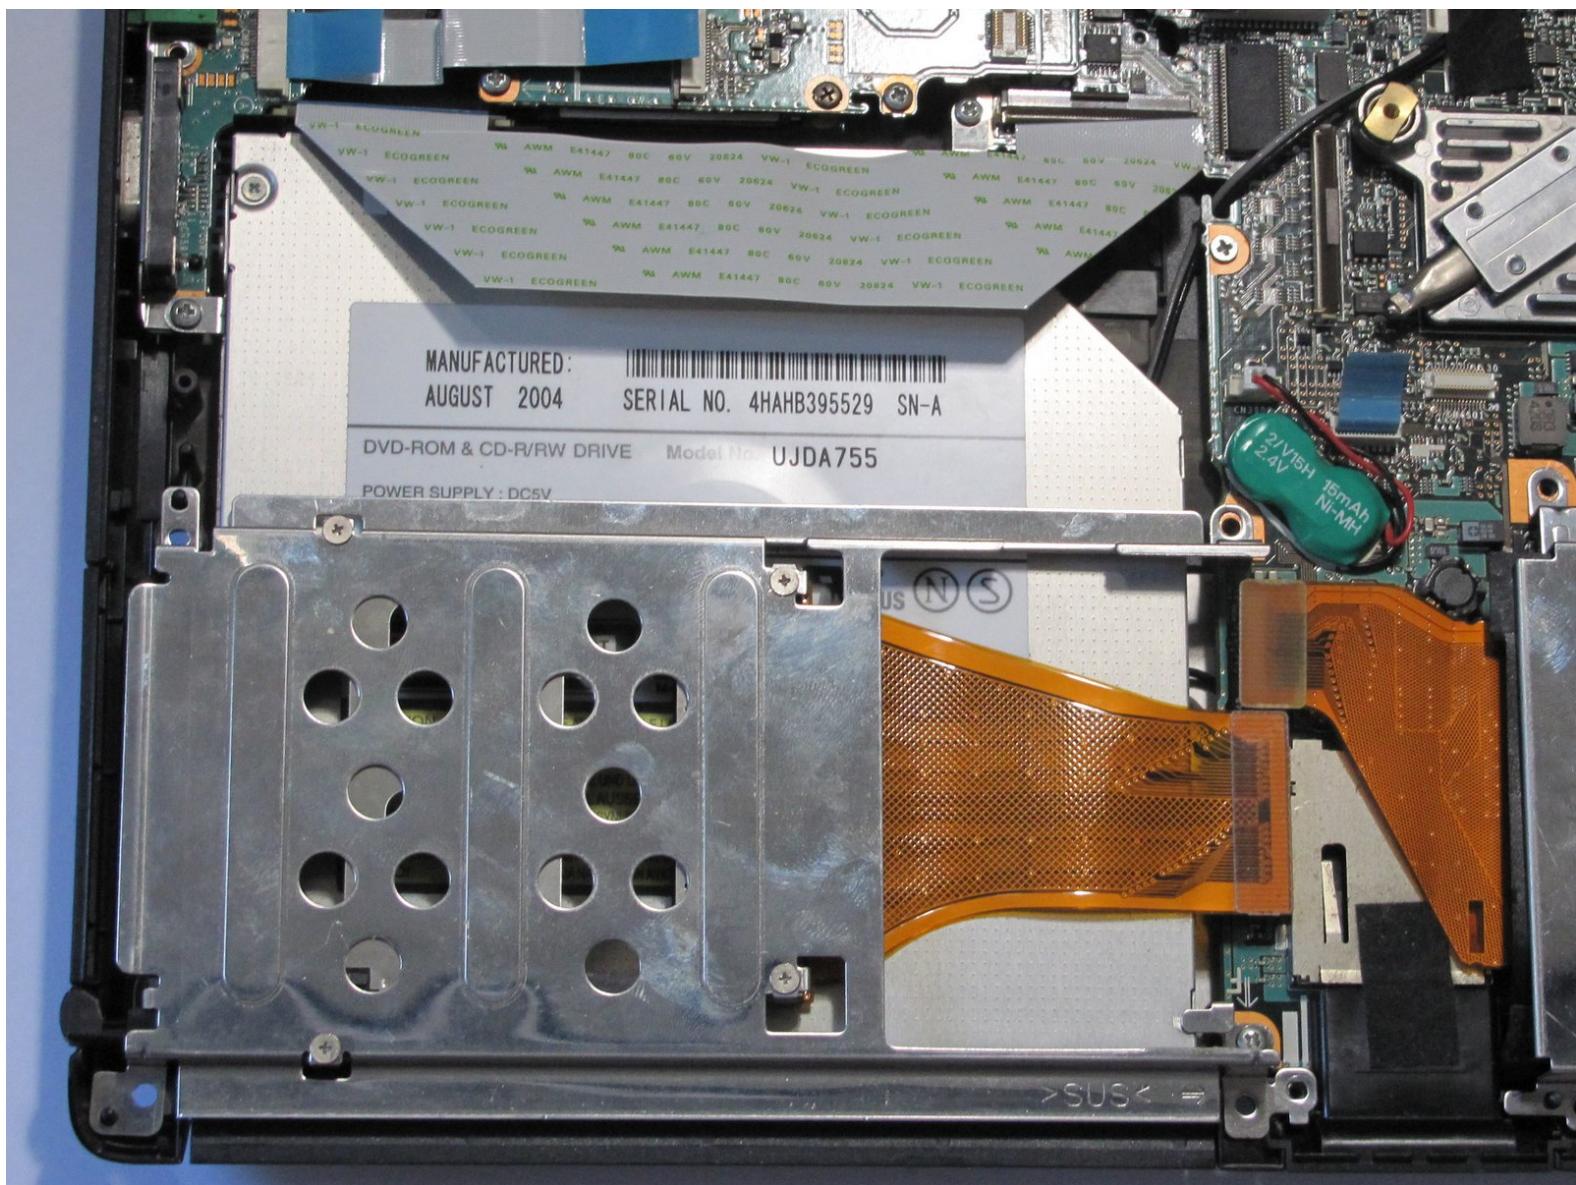

## INTRODUCTION

How to take out the Optical Drive from the Sony Vaio VGN-S260 laptop

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Battery



- Flip the laptop over so the Vaio logo is facing down.
- Locate the battery at the top and Find the release and unlock slides on the battery.
- Slide the unlock tab to the unlock position.
- Slide the release tab in the direction of the arrow, i.e. towards the unlock tab.

## Step 2



- With the tabs still in the unlock position, slide the battery away from the main case.

## Step 3 — Keyboard




- Flip the computer over so the Vaio logo is facedown.
- Unscrew the 2 screws next to the battery.

## Step 4



- Flip the computer over again so the Vaio logo is face up.
- Open the lid.



## Step 5

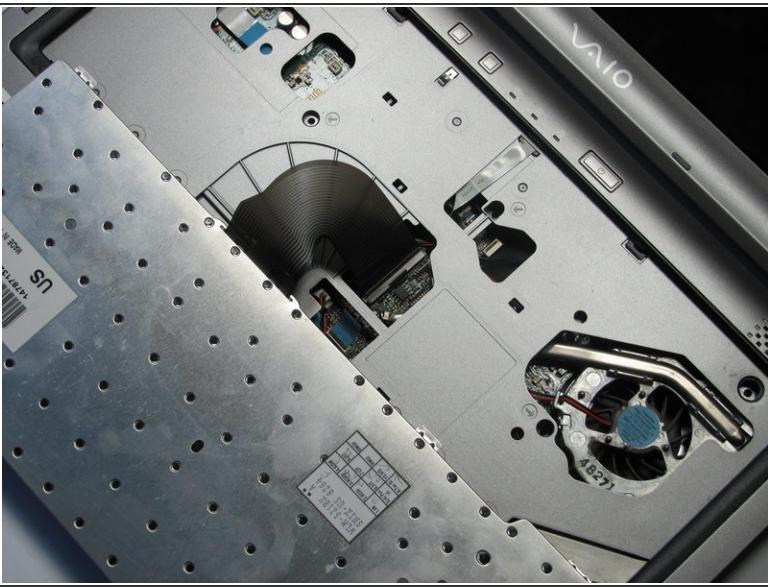

- Press down on the outer gray shell around the keyboard.
- Use the spudger to gently lift keyboard.


**⚠** Do not pull up the keyboard too far as it is attached to a ribbon underneath.

## Step 6

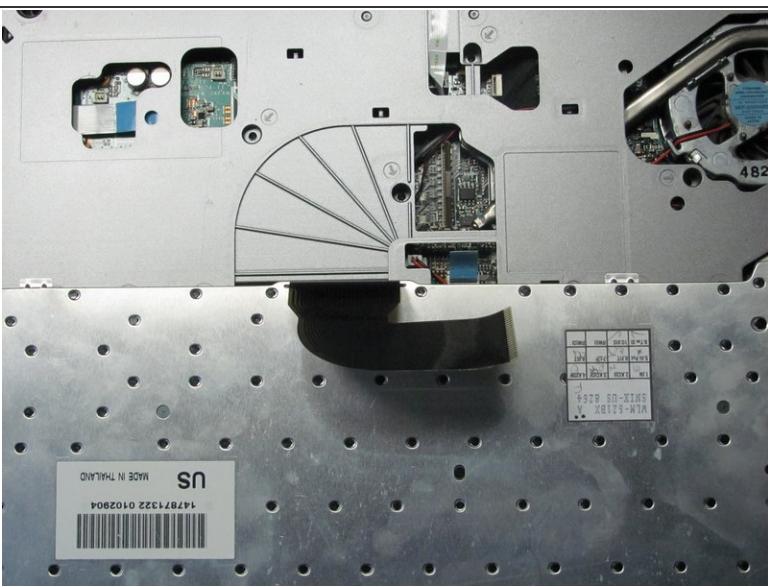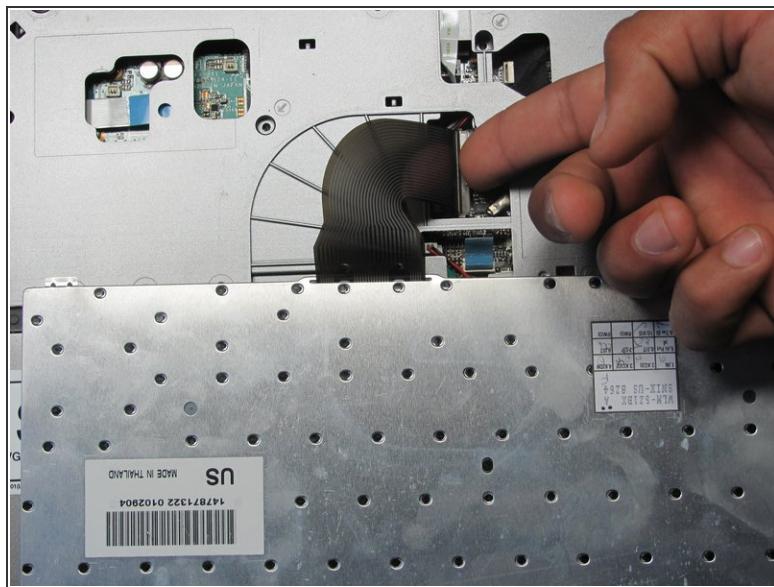

- Lift up lever underneath the ribbon to detach the keyboard.

## Step 7 — Upper Casing

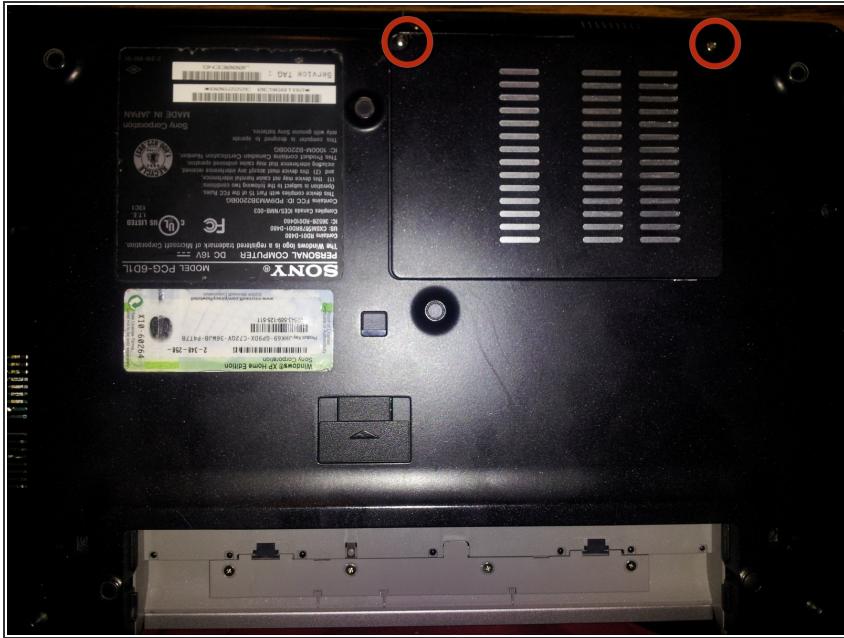


- Remove memory/wireless compartment cover.

## Step 8




- Flip so the Vaio Logo is face down.
- Locate and remove a total of 8 screws on the bottom.

## Step 9

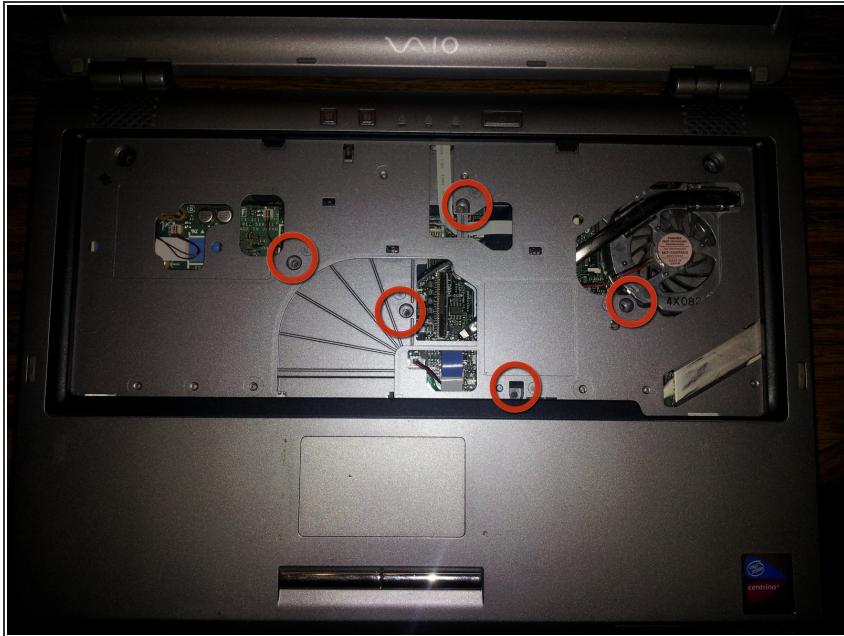

- Find and remove 5 screws (they all have arrows next to them) from cover.

## Step 10

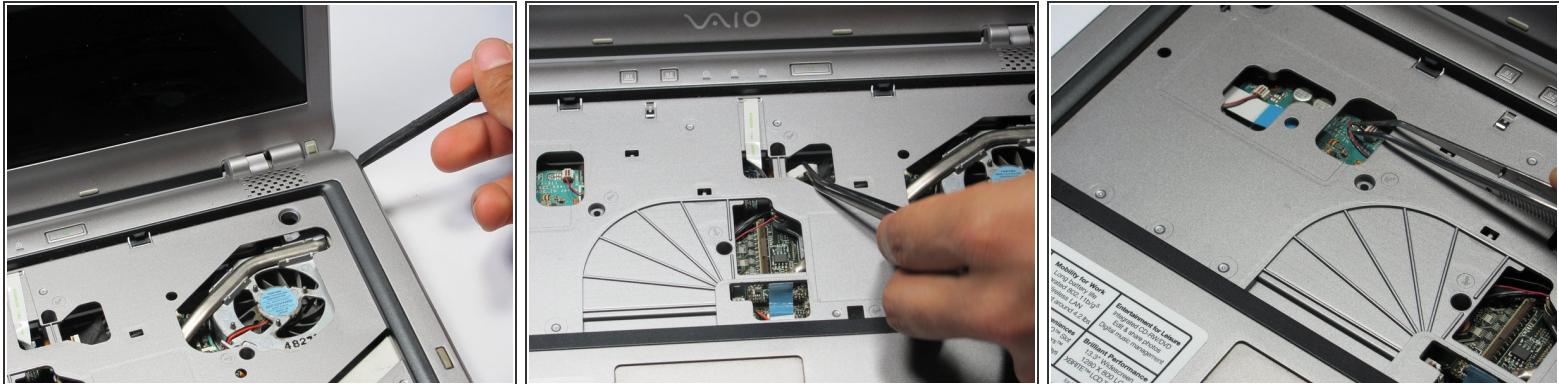

- Flip the laptop over so the Vaio logo is face up.
- Use the spudger to pop up the upper casing.

**⚠** Do not lift too much as the upper casing is attached to wires underneath.


- Remove the wires that are attaching the upper casing to the motherboard.

## Step 11




- Remove the upper casing.

## Step 12 — Optical Drive

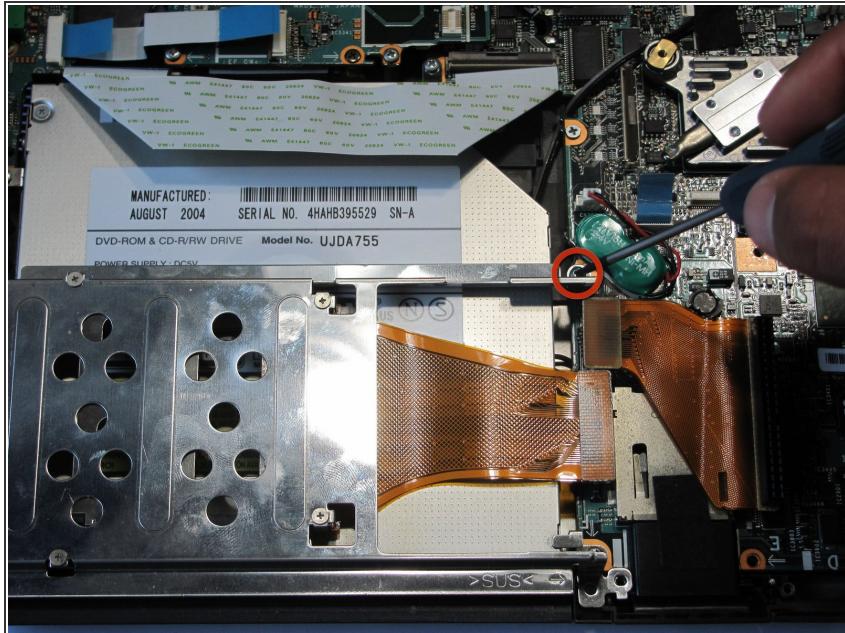


- Remove the screw holding the optical drive casing to the logic board.

## Step 13

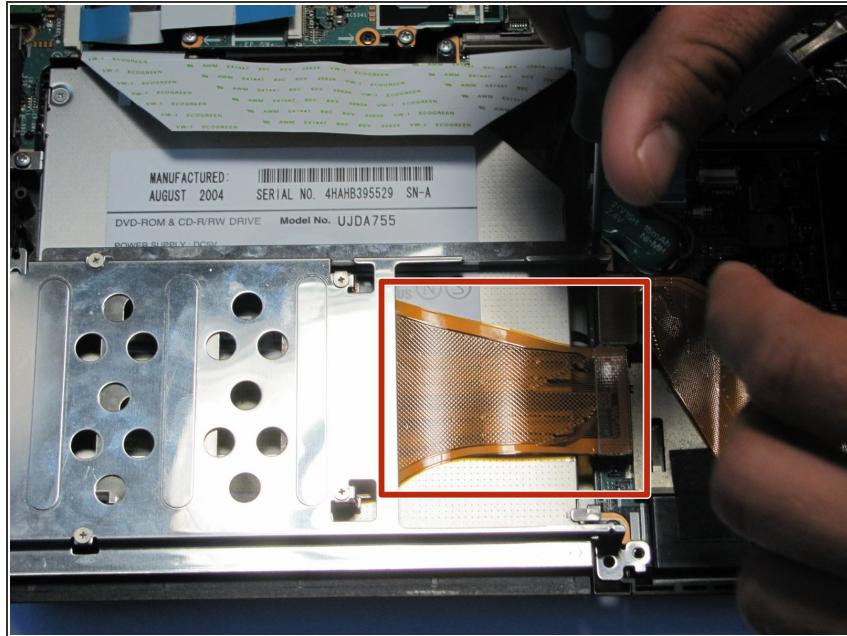

- Locate ribbon connecting optical drive case to logic board.
- Pop off the ribbon.
- Remove the metal PC-Card cage.

## Step 14

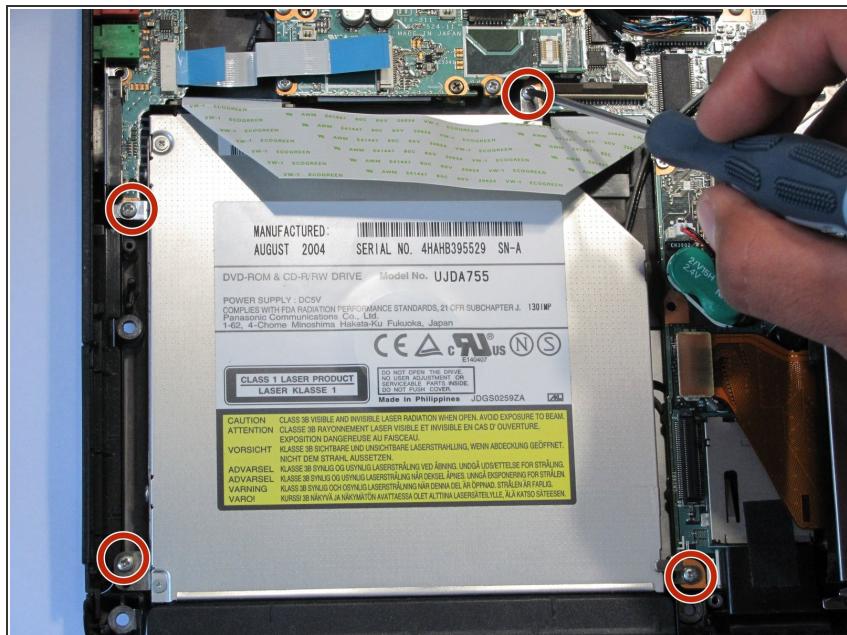

- Remove the four screws holding the optical drive to the logic board.

## Step 15



- Locate brown locking tab above optical drive.
- Lift up on brown locking tab until ribbon is loose.
- Gently slide out and remove the optical drive from the computer.

To reassemble your device, follow these instructions in reverse order.