



Sony Vaio VPCW21FX Screen Replacement

This guide will illustrate how to replace the screen on the Sony Vaio VPCW21FX.

Written By: Summer



INTRODUCTION

Does your screen have cracks, pixelation, or is completely black? This step by step guide is here to help you replace it.




TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-



Step 1 — Screen



 Make sure your device is powered off and unplugged to avoid electric shock.


- Open your laptop.
- Remove the four screws on the frame.

Step 2

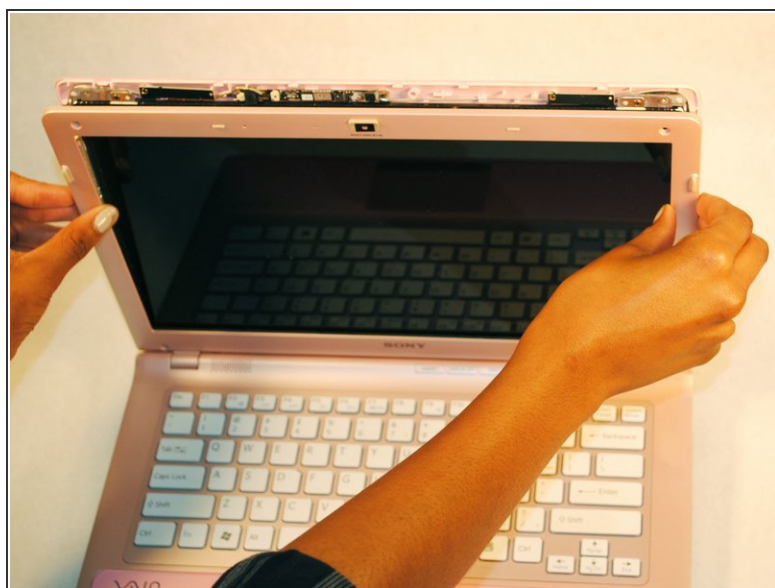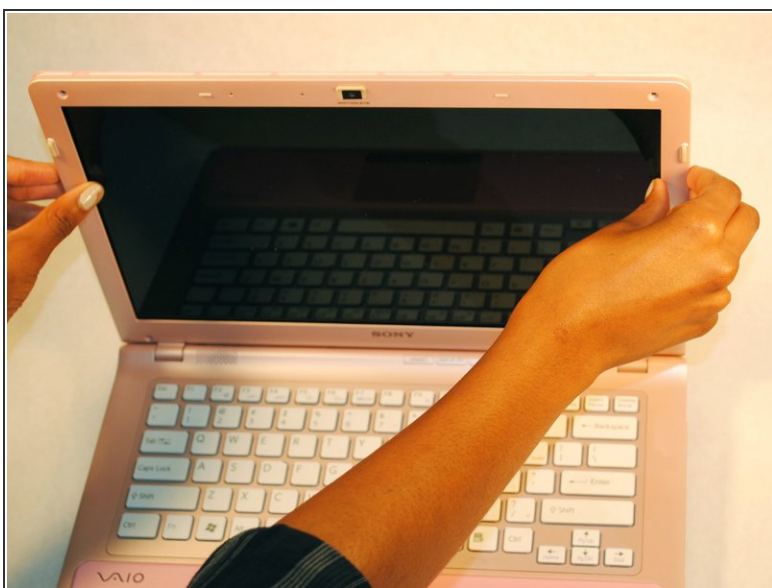

- After all of the screws are removed, gently pull on the frame to remove it.

Step 3

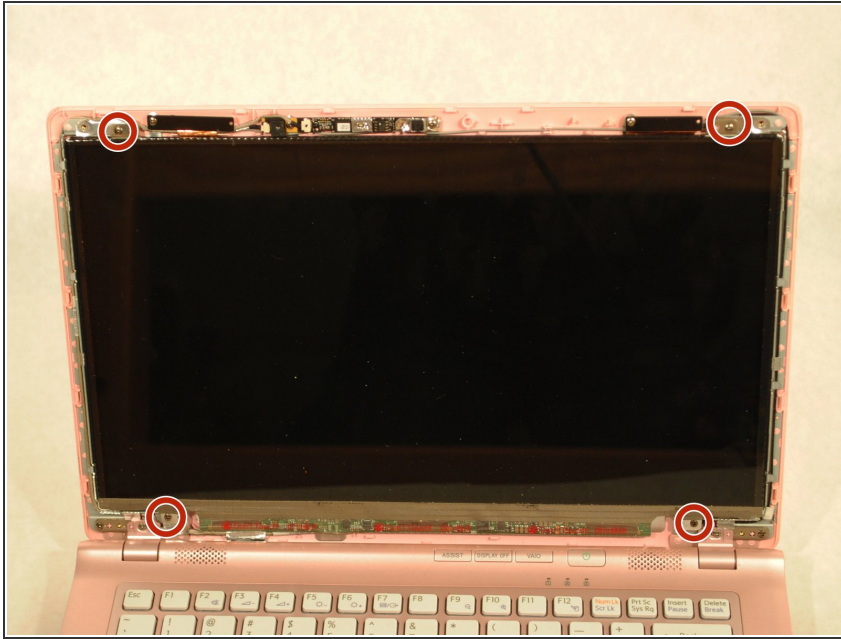




- Unscrew the 4 screws located on the screen itself.

Step 4



- Gently lay the screen down on the keyboard.

Step 5

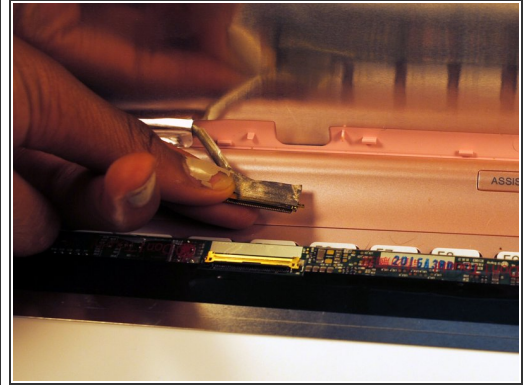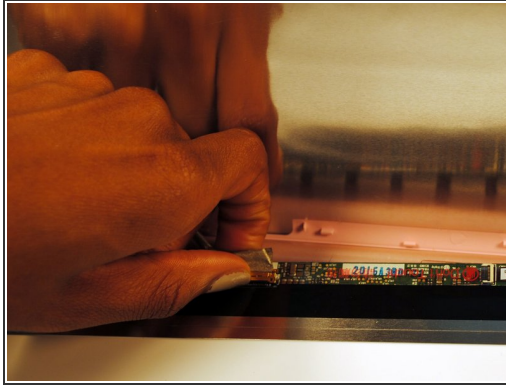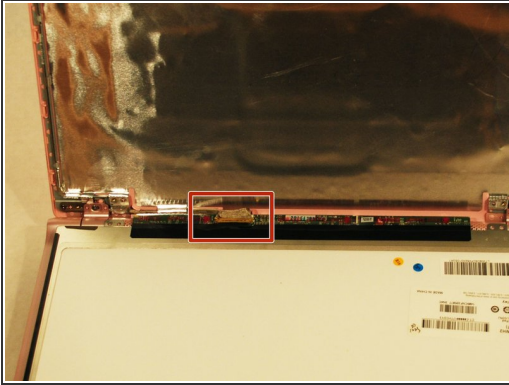

- Detach the wire that is connected to the LCD screen by grabbing back of connector and sliding it out.

To reassemble your device, follow these instructions in reverse order.