




# Sony Xperia E C1505 C1504 LCD Display Replacement

Written By: ZFix

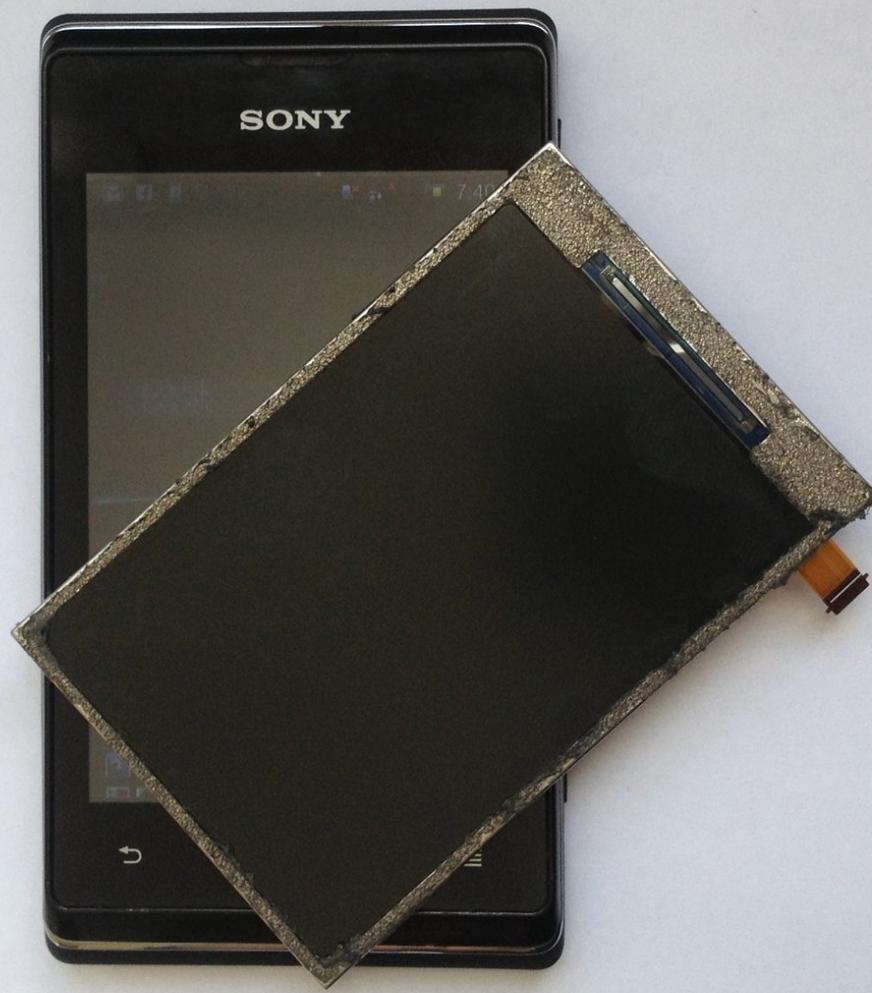

# INTRODUCTION

If the LCD display of your phone is broken, in this manual we will show you, how to disassemble the phone and how to change it.

[\*\*Please SUBSCRIBE to my channel ↴\*\*](#)

[video: [http://youtu.be/z9\\_Qgli9PEk](http://youtu.be/z9_Qgli9PEk)]

## **TOOLS:**

- [T5 Torx Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Tweezers \(1\)](#)
- [Double Sided Adhesive Tape - 3 mm Width \(1\)](#)

## **PARTS:**

- [XPERIA C1505 LCD Display \(1\)](#)

## Step 1 — LCD Display



- Switch-off the phone and remove the battery.

## Step 2



- The small bottom bezel is held by 2x locking clips.
- Preferably use plastic tools for disassembling.

## Step 3



- There are 4x silver screws and 3x black screws.
- The rear cover is held by 5x locking clips.
- Two of them, at the bottom side are more hard for unlocking. You can use a screwdriver or other metal tool to unlock them.



## Step 4



- Remove the back cover.
- With a plastic tool disconnect one by one:
  - LCD Display flex cable
  - Touchscreen flex cable
  - Menu Buttons Board flex cable
  - Coaxial Wire Antenna cable

This document was generated on 2019-09-20 01:04:54 PM (MST).

## Step 5

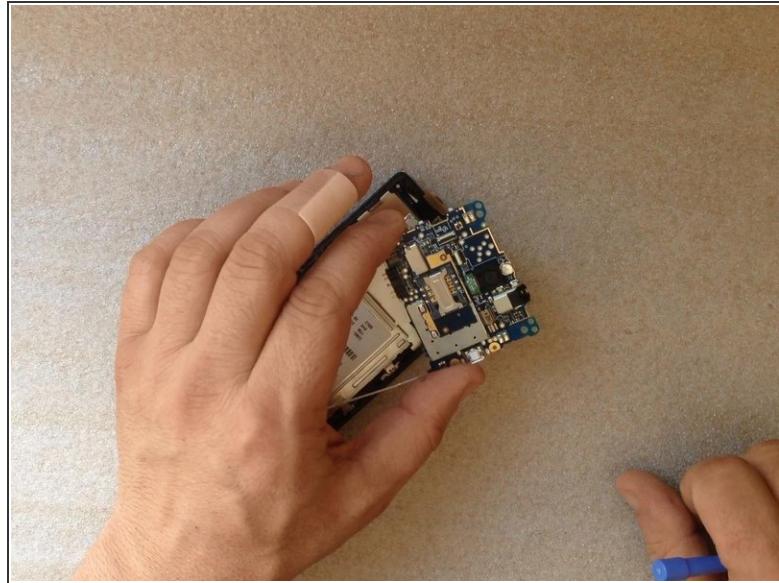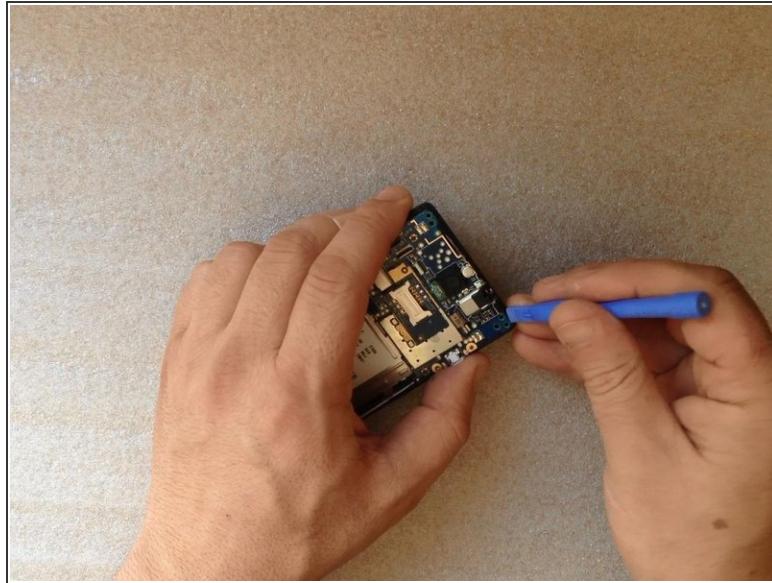


- Carefully remove the main board.

## Step 6




- Disconnect the other side of the flex cable and remove the Home Buttons board.
- Unstick the camera button.

## Step 7

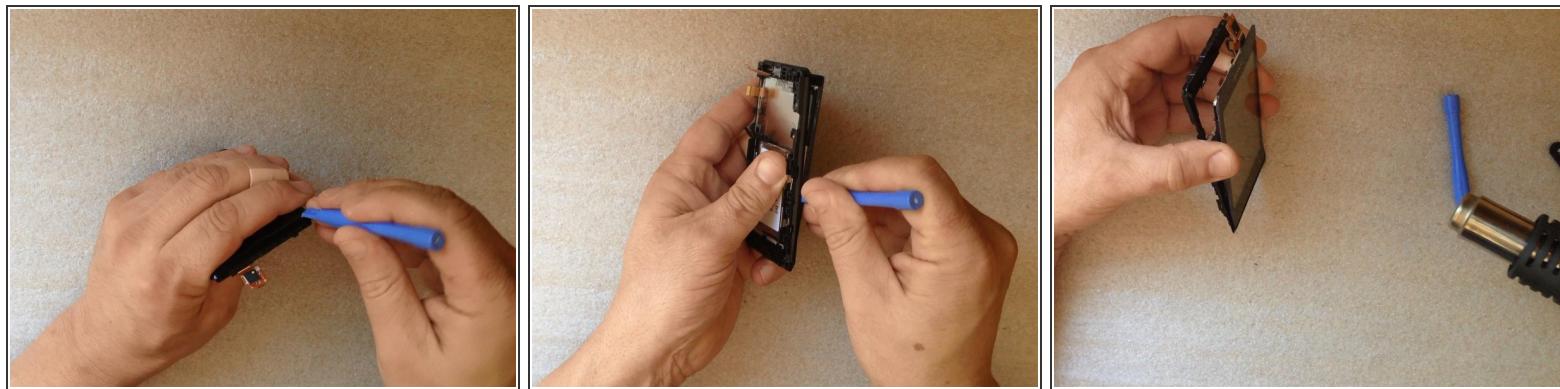


- The touch screen is stuck to the frame with double side adhesive tape.
- By using plastic tools gently start separating.
- At the bottom is glued on firmly because the bonded surface is larger.
- Use a hot air to make separating more easy and safety.

## Step 8

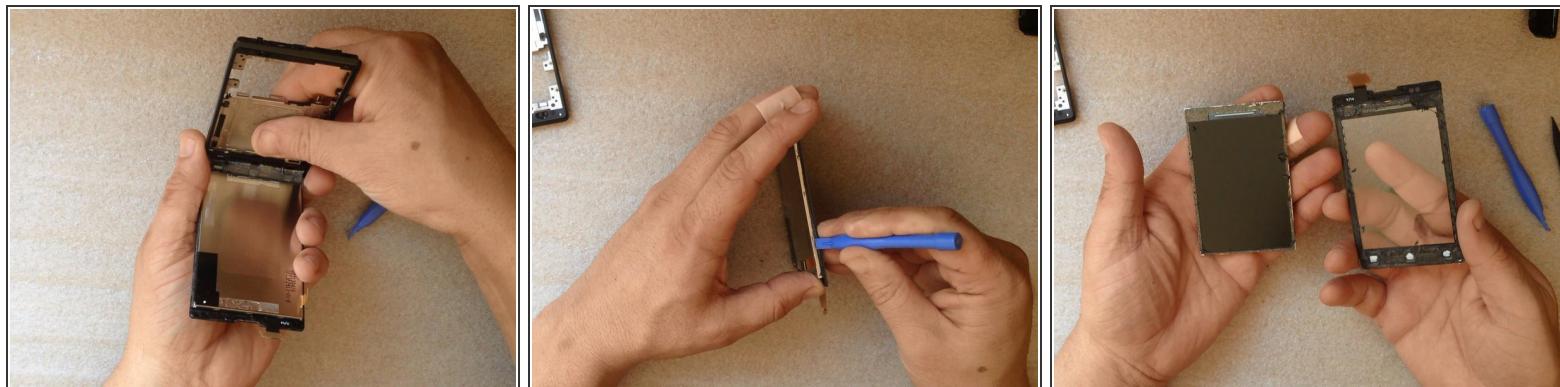


- With a plastic tool, carefully separate the LCD display from the touch screen.
- Clear the LCD Display from the old adhesive tape.

## Step 9

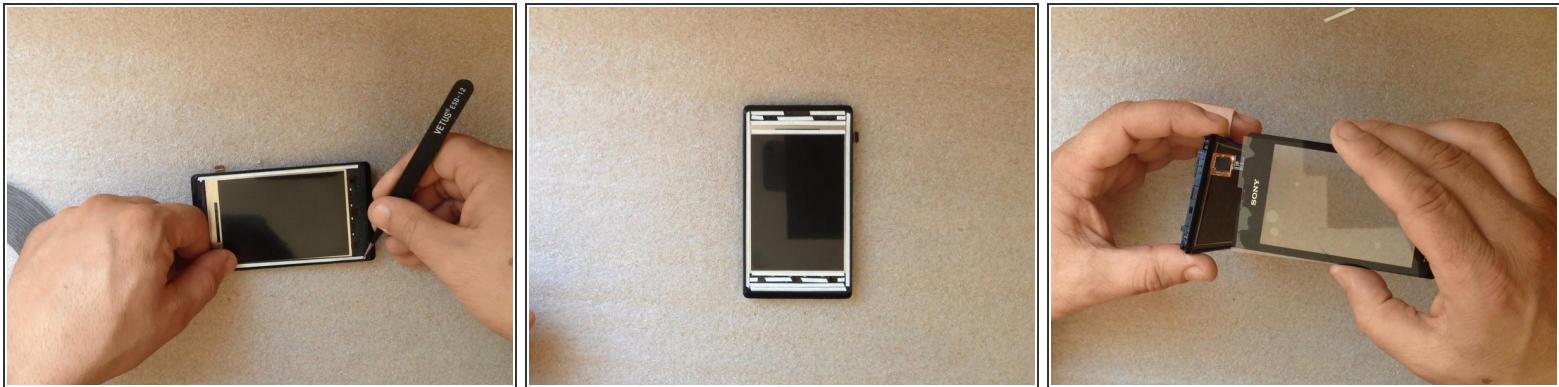

- Install the new LCD into the frame and put adhesive tape. Be careful not to cover the holes (for the speaker, menu buttons etc.).
- Install the Touchscreen.

## Step 10

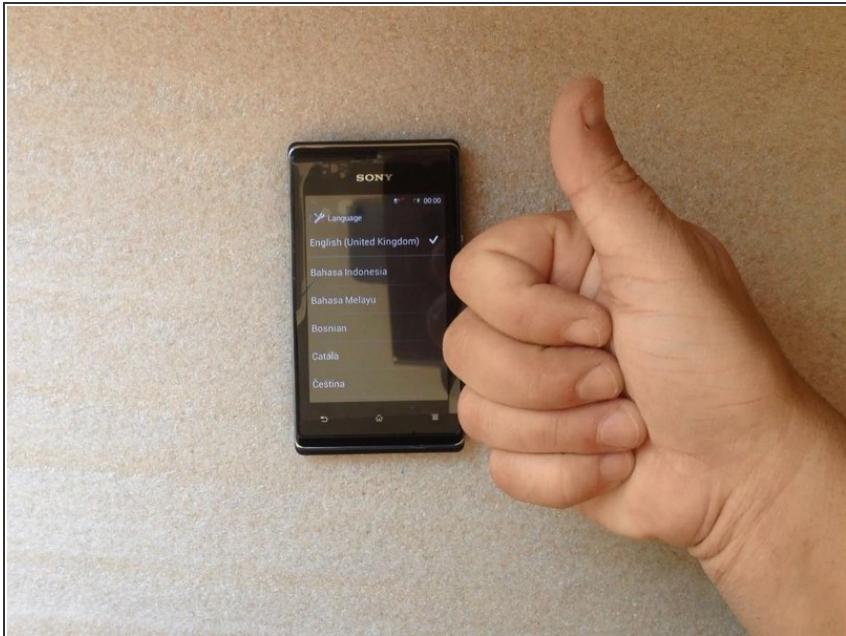

- To reassemble your device, follow these instructions in reverse order.
- .

**● Did you do it successfully?**

 [Please SUBSCRIBE to my channel ↴](#)

To reassemble your device, follow these instructions in reverse order.