




Sony Xperia E4 Middle frame with Battery Replacement

Sony Xperia E4 Middle frame with Battery Replacement

Written By: ZFix

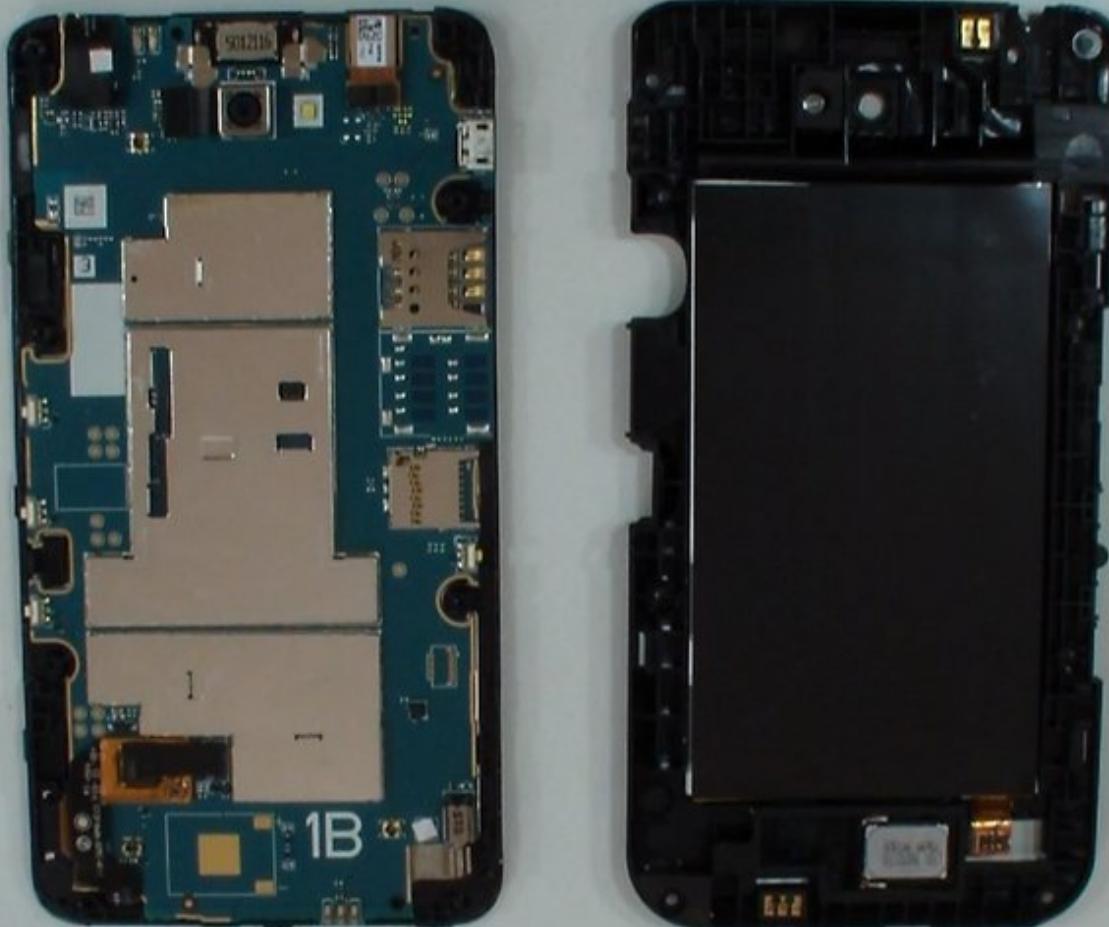

INTRODUCTION

E2104, E2105, E2115, E2124

How to disassemble the device and remove / replace the battery or the loudspeaker.

[video: <https://www.youtube.com/watch?v=dlpq41LcFzk>]

TOOLS:

- [T4 Torx Screwdriver \(1\)](#)
- [iFixit Opening Picks set of 6 \(1\)](#)

Step 1 — Battery Cover



- Remove the back cover and any installed SIM and memory cards.
- There are 8x black screws Torx T4. Remove them.

Step 2



- Remove the small black rubber at the lower left corner.
- Under it is the battery flex cable, disconnect it.

Step 3



- Use a plastic tool to separate the middle frame.
- The battery is glued to the middle frame with an adhesive tape.
- Loudspeaker

To reassemble your device, follow these instructions in reverse order.