




Spark Plug Disconnection

Prerequisite-only guide to disconnect the spark plug in order to safely effect other repairs.

Written By: Jeff Suovanen

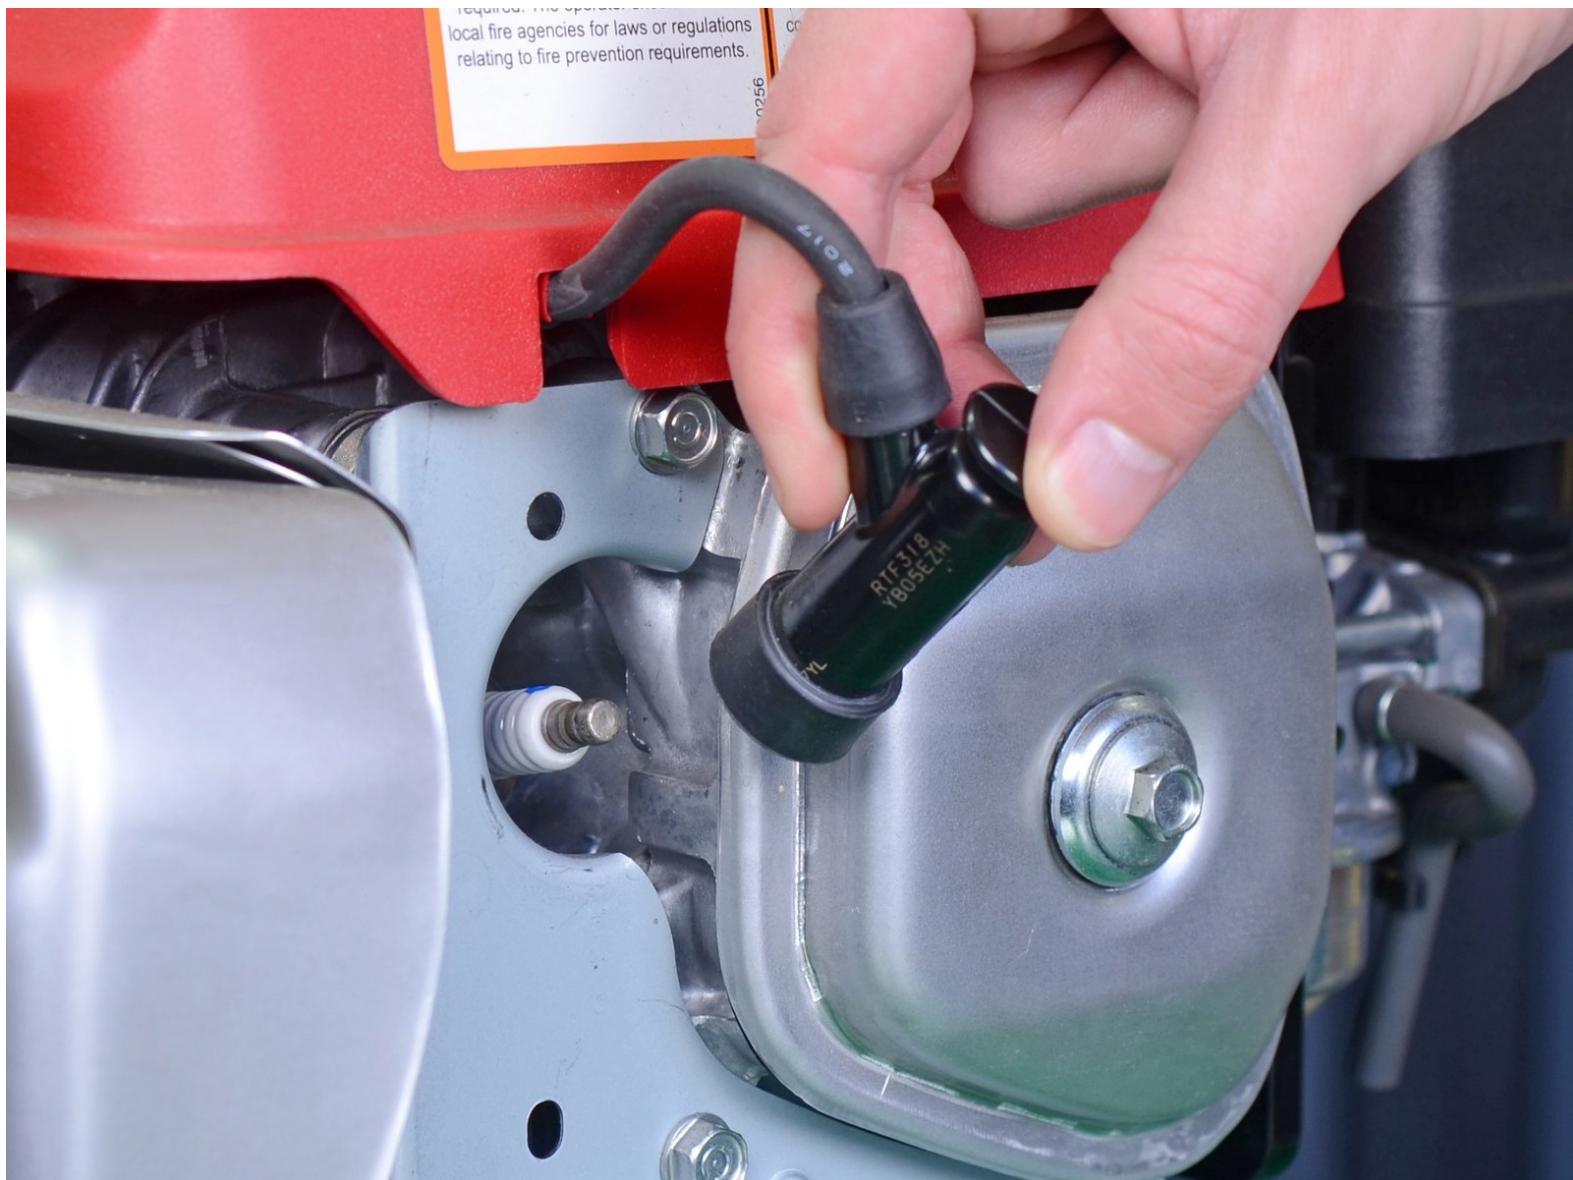

INTRODUCTION

Prerequisite-only guide: Disconnect the spark plug wire from the spark plug in order to safely make repairs.

Step 1 — Spark Plug Disconnection



- Grab the plastic housing at the end of the spark plug wire.
- Pull firmly to disconnect the wire from the spark plug.

To reassemble your device, follow these instructions in reverse order.