




# Spin Master Boxer Remote Trigger Buttons Replacement

If you need to replace either one of the two top buttons, or trigger buttons, on the remote for the Spin Master Boxer Bot, follow this guide.

Written By: Lauren Roide

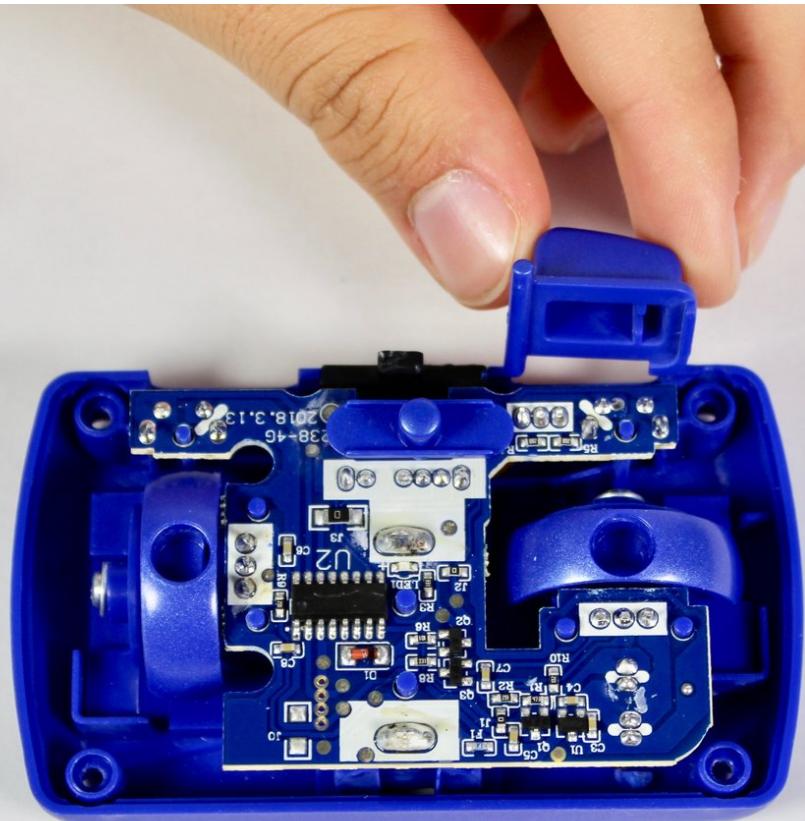

## INTRODUCTION

If you need to replace either one of the two top buttons, or trigger buttons, on the remote for the Spin Master Boxer Bot, follow this guide. If you only wanted access to replacing remote joysticks, this guide will work as well. To follow this replacement guide you will need Size 00 Philips Screwdriver, as well as a flat metal opening tool, the Jimmy.

## TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Jimmy](#) (1)

## Step 1 — Remote Trigger Buttons



- Lay the remote flat on your work space, with joysticks facing you.


## Step 2



- Remove both joysticks by gripping under circular knob and gently pulling towards you.


*(i)* The joysticks should detach without much effort.

## Step 3

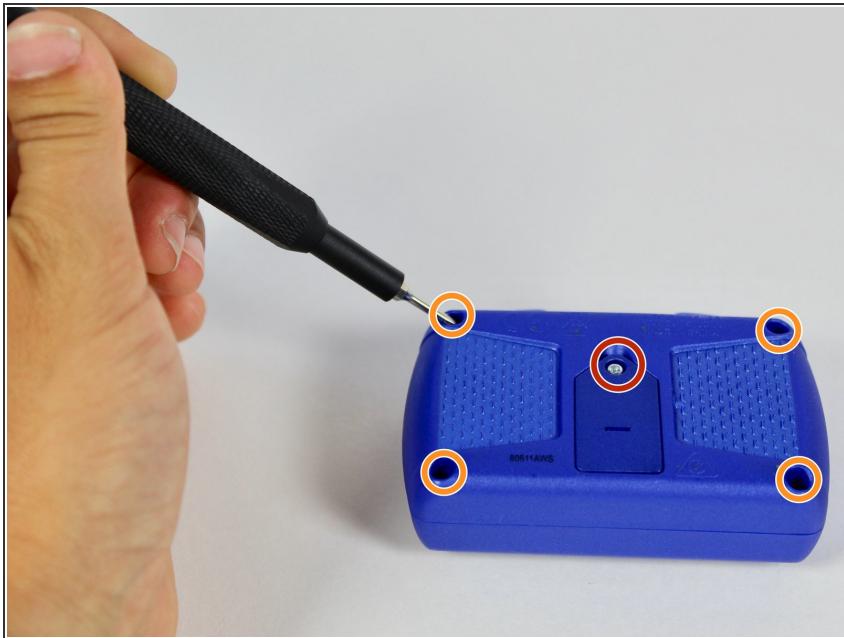


- Use the Phillips #00 Screwdriver to remove 4mm screw on the center battery panel.
- Remove the batteries from the remote and set it to side.
- Use the same screwdriver to remove all four 4mm screws on back panel.

## Step 4

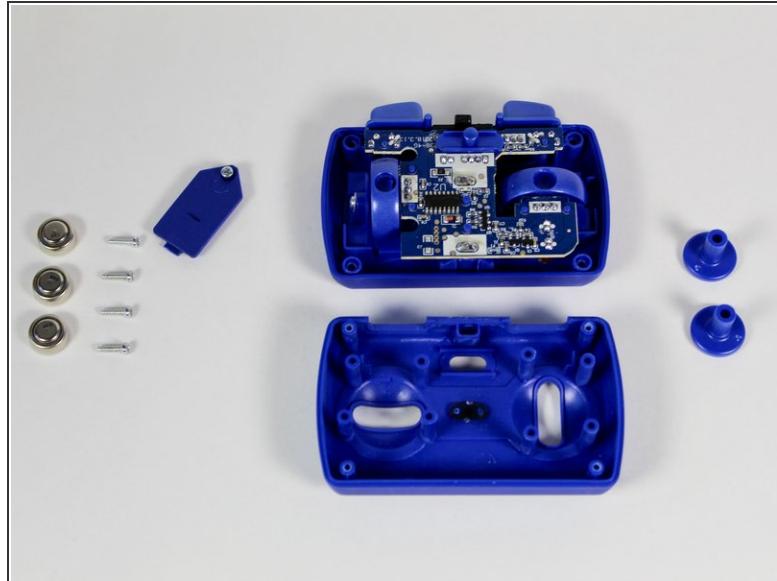

- Insert the Jimmy in between the top panel and the bottom panel.
- Gently use the Jimmy to separate both plastic panels from each other.
- Pull the panels apart and set bottom piece on workbench.

## Step 5

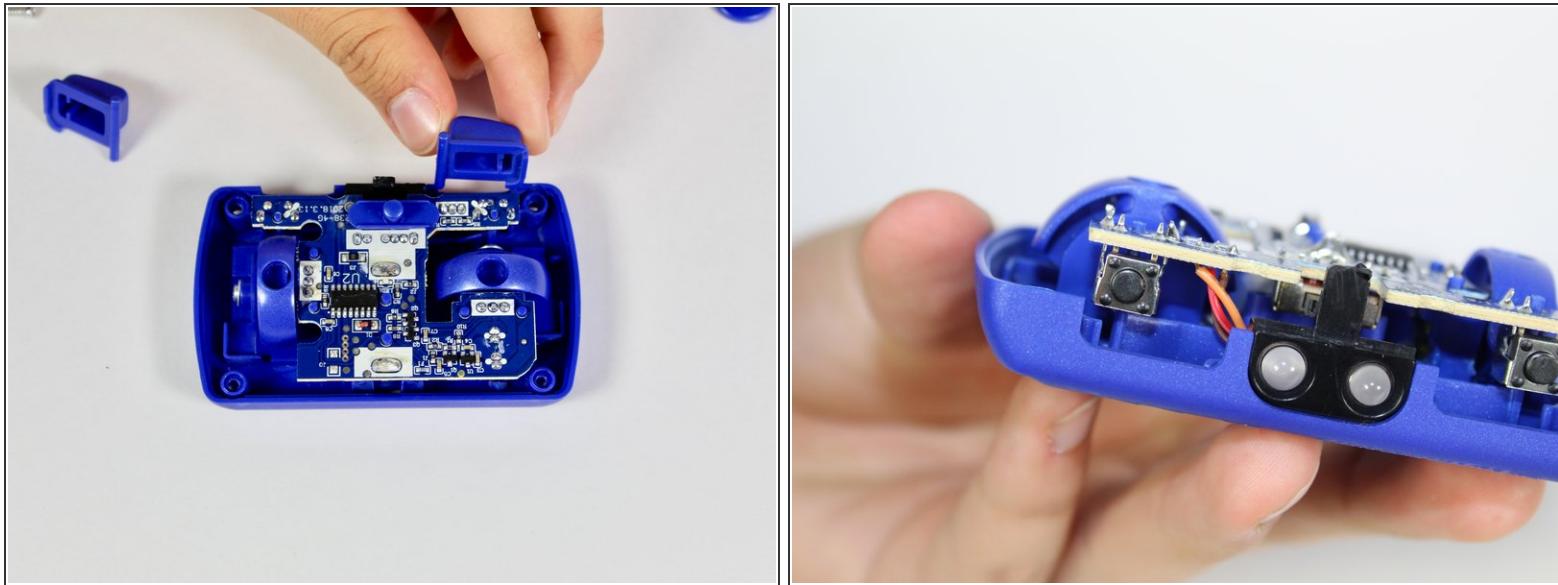

- Pinch the trigger between index finger and thumb, and lift up, away from circuit board.
- ⓘ Inspect the square button attached to circuit board to ensure functionality. If there is an issue with connection, a new circuit boards may be required.

To reassemble your device, follow these instructions in reverse order.