




Spin Master Boxer Robot Speaker Replacement

If the Spin Master Boxer is not making any noises, follow this guide to replace speaker.

Written By: Lauren Roide

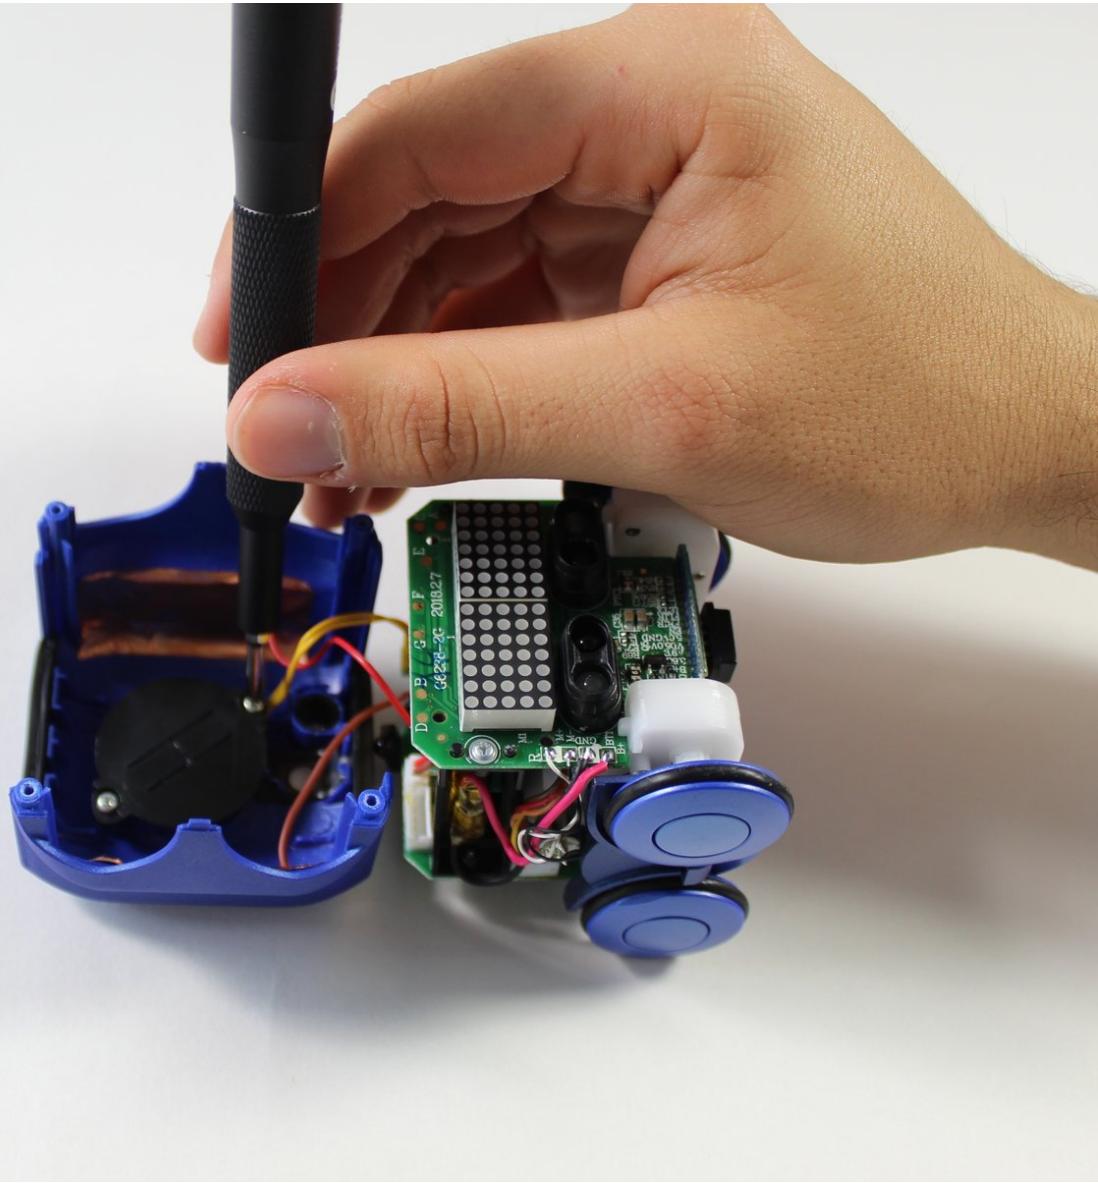

INTRODUCTION

If Spin Master Boxer is not making any noises, follow this guide to replace speaker. The speaker is located inside of robot, and requires a Size 00 Philips Screwdriver to complete replacement, and requires soldering to remove the speaker.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)

Step 1 — Robot Screen




- Set Spin Master Boxer on your workspace so that the bottom panel faces upwards.

Step 2

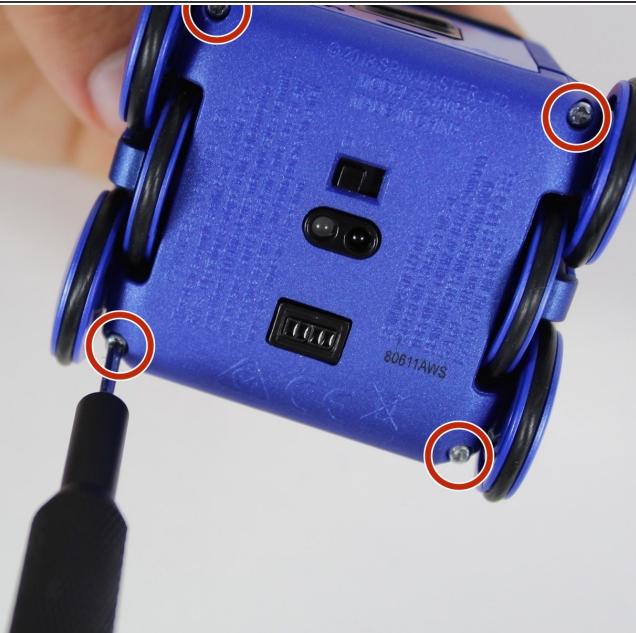



- Using a Phillips #00 screw driver, unscrew the four 4mm screws in each corner of the bottom panel.

Step 3

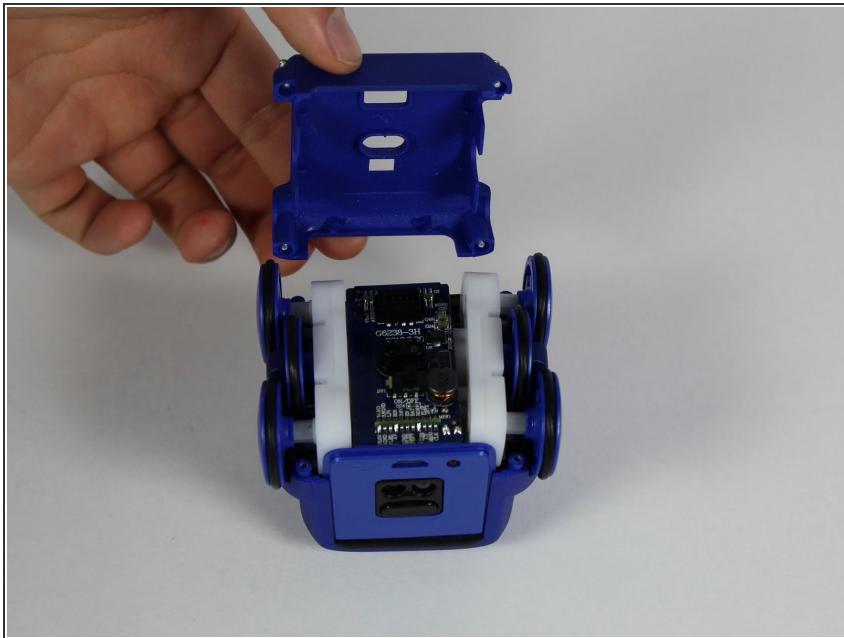

- Carefully remove the bottom panel of the Spin Master Boxer by lifting up, away from the main body of robot.


Step 4

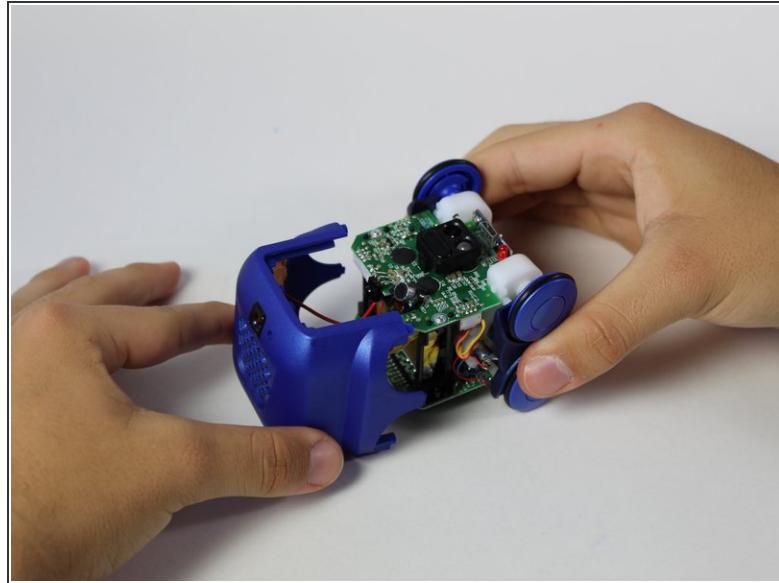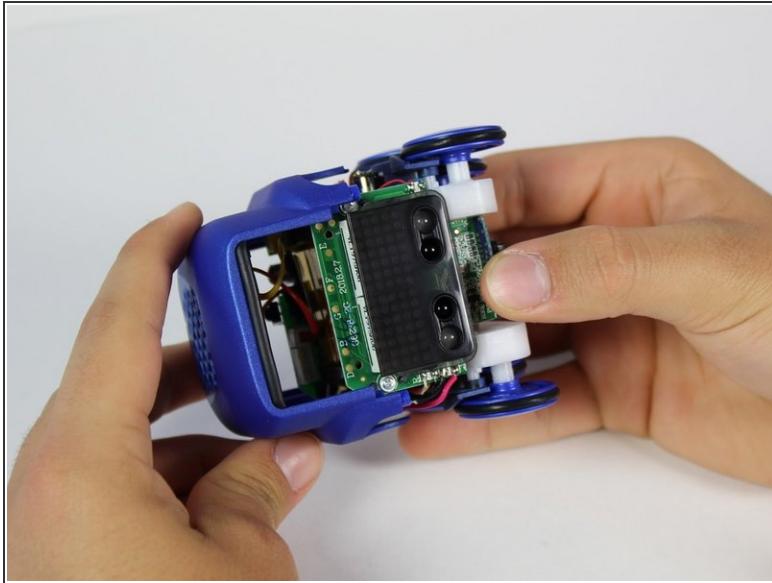

- While holding onto the axles of the wheels, gently pull the top panel of the robot away from its body.



(i) Be aware when removing the panel that multiple wires connect it to the body of the Spin Master Boxer.

Step 5

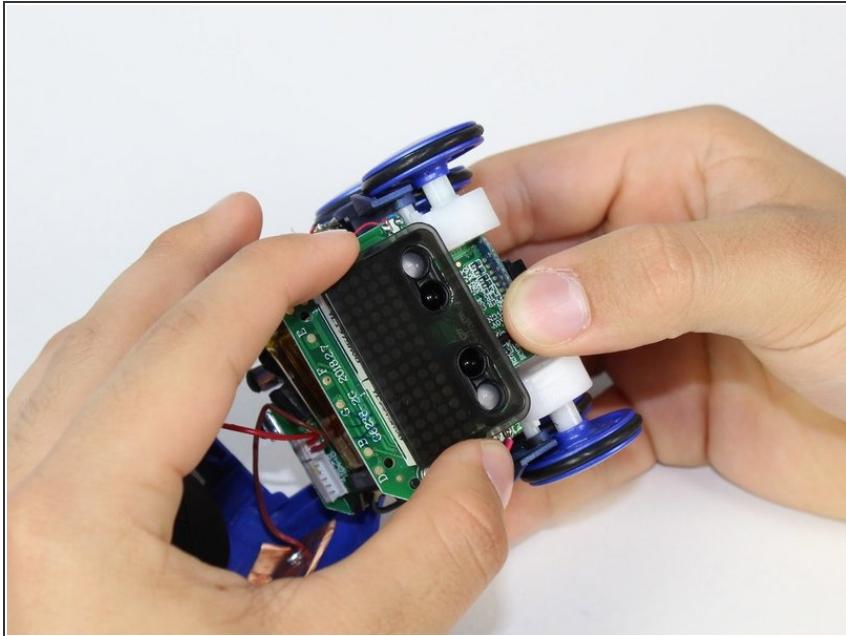

- Remove the plastic screen from the body of the robot. It should come off easily as it is not attached by anything.

Step 6 — Robot Speaker

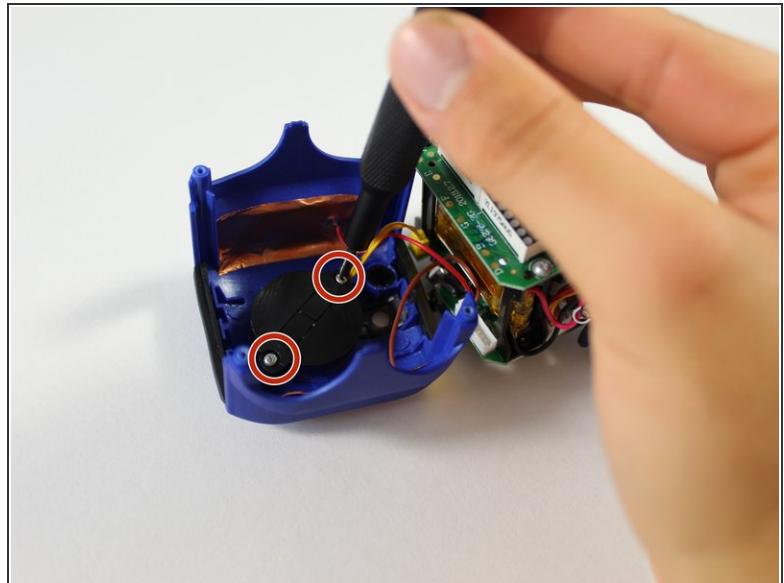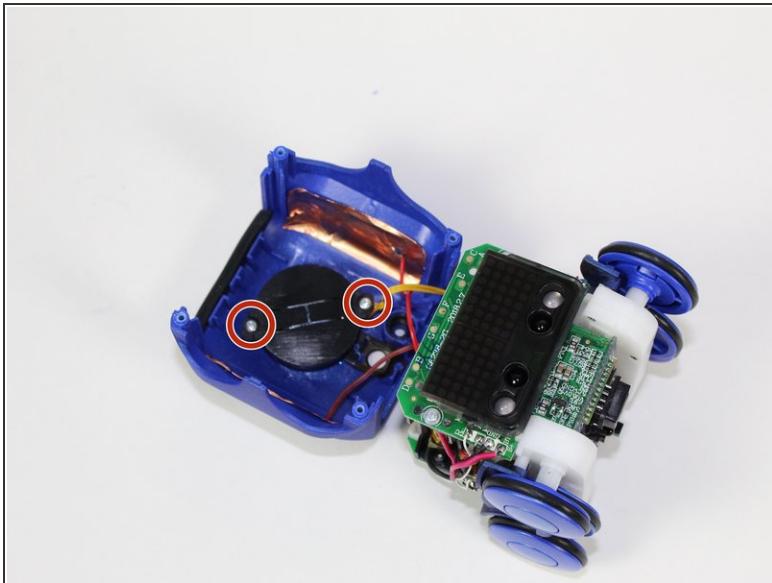

- Using a Phillips #00 screwdriver, unscrew the two 3mm screws connecting the black speaker cover to the top panel.

Step 7



- Remove the speaker cover and you will be left looking at the speaker.
- *(i)* The speaker is soldered onto the top panel so additional measures must be taken to completely remove it. See [How To Solder and Desolder Connections](#)

To reassemble your device, follow these instructions in reverse order.