



Sprint Sanyo RL-4920 Battery Replacement

Use this guide to replace the battery on your Sprint Sanyo RL-4920 phone.

Written By: Patrick Olmstead



Step 1 — Back of Phone



- Flip the phone over so that the screen is facing down.

Step 2 — Remove Battery Pack



- Push the gray lever up towards the top of the phone.
- Pull up on the battery pack and completely separate it from the phone.

To reassemble your device, follow these instructions in reverse order.