



Sprint Sanyo RL-4920 Replacing Rubber Keys Replacement

Over time phone keys can become worn down. Replacing the rubber keys can extend the life of your phone and make texting easier.

Written By: Katherine Rieck



This document was generated on 2019-10-03 04:29:11 PM (MST).

 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)

Step 1 — Back of Phone




- Flip the phone over so that the screen is facing down.

Step 2 — Remove Battery Pack




- Push the gray lever up towards the top of the phone.
- Pull up on the battery pack and completely separate it from the phone.

Step 3 — Screws

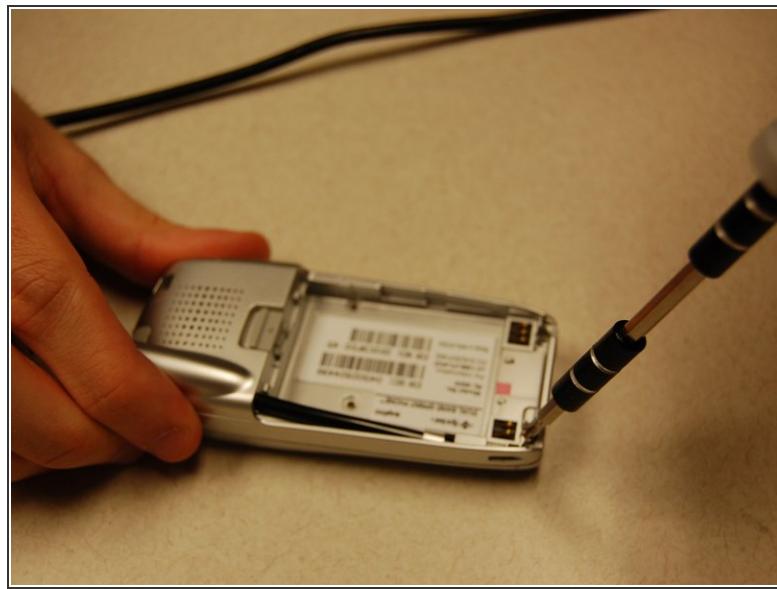


- Locate the five screws around the back casing.
- Use a three-prong screw bit to remove all five screws.

Step 4 — Separate Cases

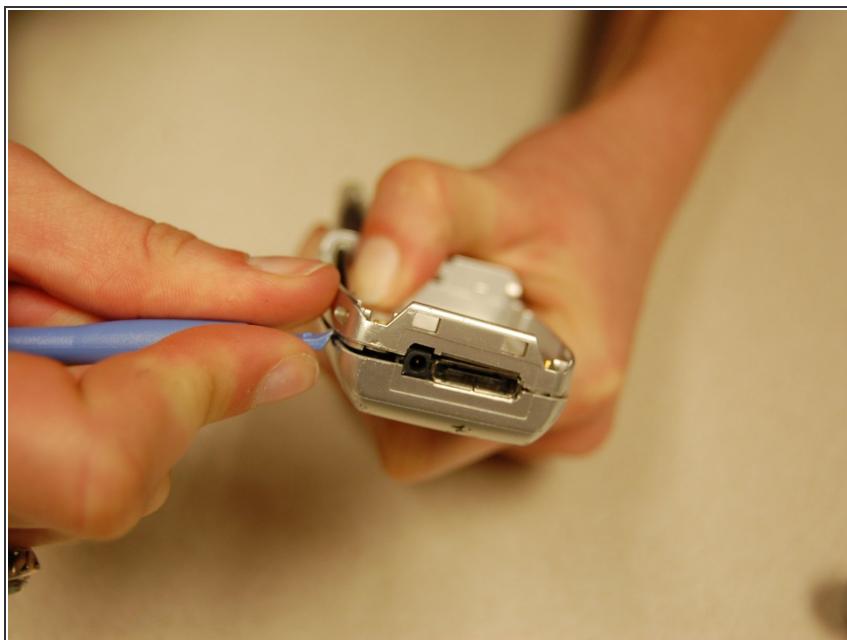


- Use the plastic opening tool and slide it around the phone to pull apart the front and back casing.

Step 5 — Separate Cases

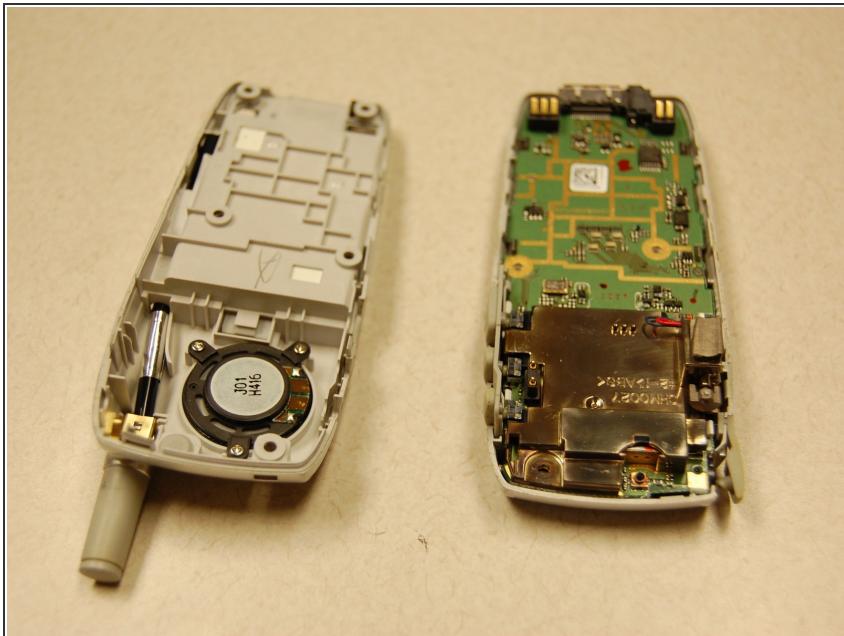

- Separate the two cases.

Step 6 — The Front Case

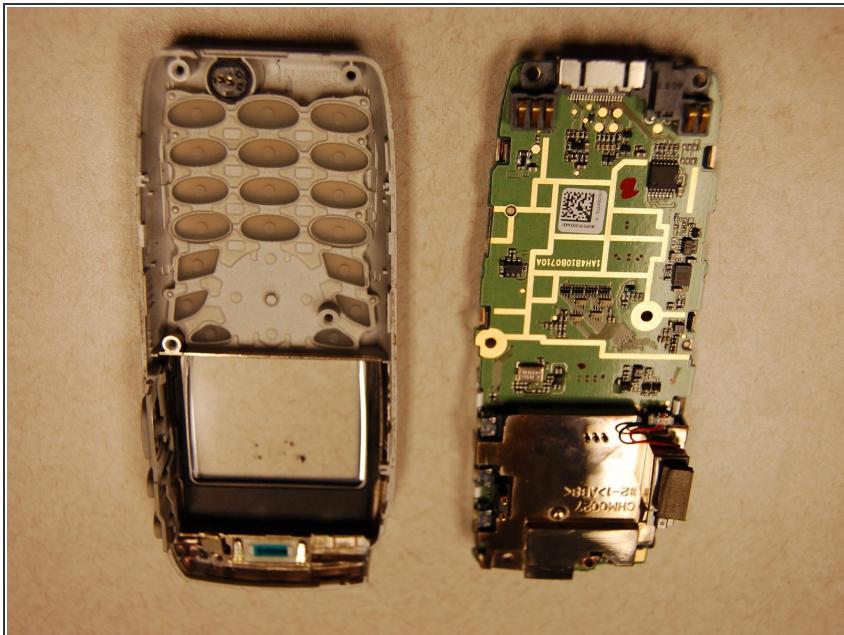

- Use the plastic opening tool to remove the motherboard from the front case.

Step 7 — Rubber Keys



- The plastic keys are attached to the back side of the front case. To remove the keys, pull the plastic piece out of the front case using the plastic opening tool.

To reassemble your device, follow these instructions in reverse order.