


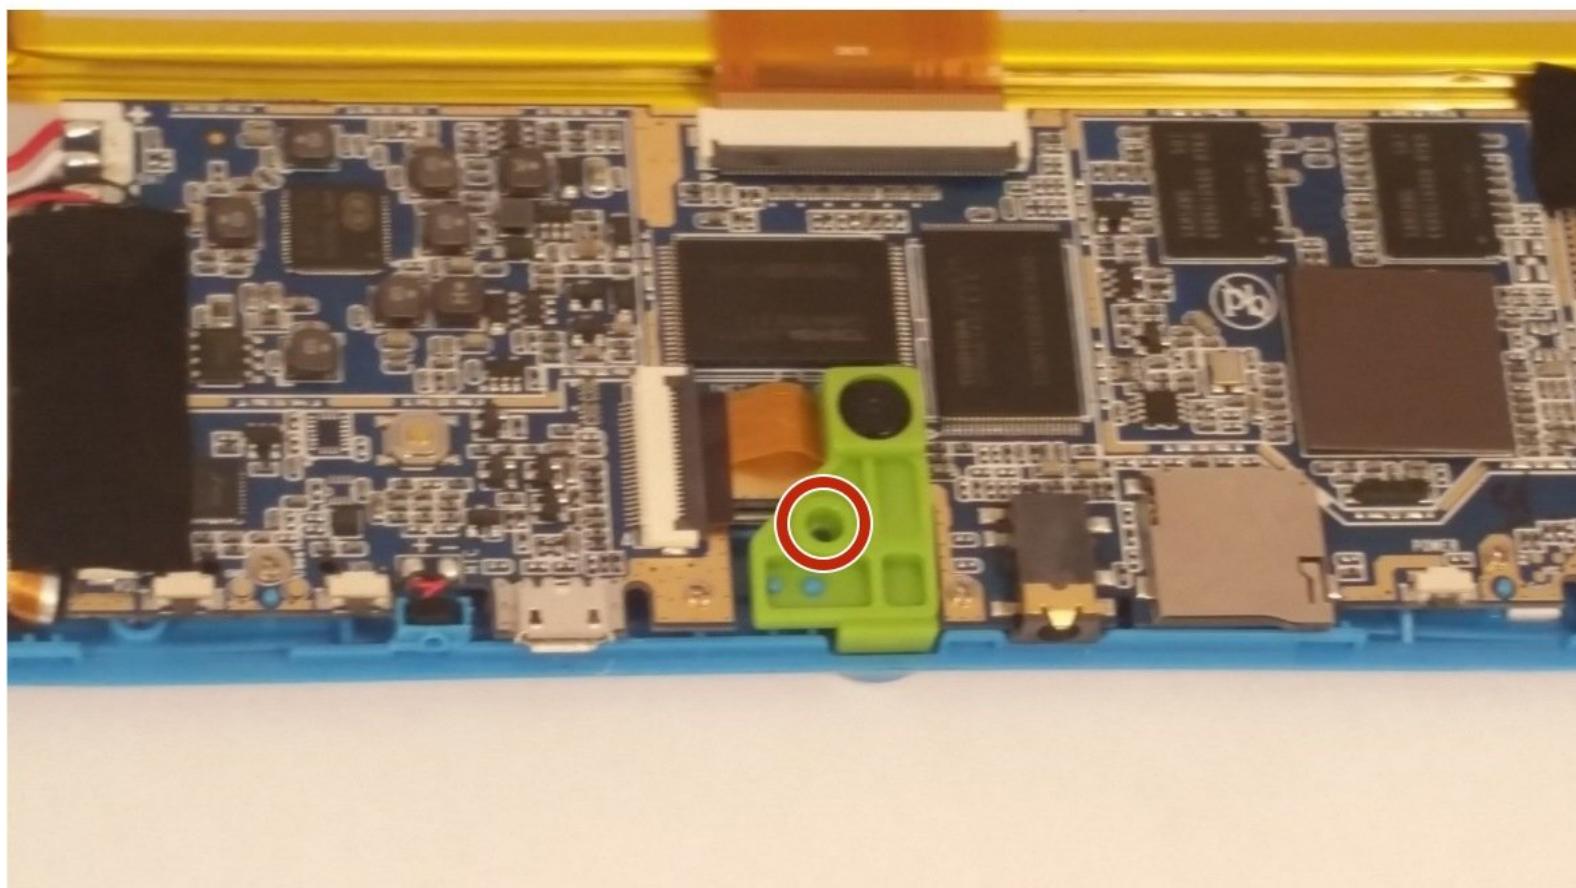

Sprout Channel Cubby Camera Replacement

Removal and replacement of the device's camera.

Written By: jasen biggins




INTRODUCTION

This guide will require the use of a Phillips head screwdriver. The ribbon connector is usually the reason the device will need this replacement.

TOOLS:


- [iFixit Opening Tools](#) (1)
- [64 Bit Driver Kit](#) (1)

Step 1 — Dissasemble the device

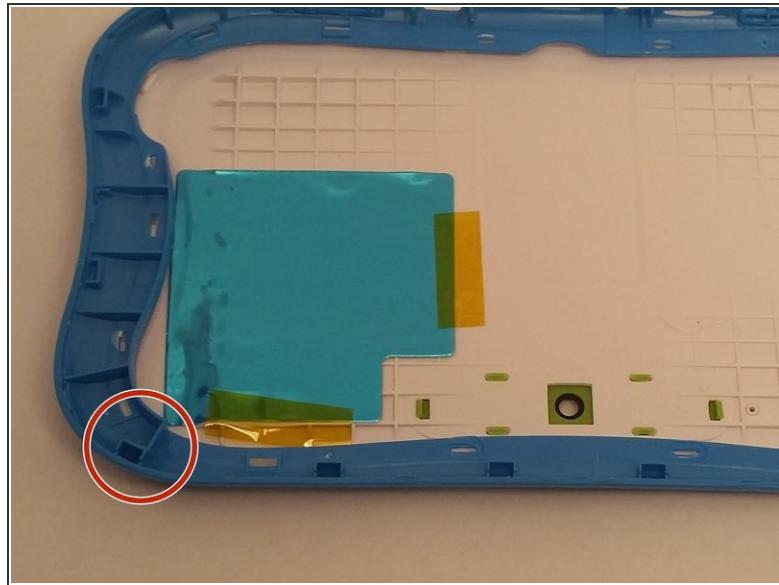


- Use an opening tool to push in and release sixteen small plastic clips around the edge of the case. As the clips are released, gradually pry the case apart.
(i) It is easiest to start on the corners.

Step 2 — Remove the screw

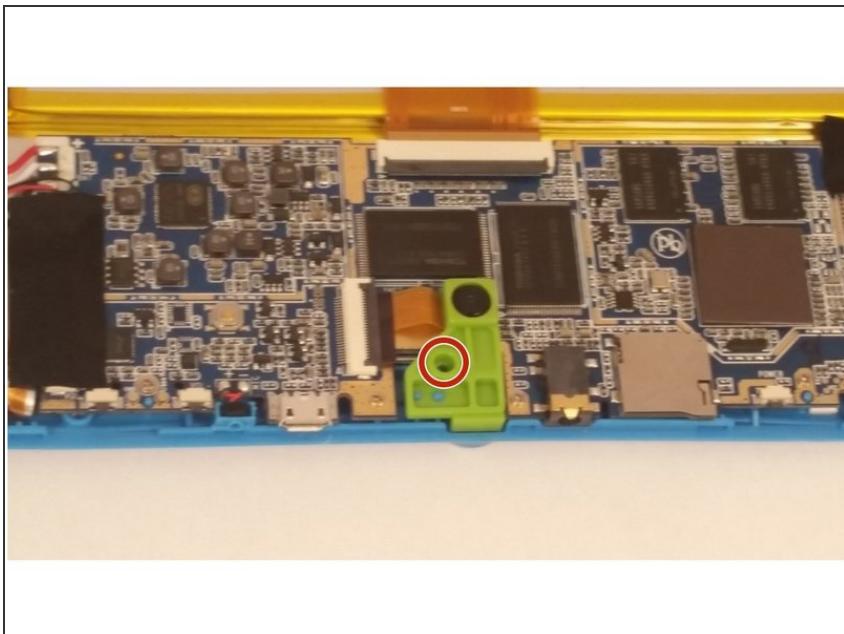

- Remove the single screw attaching the camera to the device.

Step 3 — Remove the camera

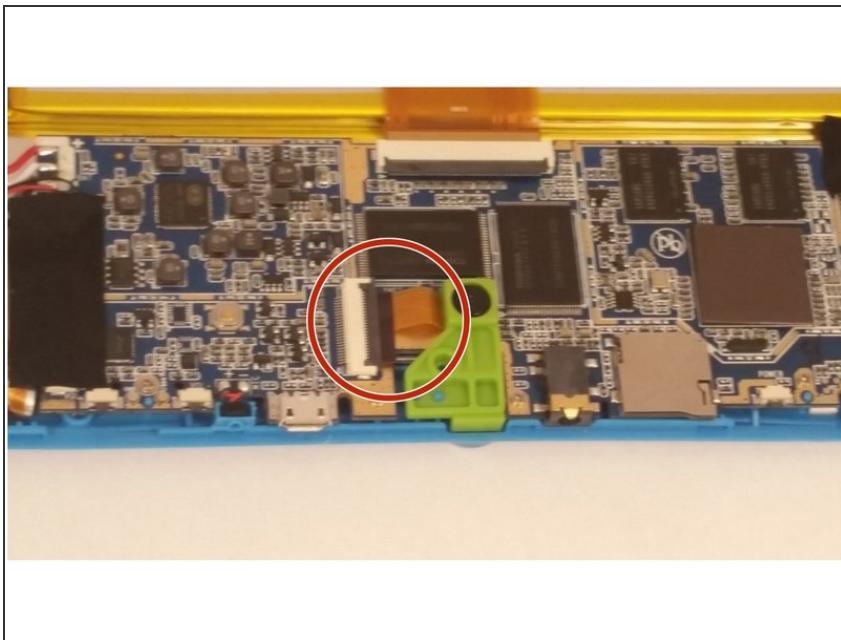

- Use the opening tool or a fingernail to [release the ZIF connector](#).
- Disconnect the camera ribbon cable.
- Remove the camera.

To reassemble your device, follow these instructions in reverse order.