



SteelSeries Arctis Pro Plus GameDAC Microphone Cable Replacement

Follow this guide to remove a broken microphone cable from your SteelSeries Arctis Pro Plus GameDAC headset.

Written By: Vanessa Beeler



This document was generated on 2019-12-24 10:04:28 PM (MST).

INTRODUCTION

When accessing the microphone, be careful of ripping the wire connections or breaking the plastic casing. Make sure to follow this guide attentively to ensure that these issues do not occur.

TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)
- [Tweezers \(1\)](#)
- [Soldering Iron \(1\)](#)

Step 1 — Headset Ear Cushions



- Lift the edge of the cushion and pull out slightly.
- Work your way around the cushion until it comes off completely.
- Repeat for the other cushion.

Step 2 — Headset Circuit Board



- Remove the three 5mm screws with a Phillips #0 driver head on the headphone with the microphone.

Step 3



- Lift the speaker off the headset to expose the circuit board.


⚠ Be careful not to lift the speaker too quickly or too forcefully to prevent the wires from being pulled out of their connections.

Step 4



- Remove the three 5mm screws using a Phillips #0 driver head.

Step 5

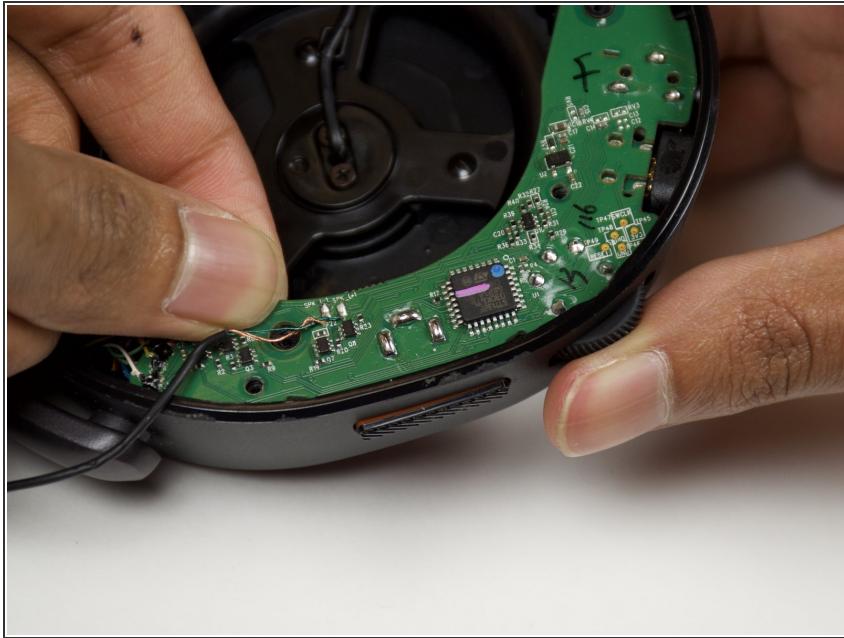


- Lift the circuit board out of the plastic housing.
- *i* Press in on the volume wheel while pulling on the circuit board to help maneuver the circuit board out of the housing.

Step 6 — Microphone Cable



- Pull up on the wires connected to the circuit board using tweezers to remove the circuit board from inside the headset.

Step 7

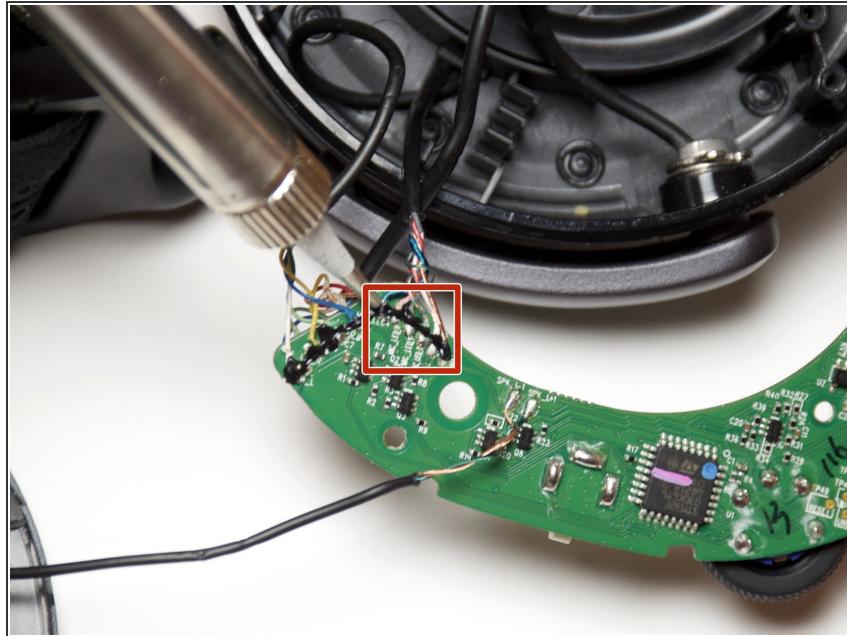


- Desolder the six wired connections on the circuit board.

(i) For help desoldering connections, follow this useful guide on [How To Solder and Desolder Connections](#).

 Use caution when soldering. The heated tip may cause damage to the board or burn you.

Step 8

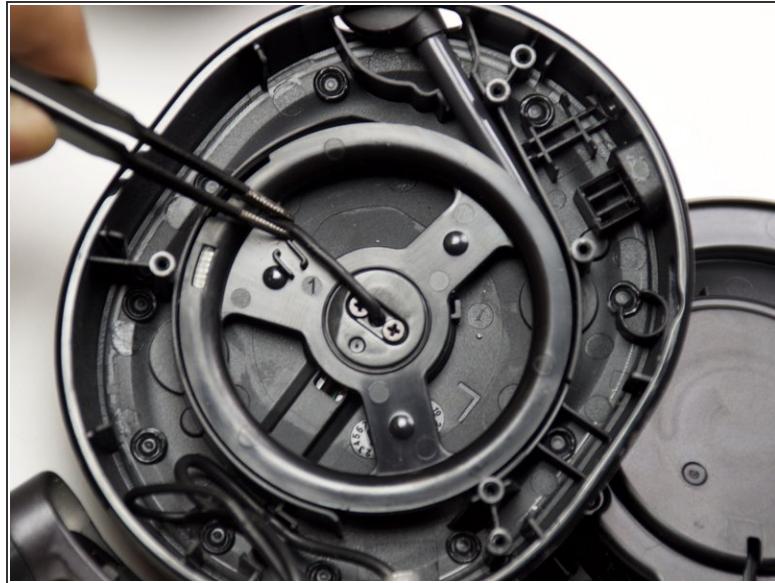

- Lift up the wire on the rotating wheel with tweezers to move it out of the way of the screws.
- Remove the two 5mm screws with a Phillips #0 driver head.

Step 9



- Pull out the rotating wheel from the headset casing.
- Remove the microphone from the casing with the rotator wheel.

(i) After removing the rotating wheel, lift the wheel up and use your other hand to feed the microphone through the case.

Step 10



- Pull the microphone wire out of the wheel.

 Forcefully removing the microphone from the wheel may break the plastic wheel.

- Pull the wire and wheel apart to remove the entire component.

To reassemble your device, follow these instructions in reverse order.