



# SteelSeries Arctis Pro Plus GameDAC Secondary Button Replacement

This guide will replace the secondary button located next to the volume knob on the SteelSeries Arctis Pro Plus GameDAC.

Written By: Kyle Chang



This document was generated on 2020-01-22 01:36:59 AM (MST).

## INTRODUCTION

If you need to replace your GameDAC secondary control button, there are a couple of wire connections one needs to be careful for when opening the GameDAC. Follow this guide to safely access and replace the button from the circuit board.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)
- [Soldering Iron](#) (1)
- [iFixit Opening Picks set of 6](#) (1)

## Step 1 — GameDAC Secondary Button





- Remove the plastic cover using the iFixit opening tool to pry the cover open.
- Insert opening picks to keep the cover open as you work your way around the GameDAC.
- Pop the cover off.

## Step 2



- Remove the control wheel from the GameDAC by pulling on the knob.

## Step 3

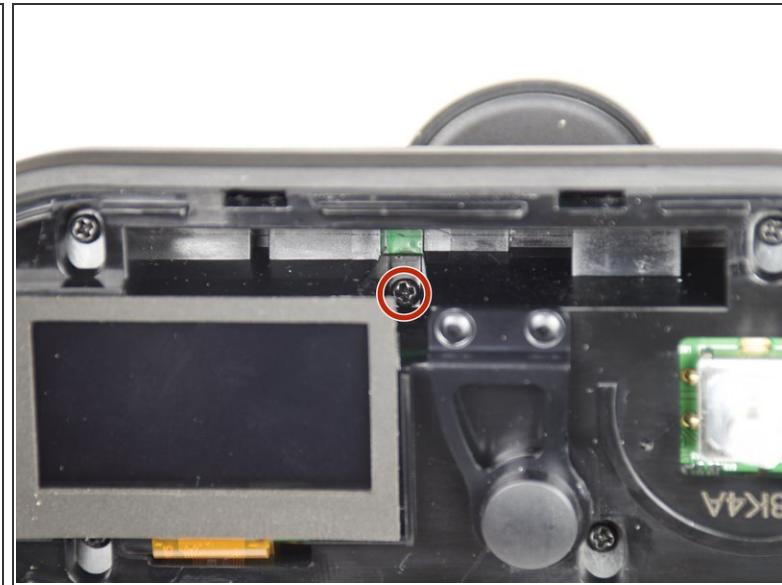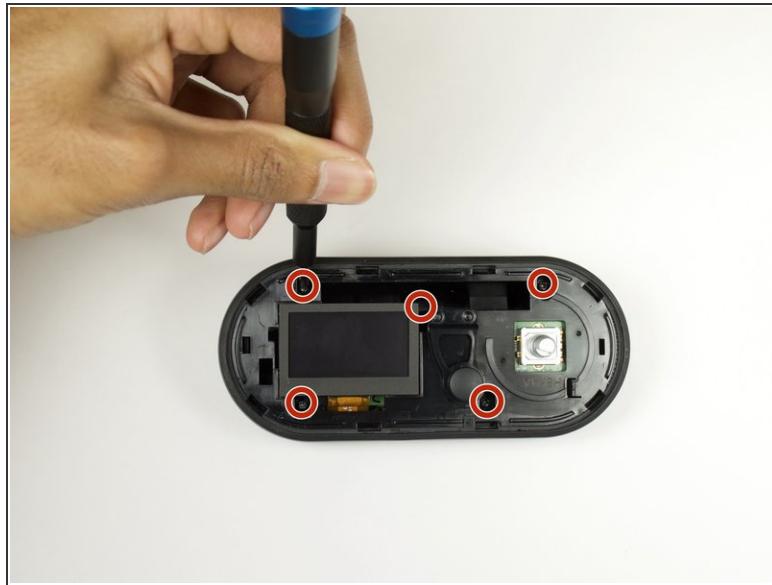

- Remove the five 6mm screws using the Phillips #0 driver head.
- ⓘ There is one screw hidden on the upper right-hand side of the display.


## Step 4



- Hold the sides of the GameDAC and pull apart.

**⚠** Don't pull the two sides apart quickly or forcefully to avoid tearing the wire connection between the two boards.

## Step 5

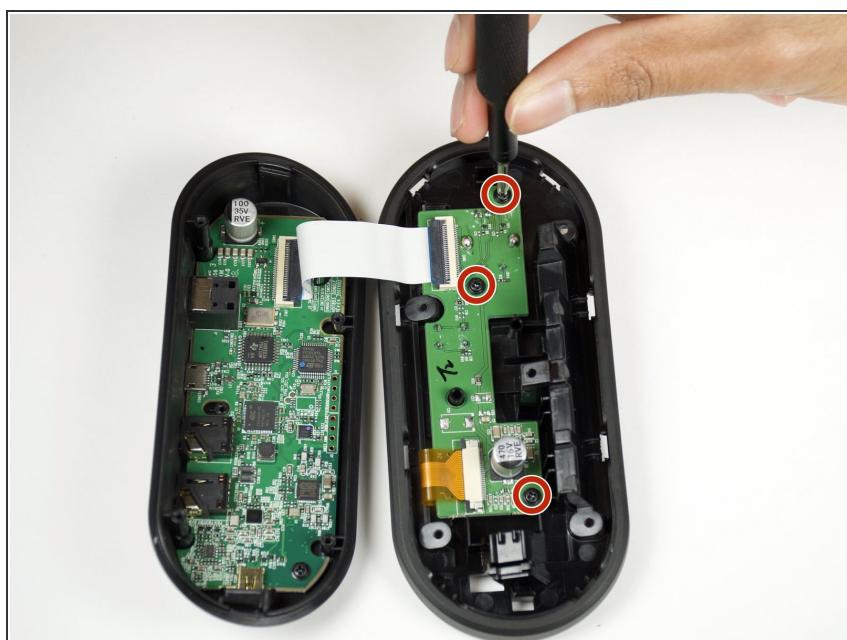

- Remove the three 4mm screws from the circuit board using the Phillips #0 driver head.

## Step 6



- Desolder the four button pins from the board to remove the button.

**i** For help desoldering connections, follow this useful guide on [How To Solder and Desolder Connections](#).

**!** Use caution when soldering. The heated tip may cause damage to the board or burn you.

To reassemble your device, follow these instructions in reverse order.