



# Sun King Solo Solar Lantern Hand Strap Replacement

This guide will show you how to replace the hand strap on the lantern.

Written By: Anna



## INTRODUCTION

Use this guide to replace a broken or damaged hand strap.

### TOOLS:


- Phillips #1 Screwdriver (1)

## Step 1 — Locate and Remove the Screws




- Place the lamp *LED side down* on a clean workspace.
- Remove the screws holding the casing together using a Phillips #1 Screwdriver.

## Step 2 — Separate the Device

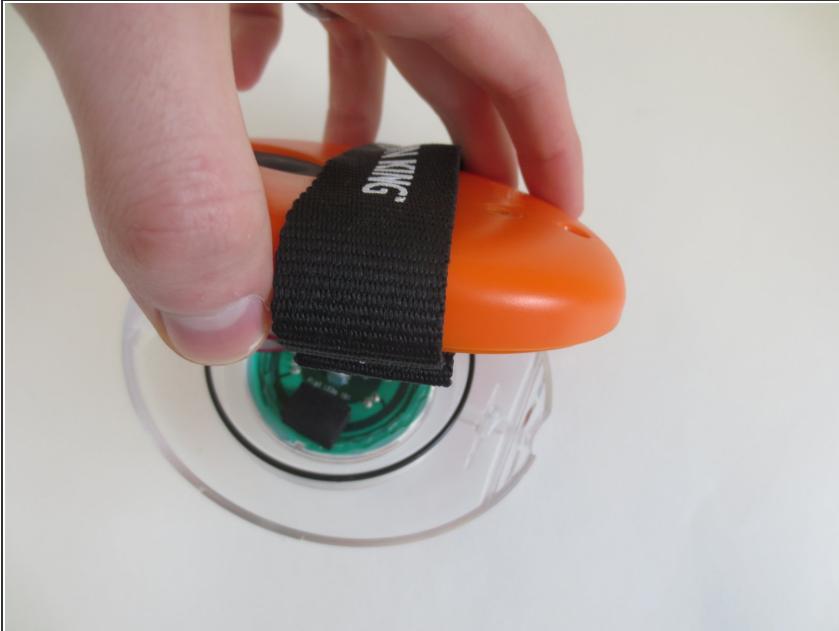


- Gently pull the two halves of the lamp apart.

## Step 3 — Remove Strap

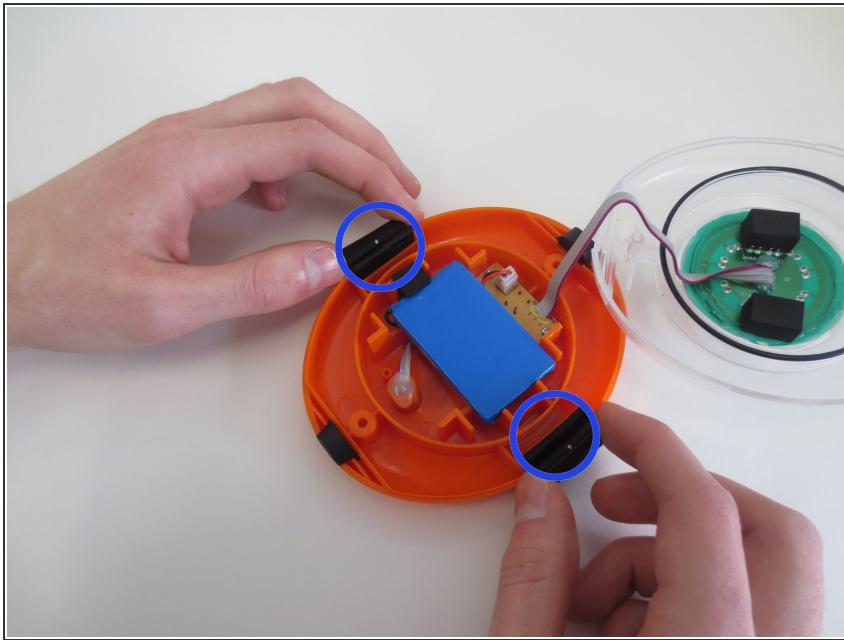

- Remove both ends of the strap from the orange casing by pulling up.

## Step 4 — Replace the Strap

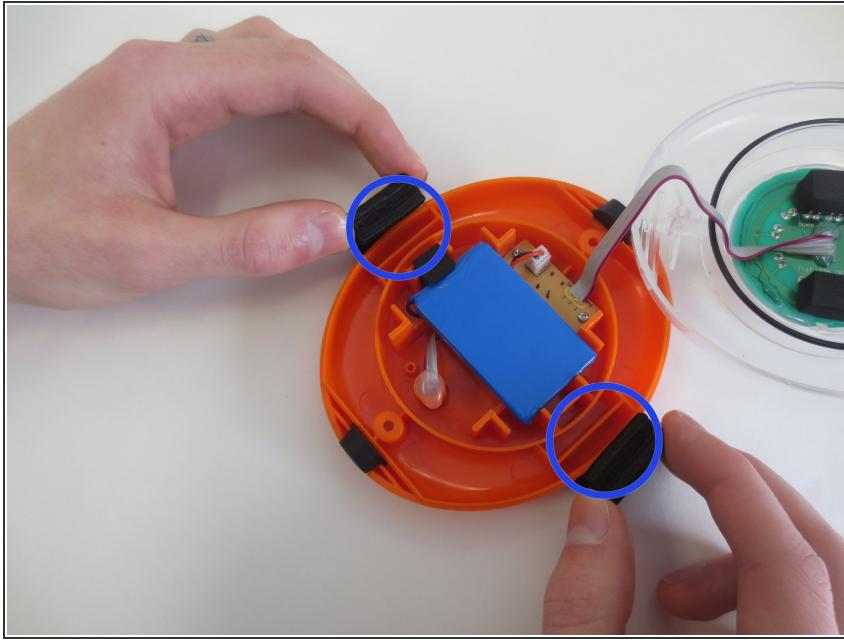

- Insert the ends of the new strap into the strap housing on both sides of the orange component.

*(i)* Either strap housing (inner or outer) can be used to adjust the strap length.

To reassemble your device, follow these instructions in reverse order.