



Sungale Cyberus ID707WTA Speaker Replacement

This guide will allow the user to successfully replace a nonworking speaker on the Sungale Cyberus id707wta.

Written By: Austin_Parkes



This document was generated on 2019-09-17 07:10:35 PM (MST).

INTRODUCTION

This guide will show the steps involved in replacing the speaker.

TOOLS:

- Fingers (1)
- Phillips #1 Screwdriver (1)
- iFixit Opening Tools (1)
- Pry Bar (1)

Step 1 — Battery




- Press firmly on lower portion of the back cover and slide the cover towards the bottom to remove cover.

Step 2



- Pull on the plug carefully until it releases from the port and simply pull the battery out after.

Step 3 — Speaker

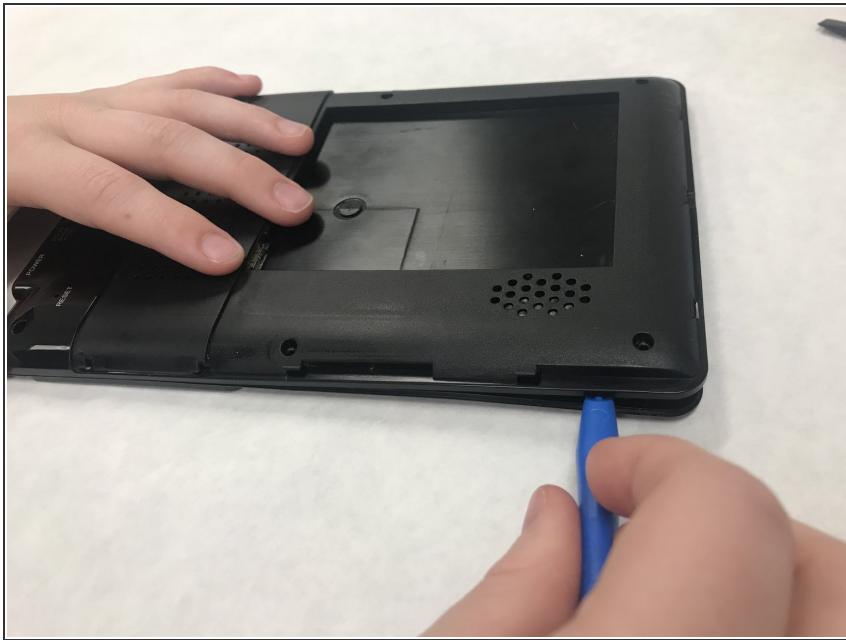


- Pry open the casing with a plastic opening tool .

Step 4




- Unscrew the five 4.5 mm screws to allow access to the motherboard.
- Lift the motherboard and set it onto the backside of the screen.

Step 5

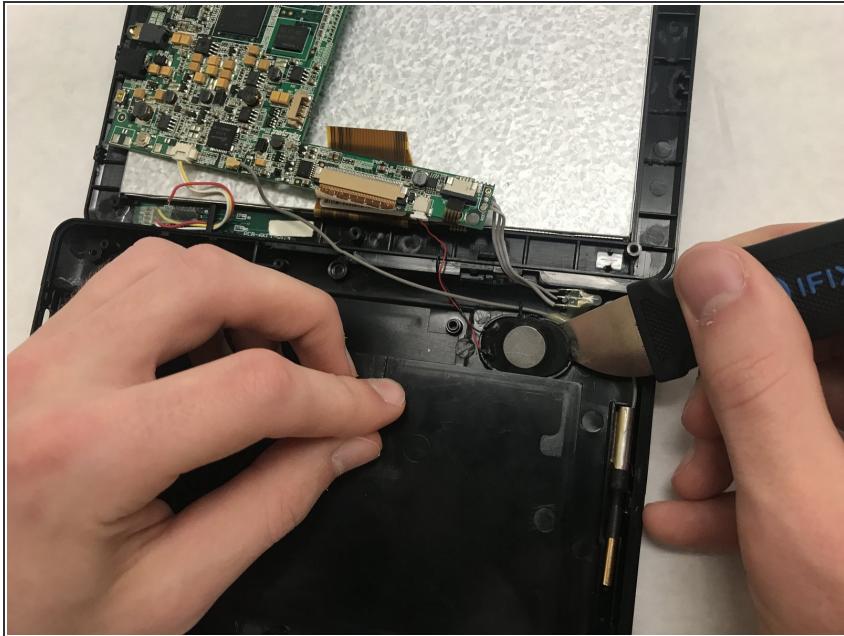

- Pry the speaker out of retainer clip with iFixit pry tool.

Step 6

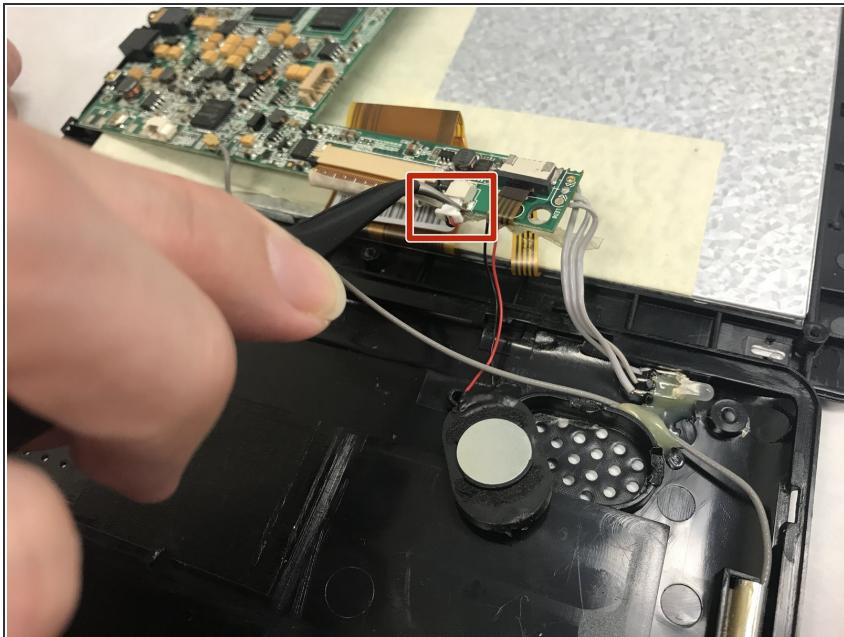

- Pry the speaker clip from the motherboard using tweezers.

To reassemble your device, follow these instructions in reverse order.