



# SuperSonic Matrix Mid SC-999 Speaker Replacement

In this guide, you will learn how to take out and replace the speaker in a supersonic tablet.

Written By: Logan Robinson



 **TOOLS:**


- iFixit Tech Knife (1)

## Step 1 — Opening the Back up



- First open up the back on the tablet by wedging a soft tool in between the back cover and the screen, as shown in the pictures.

## Step 2 — Setting Aside Unneeded Pieces

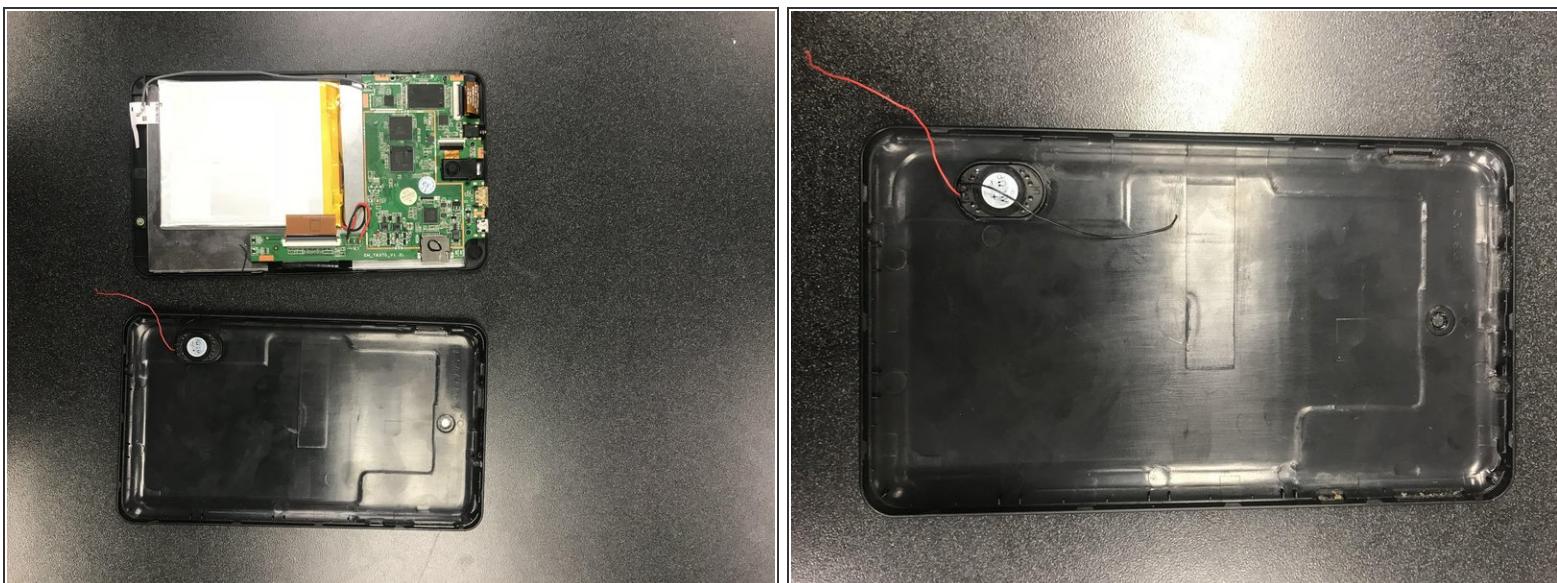


- Take the main Piece and set it to the side and foucs on the back cover.

## Step 3 — Finding the Speaker



- Locate the speaker in the bottom left corner with a red and black wire coming off the speaker and locate a fine bladed wedge, or sharp knife.

## Step 4 — Taking Out the Speaker

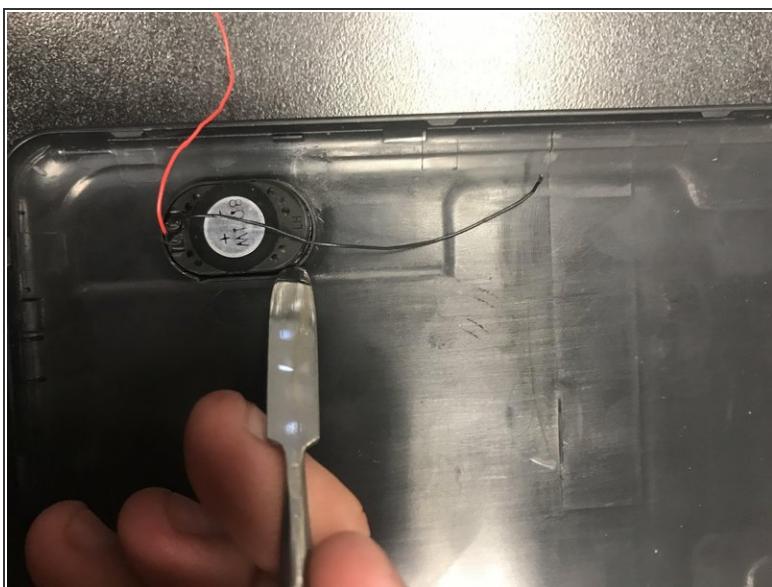

- Use your fine bladed wedge to gently pry the speaker out.

To reassemble your device, follow these instructions in reverse order.