



# Supersonic SC-777BT Motherboard Replacement

How to replace a Supersonic SC-777BT motherboard.

Written By: Maiya Webster



## INTRODUCTION

If applications, device accessories or buttons are not responsive, your motherboard needs to be replaced.

### TOOLS:


- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)
- [Phillips #000 Screwdriver](#) (1)

## Step 1 — Motherboard



- Pry open backing of the tablet using an iFixit opening tool.

## Step 2

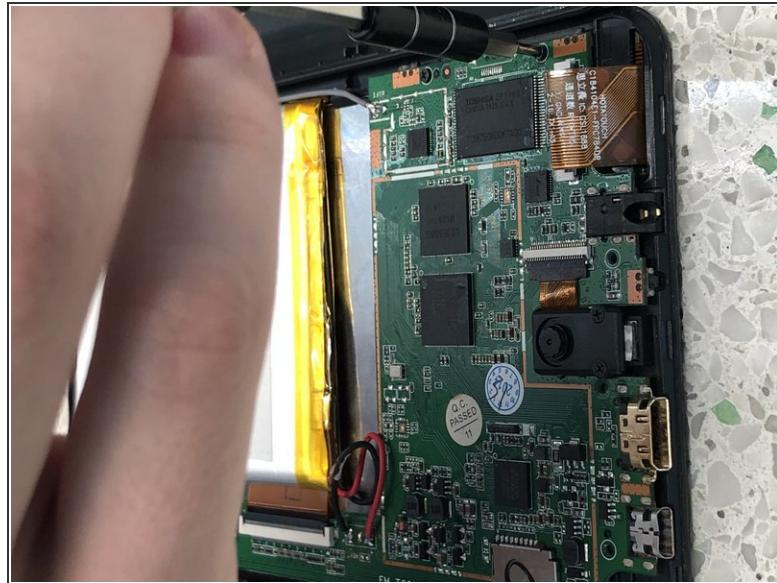


- Use a PH000 screwdriver to unscrew all four motherboard screws.

## Step 3



- Unscrew the holder of the camera and gently remove using tweezers.
- Remove the sensors using tweezers.

## Step 4

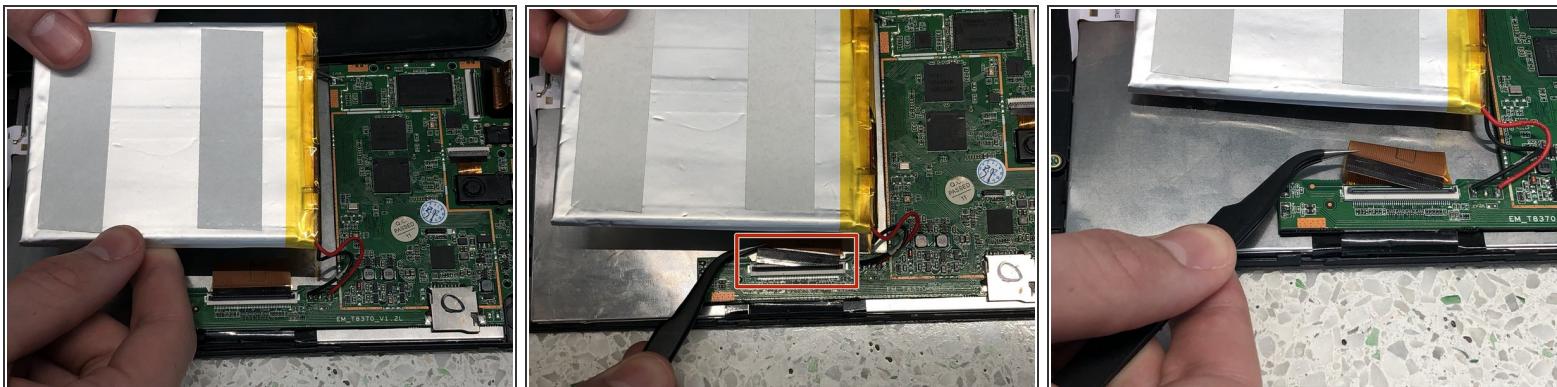


- Detach the battery.

**i** Battery is attached with adhesive; no tools needed to remove.

- Using tweezers, lift and release the ribbon cable that was covered by the battery.

## Step 5

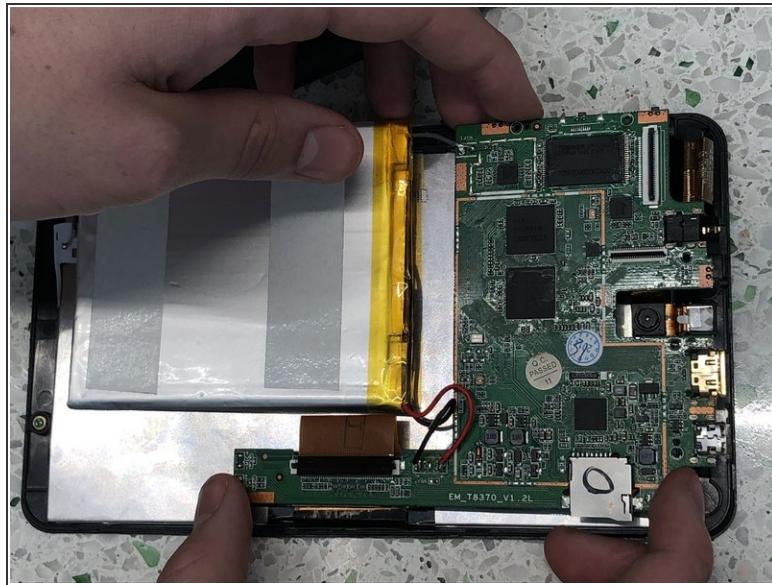

- Carefully remove the motherboard with your hands.

To reassemble your device, follow these instructions in reverse order.