




SwagTron T1 Gyroscope Replacement

A guide on how to replace the gyroscope component of the SwagTron T1.

Written By: Teagan Allen

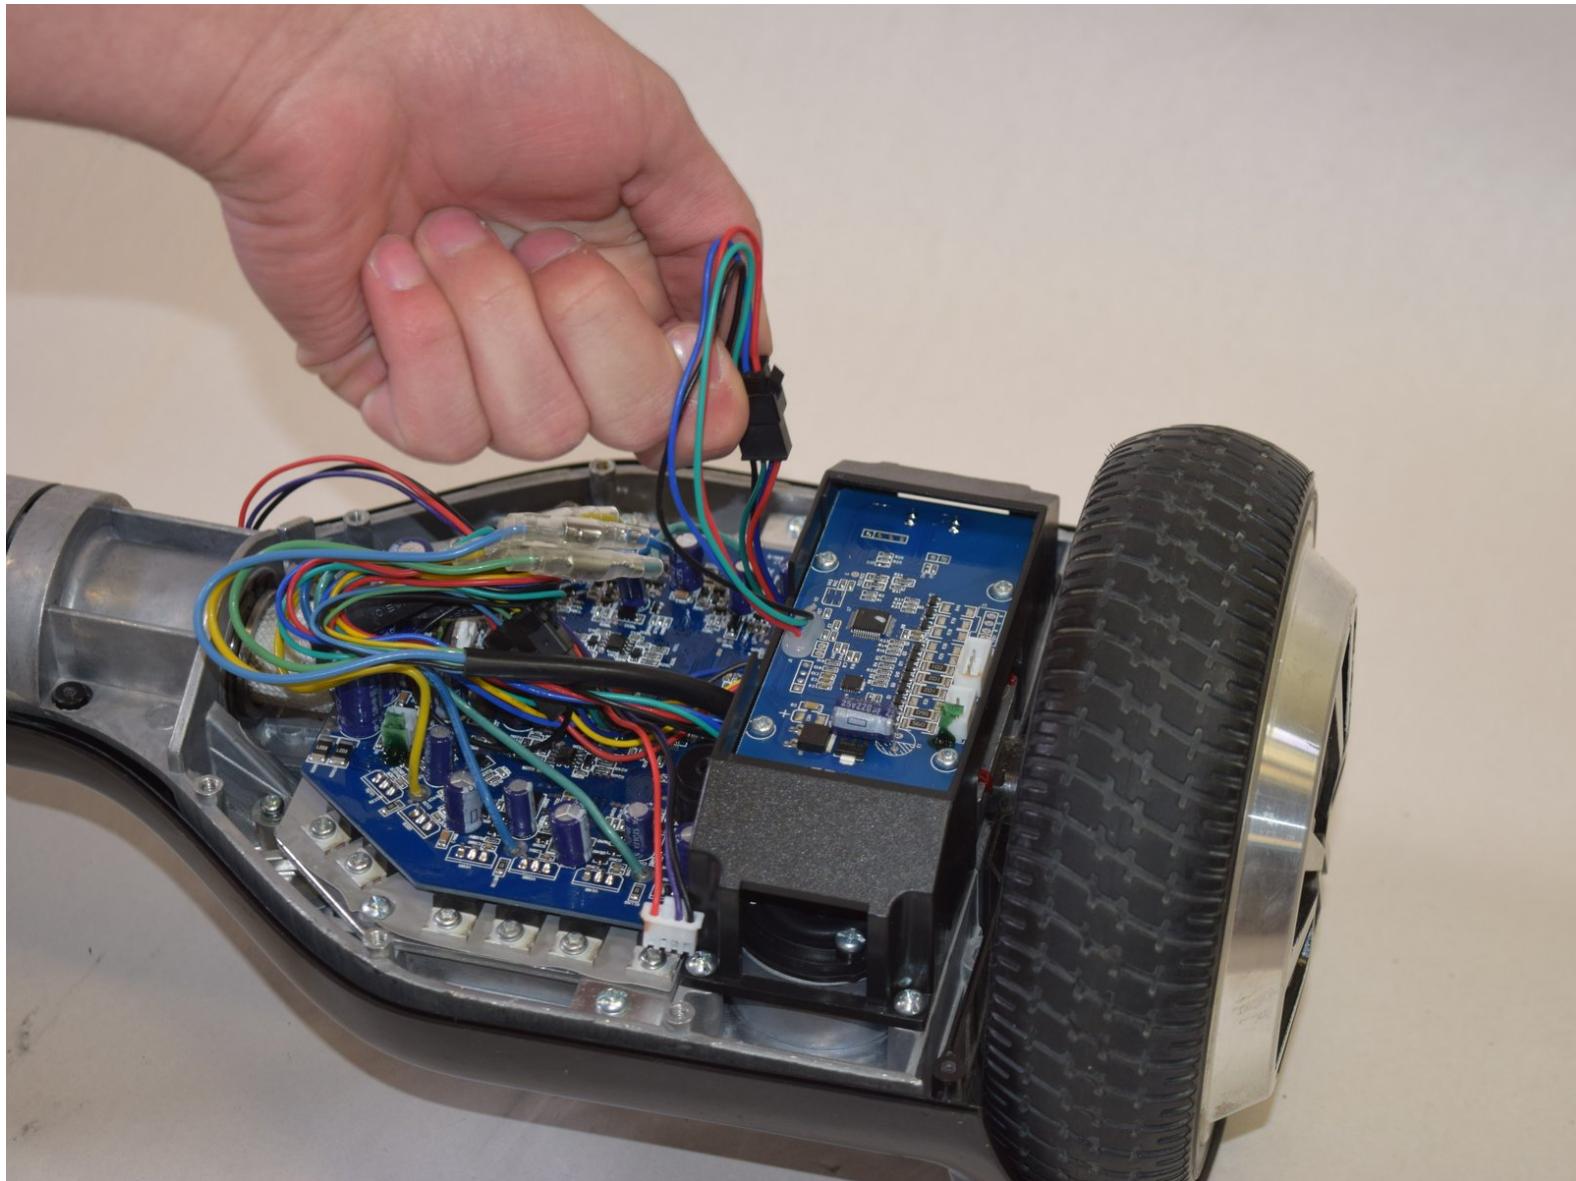


INTRODUCTION

This guide will show you how to replace the gyroscope component of your SwagTron T1. This may be necessary if the self-balancing function of your hoverboard is not working correctly. **Before attempting this replacement, recalibrate your SwagTron.** If the problem persists, continue with this replacement. This replacement can be done for the gyroscope component on either side of your SwagTron T1.

TOOLS:

- [Phillips #2 Screwdriver \(1\)](#)


Step 1 — Back Panels

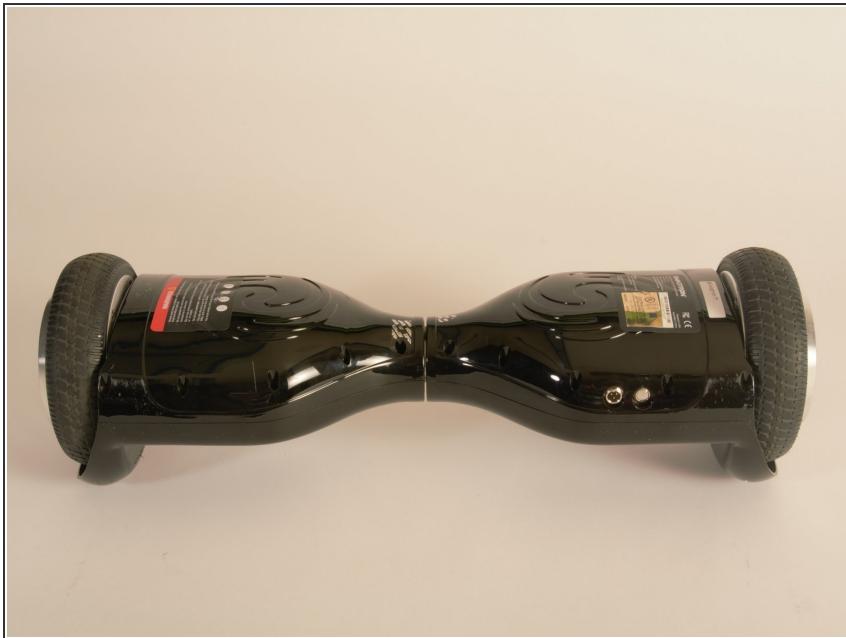

! Ensure that the SwagTron is off.

- Turn the SwagTron upside down to see the underside.

Step 2

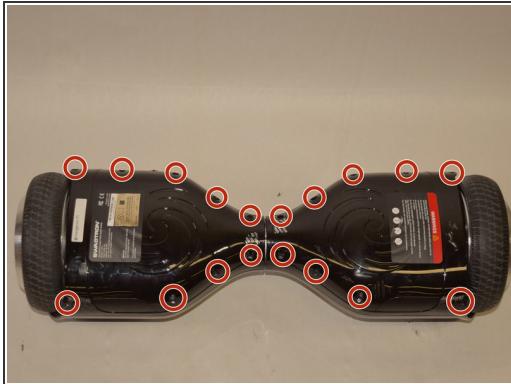


- Unscrew the eighteen 10mm screws that secure the back panels using a Phillips #2 screwdriver.
- i The screws are tightly in place. It will take effort to screw them out.

! The panel is still attached to the SwagTron by wires that go to the motherboard.

- Carefully lift the panels off

Step 3

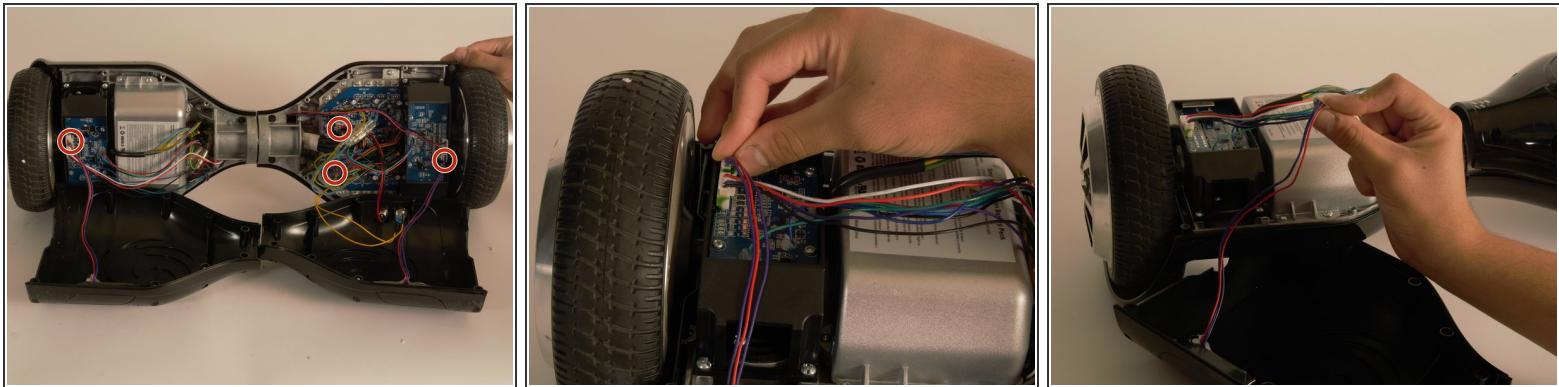


- Follow the wires from the panels to the motherboard.
- You may need to cut any zip ties that are holding the wires together.
- There is one connection on the battery side and three on the other side that must be removed.

⚠ These connections may be difficult to remove. Try to securely press the connection and pull firmly.


- Your back panels are now completely removed.

Step 4 — Gyroscope

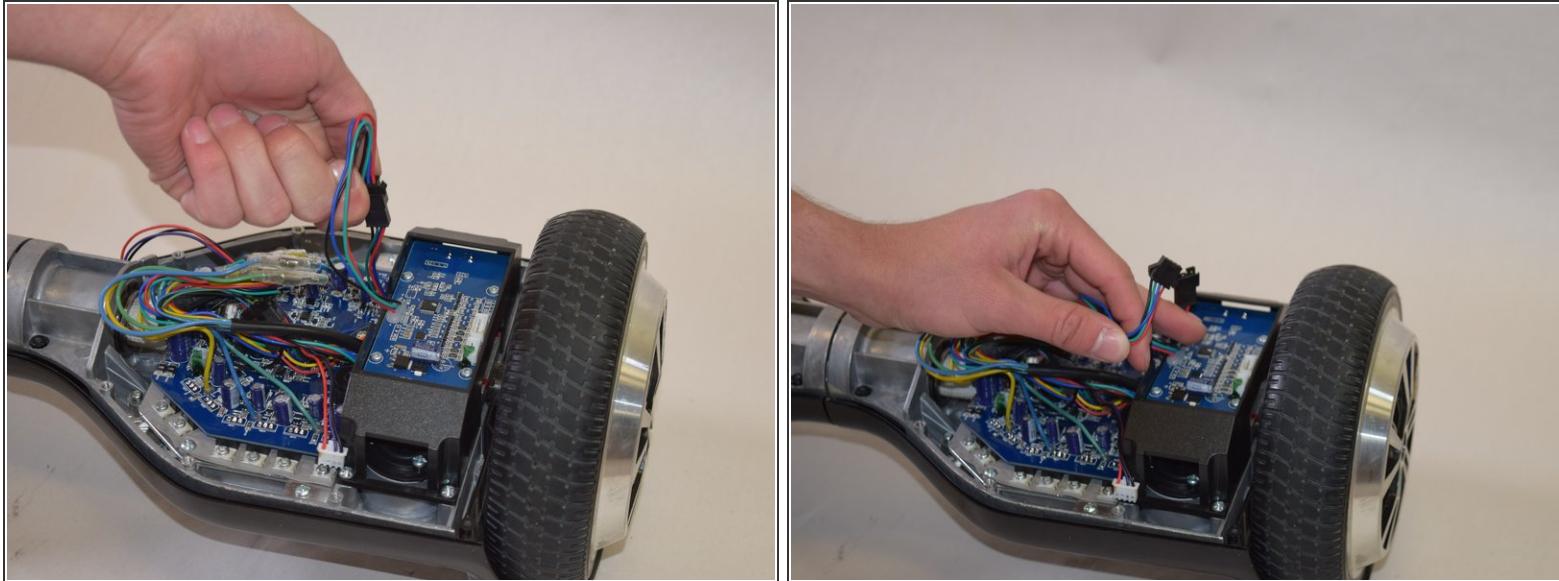


- Disconnect the gyroscope by disconnecting the wires attached to it. These wires are black, green, blue and red.

Step 5

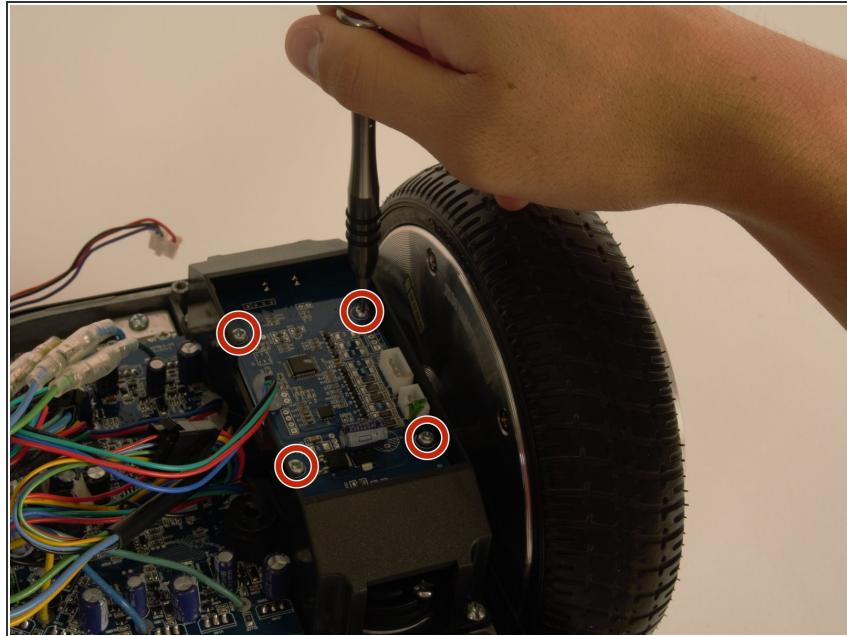

- Using your Phillips #2 screwdriver, remove the four 8mm screws marked in red from the gyroscope.

Step 6

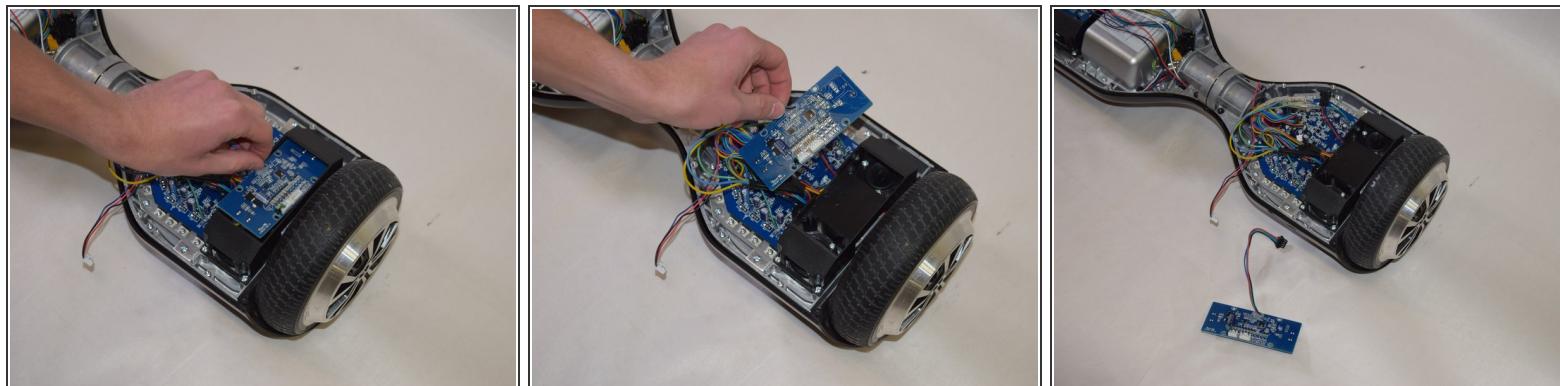

- Carefully remove the gyroscope component from the SwagTron.

To reassemble your device, follow these instructions in reverse order.