



Swann Doorphone Video Intercom Camera Replacement

This guide can be used to replace the camera on your Swann Doorphone Video Intercom.

Written By: Emily Stenke




INTRODUCTION

This guide will provide instructions on how to replace the camera on your Swann Doorphone Video Intercom to ensure the image appears clear on your LCD monitor.

TOOLS:


- JIS #0 Screwdriver (1)

Step 1 — Camera

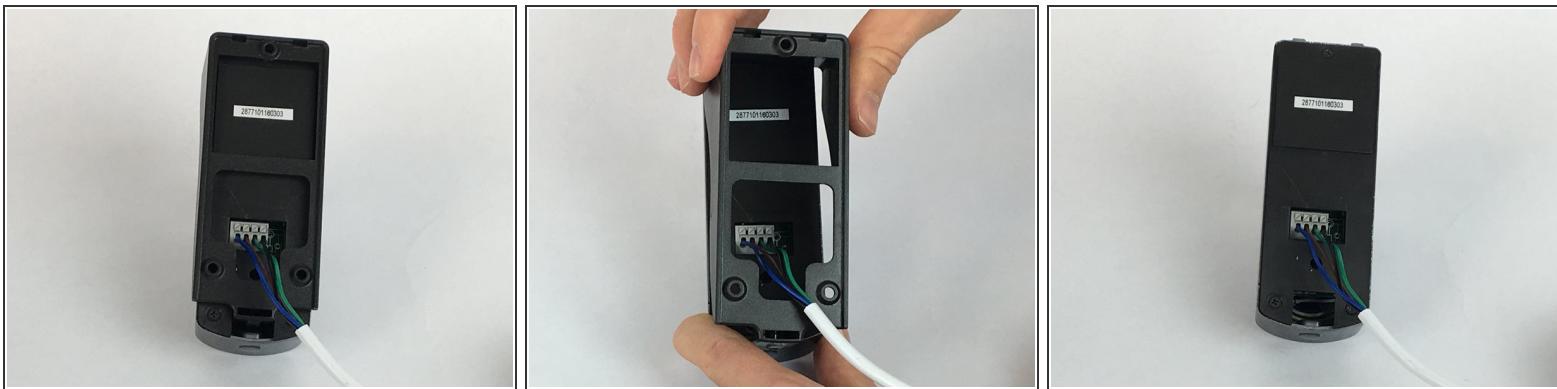

- Flip the outdoor camera over so that the underside is facing up.
- Remove the back cover by grabbing the sides of the camera and pulling towards your body.

Step 2

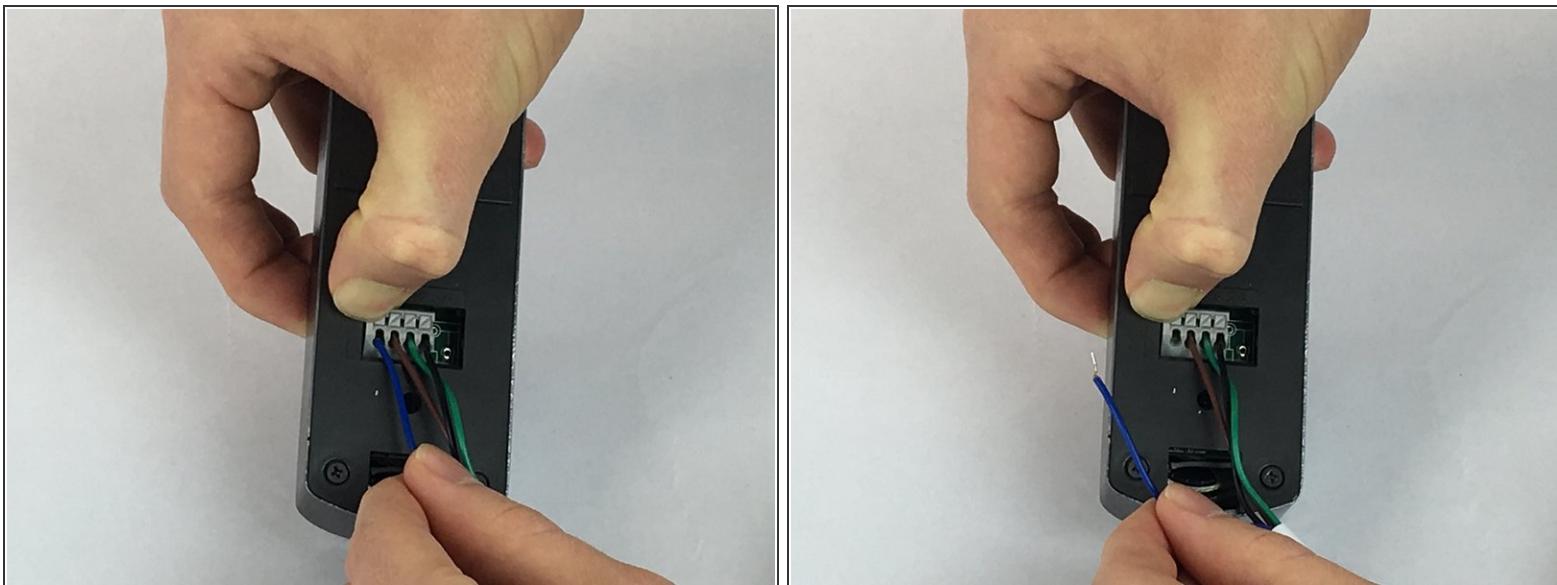

- With the back cover of the outdoor camera off, press the first gray button, with blue wire underneath, down as shown in the picture.
- While pressing the gray square button, remove the blue wire from the first opening under the button.

 Be sure to remove the same color wire for the outdoor camera as was used for the indoor video intercom.

Step 3




- Remove the other wires using the same steps as the blue wire.
- Using the JIS #0 screwdriver, remove the 2mm screws from the back plate.
- Remove the back plate by pulling the plate away from the device.

Step 4



- Using the JIS #0 screwdriver, remove the 1mm screws from behind the camera.

Step 5

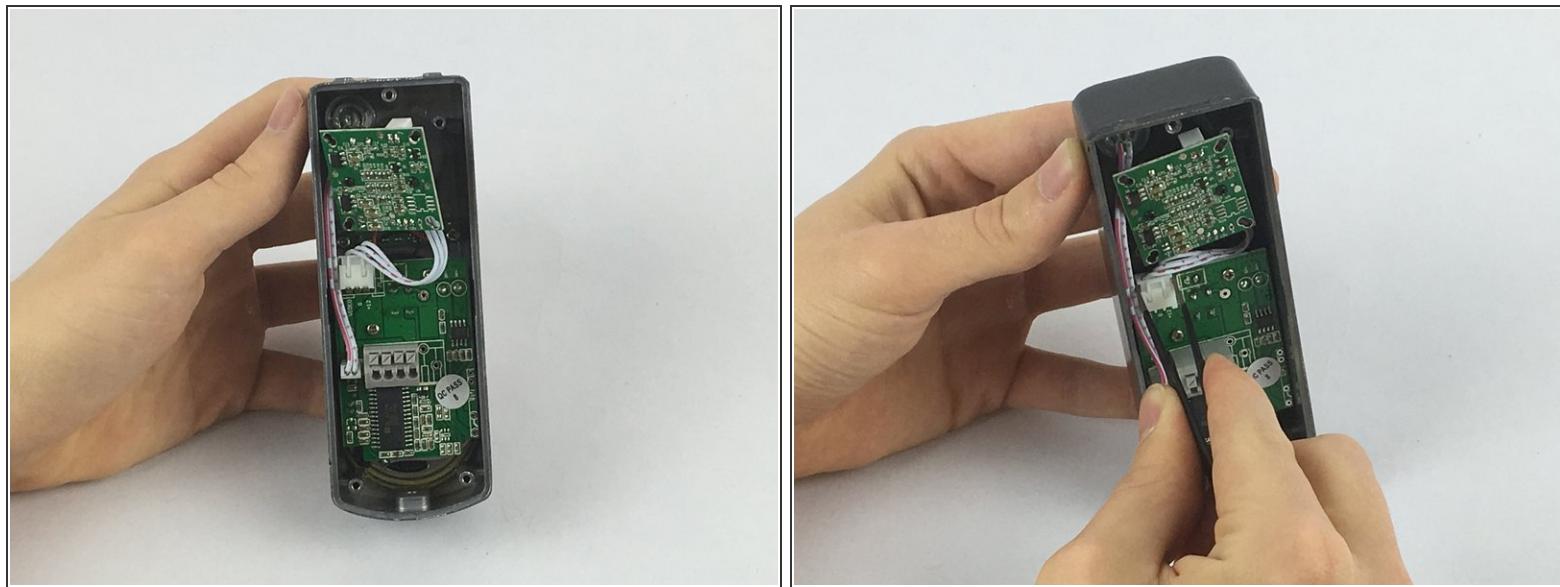

- Using one of the tweezers from the Precision Tweezers Set, gently place them around the wire connector attached to the camera.
- Pull slowly towards your body until the connector is no longer attached.

Step 6



- Remove the camera from the device.

To reassemble your device, follow these instructions in reverse order.