



Swann Doorphone Video Intercom Doorbell Replacement

This guide can be used to help replace a doorbell on the Swann Doorbell Video Intercom.

Written By: Joseph Kelemen




INTRODUCTION

This guide can be used to help replace a broken or stuck Doorbell located on the outside camera on your Swann Doorphone Video Intercom.

TOOLS:


- JIS #0 Screwdriver (1)

Step 1 — Camera

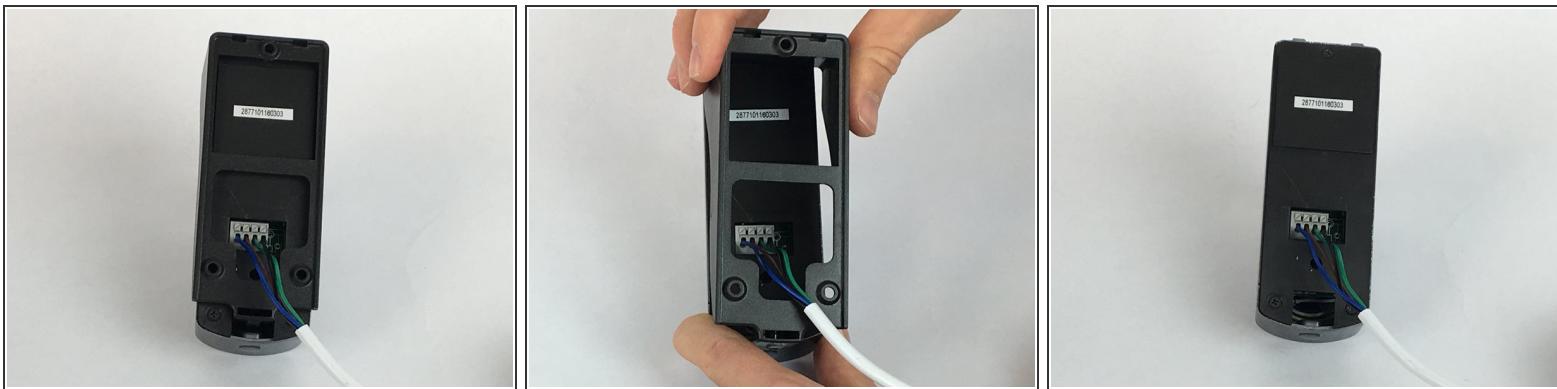

- Flip the outdoor camera over so that the underside is facing up.
- Remove the back cover by grabbing the sides of the camera and pulling towards your body.

Step 2

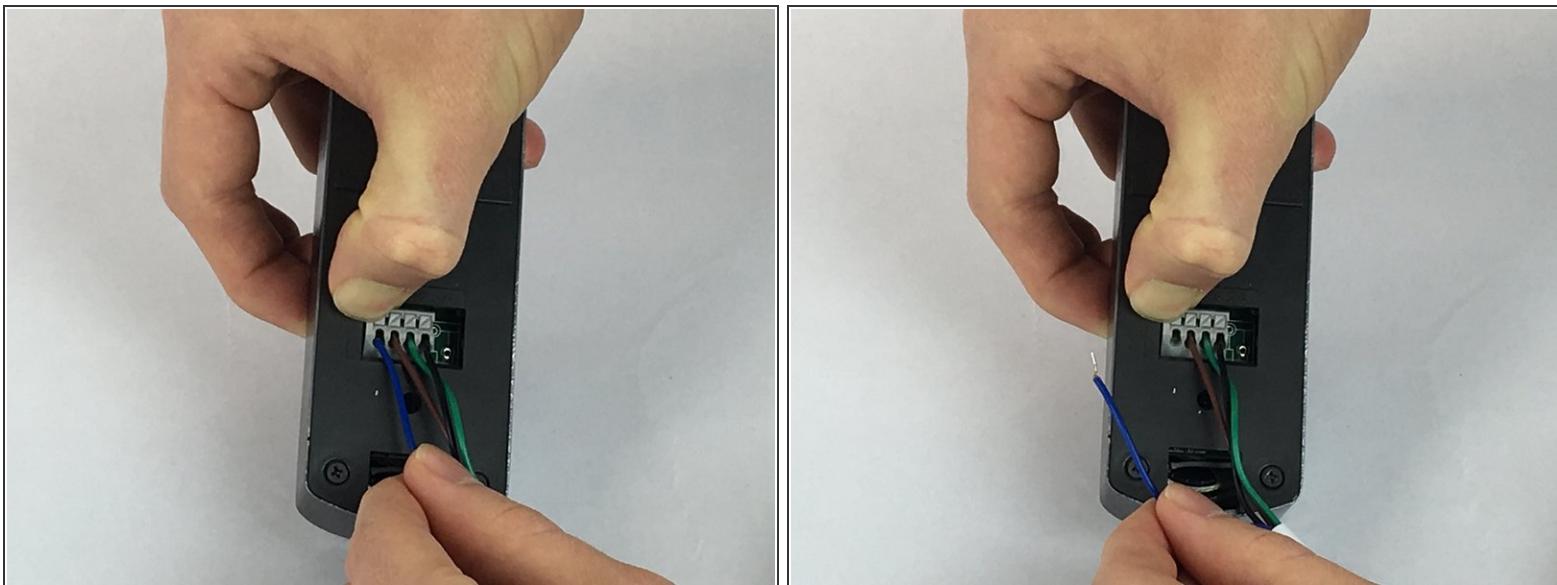

- With the back cover of the outdoor camera off, press the first gray button, with blue wire underneath, down as shown in the picture.
- While pressing the gray square button, remove the blue wire from the first opening under the button.

 Be sure to remove the same color wire for the outdoor camera as was used for the indoor video intercom.

Step 3




- Remove the other wires using the same steps as the blue wire.
- Using the JIS #0 screwdriver, remove the 2mm screws from the back plate.
- Remove the back plate by pulling the plate away from the device.

Step 4



- Using the JIS #0 screwdriver, remove the 1mm screws from behind the camera.

Step 5

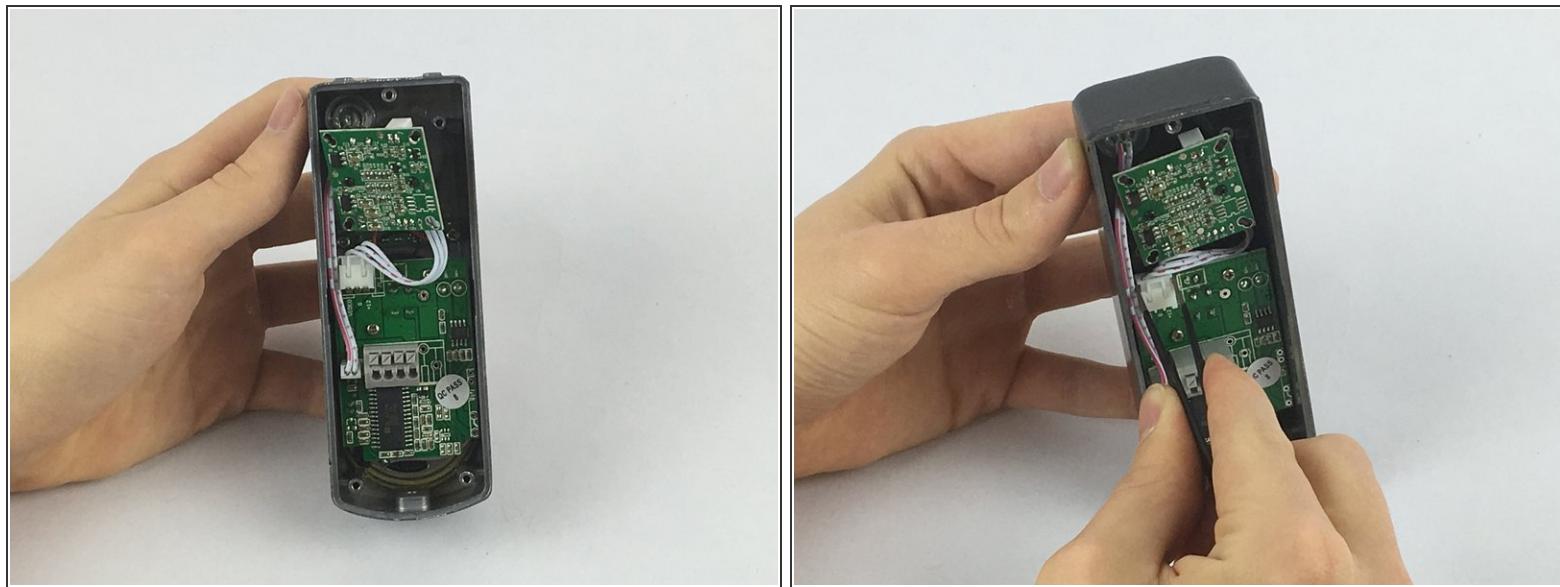



- Using one of the tweezers from the Precision Tweezers Set, gently place them around the wire connector attached to the camera.
- Pull slowly towards your body until the connector is no longer attached.

Step 6





- Remove the camera from the device.

Step 7 — Doorbell

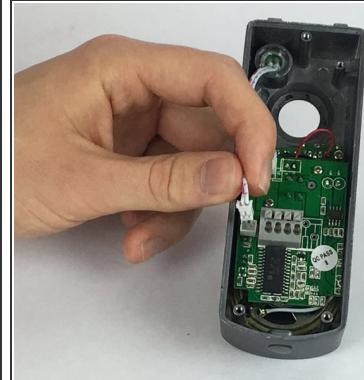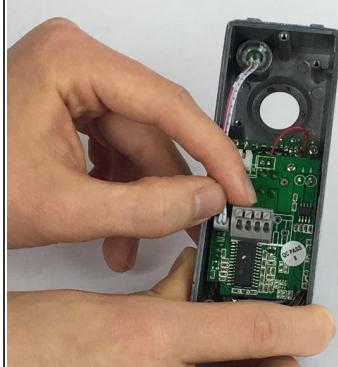


- Using your fingers, take hold of the wire connector attached to the main board
- Pull slowly towards your body until the connector is no longer attached.

Step 8

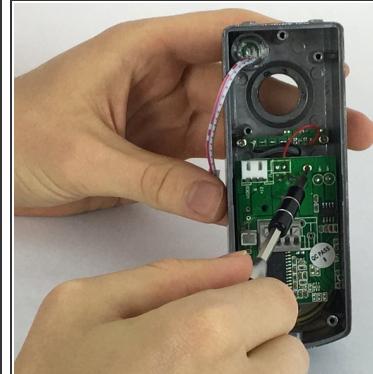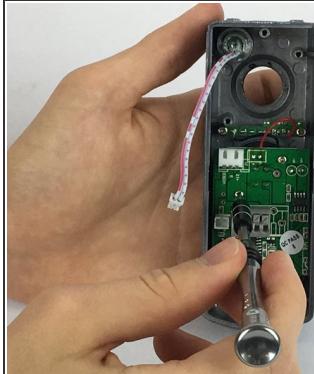


- Using the JIS #0 screwdriver, remove the 2 mm screws diagonal from each other from the main board.

Step 9

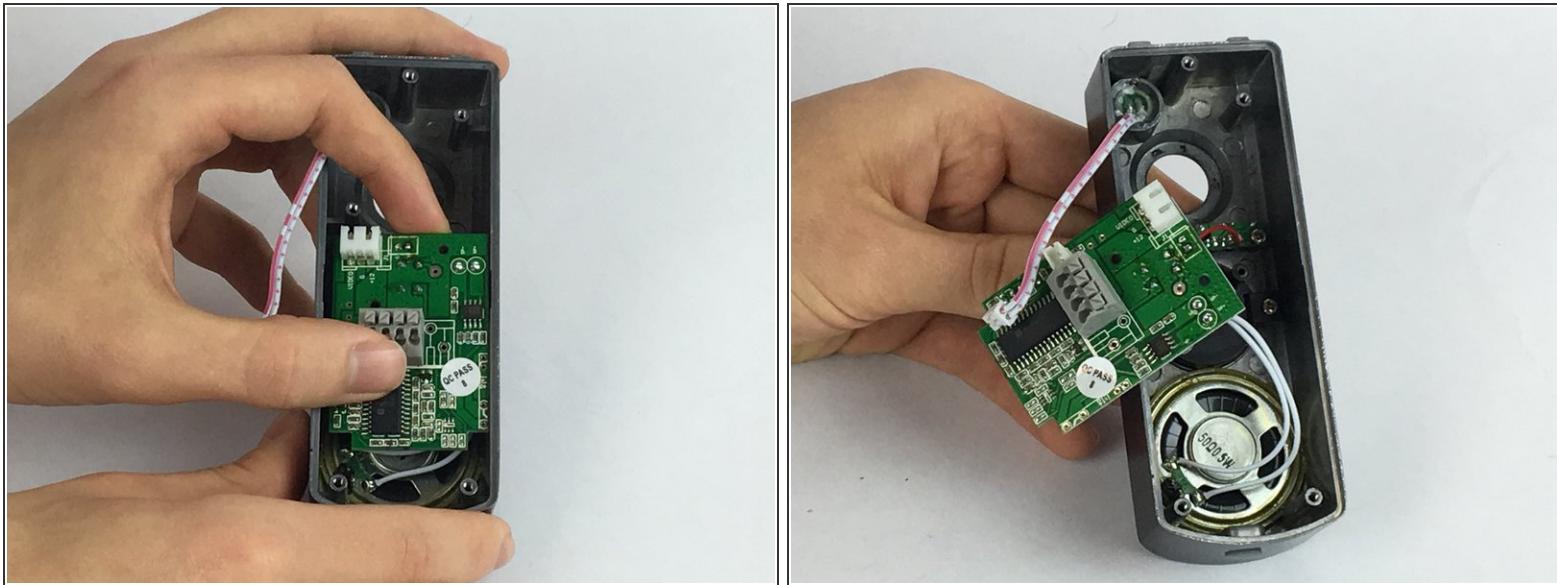


- Gently pull the main board away from the inside of the device and leave to the side.
- The main board will still be attached to the device by a remaining set of wires, but do not need to be removed.

Step 10

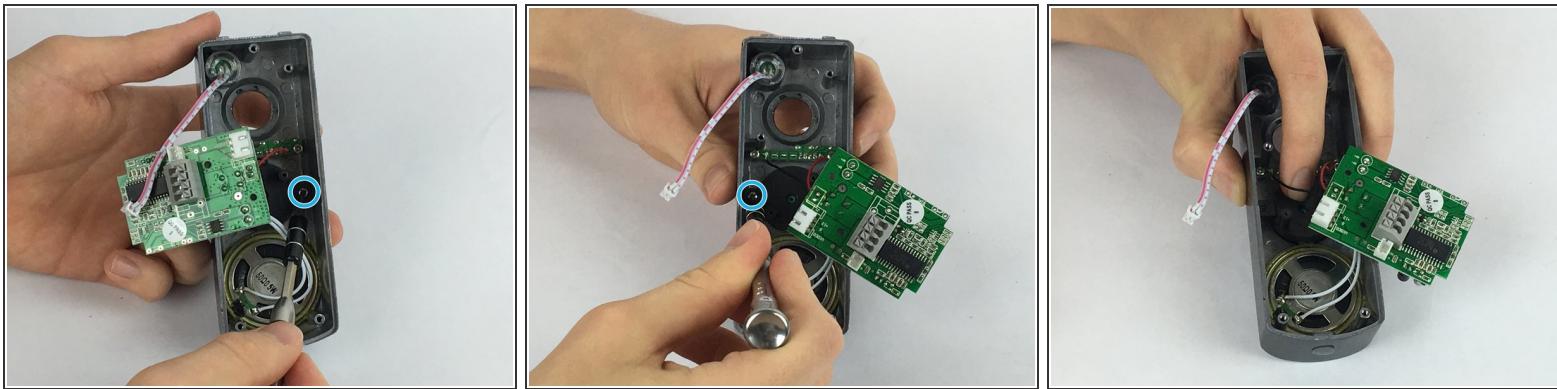

- Using the JIS #0 screwdriver, remove the 1mm screws from each side of the doorbell spring-loaded cover-plate
- ⚠ While removing the second screw, hold down the cover-plate with your index finger to prevent the plate from springing out.

Step 11

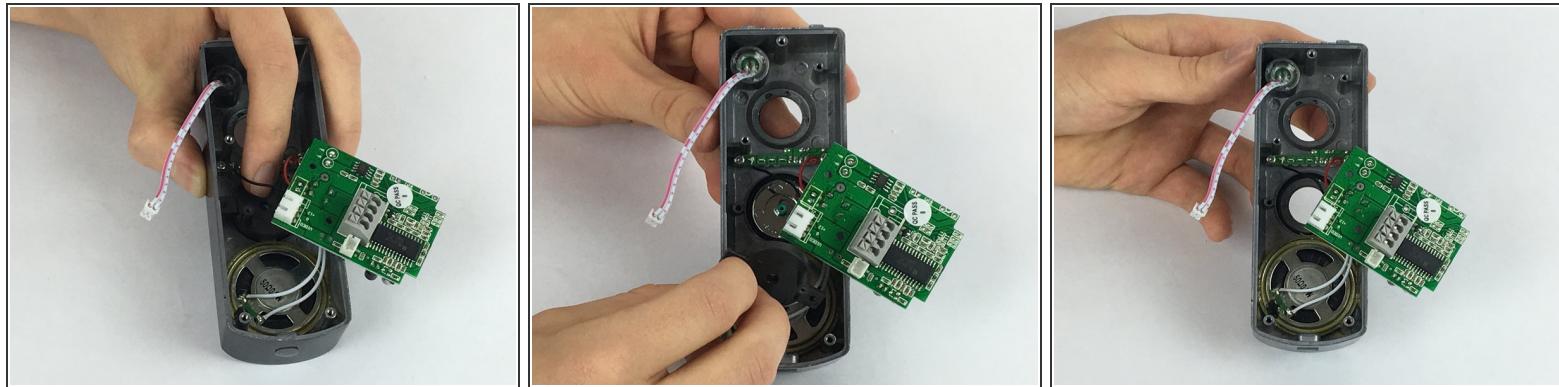

- Remove the black circular doorbell cover-plate.
- Remove the metal circular doorbell button.

To reassemble your device, follow these instructions in reverse order.