




# Sylvania SDVD9004 CD Drive Replacement

This guide will be provide a step by step process on how to remove and replace the CD Drive.

Written By: Sarah Henry

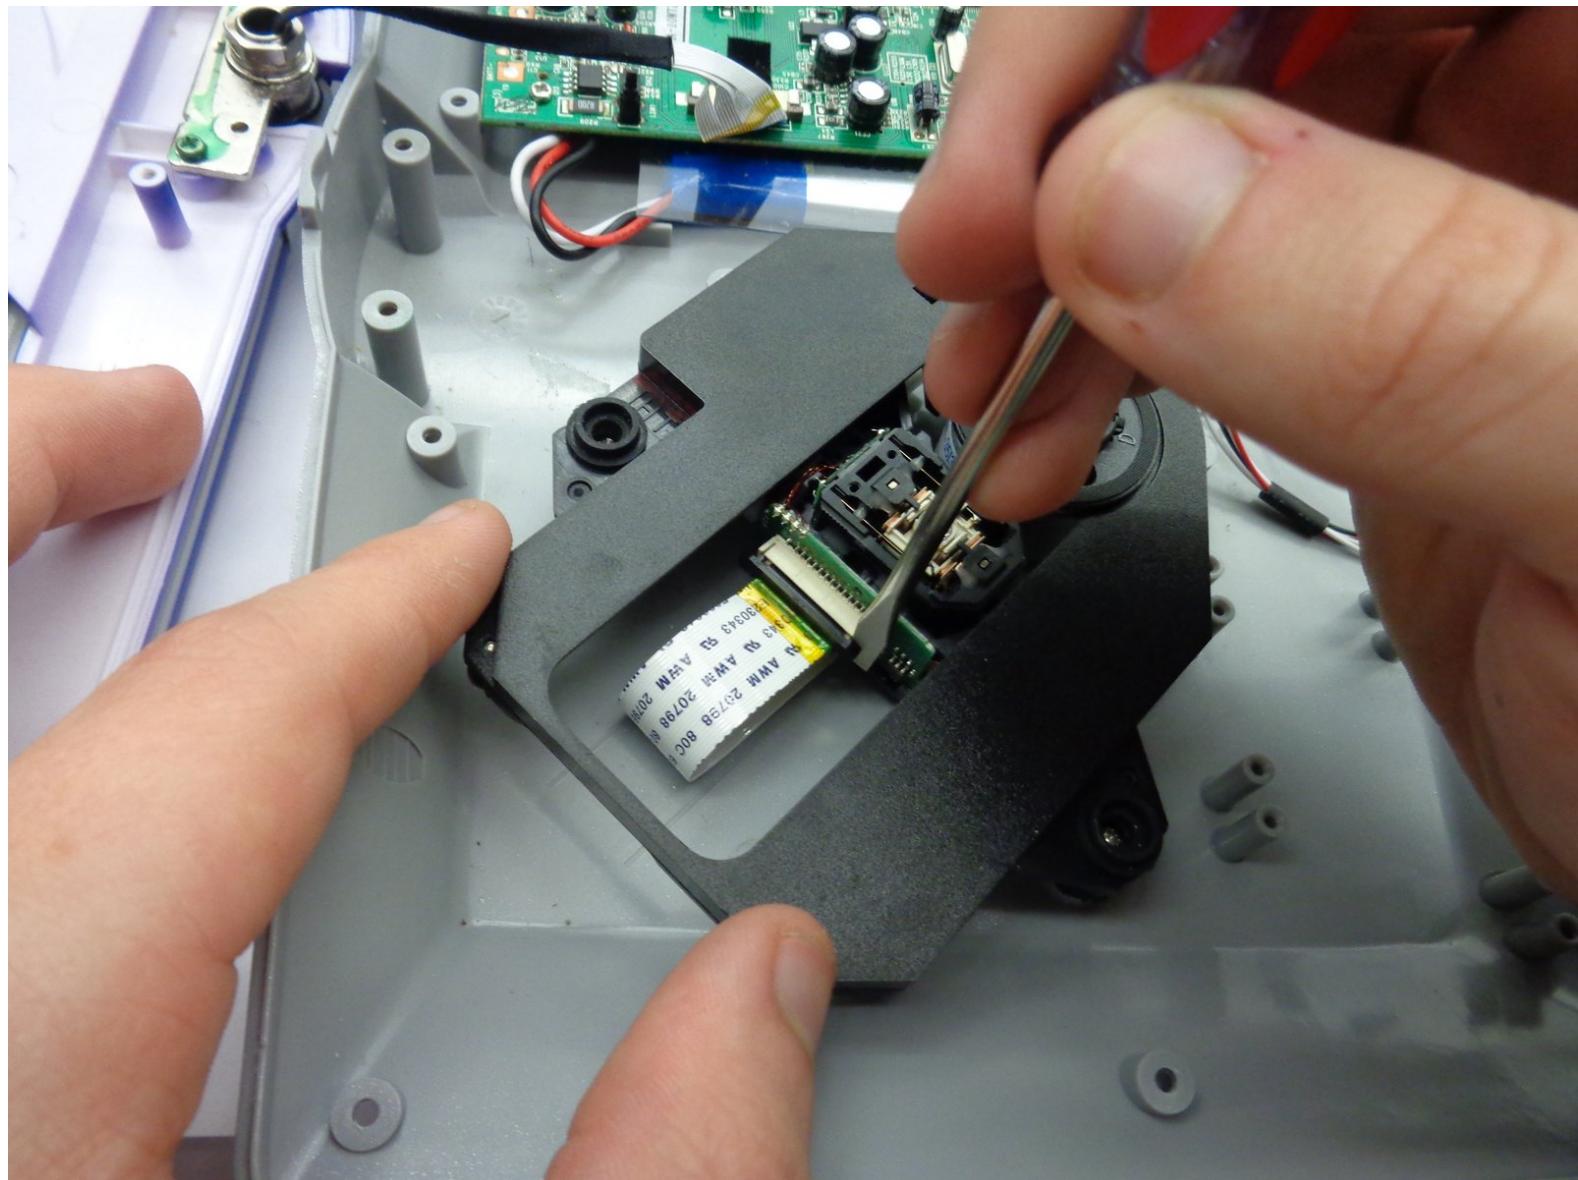

## INTRODUCTION


This guide will provide steps on how to remove and replace a CD drive in this DVD player. It is important to have all tools ready and have completed prerequisite guides.

This guide uses incorrect tools. Use an ESD safe tool, such as a nylon spudger, to complete steps that deal with delicate internal components.

## TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Heavy-Duty Spudger](#) (1)


## Step 1 — CD Drive

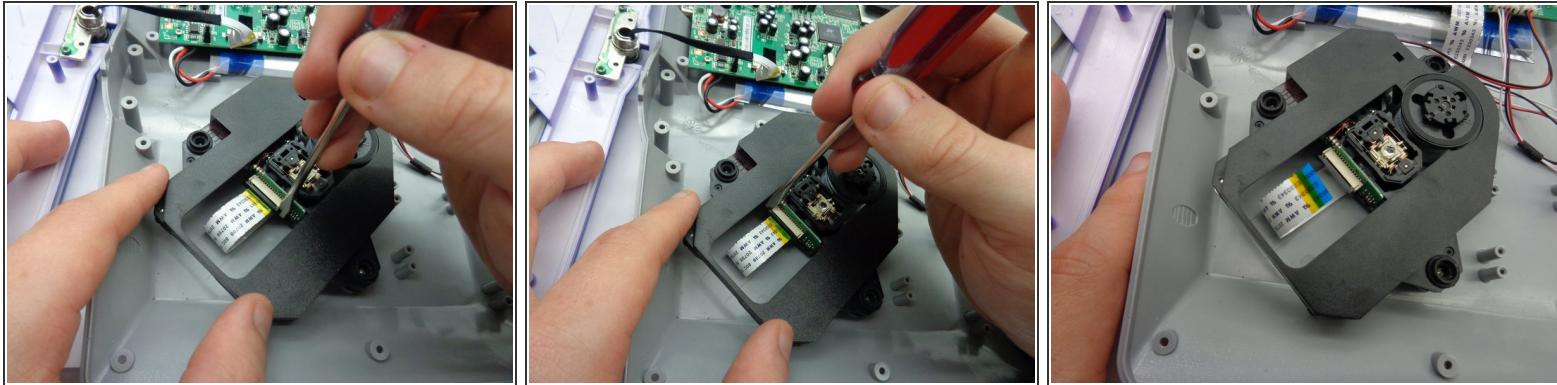

**⚠** This guide uses incorrect tools. Use an ESD safe tool, such as a nylon spudger, to complete this step.

- Wedge head lightly between drive and bottom of tab.
- Repeat on both sides.
- Gently pull out ribbon


## Step 2

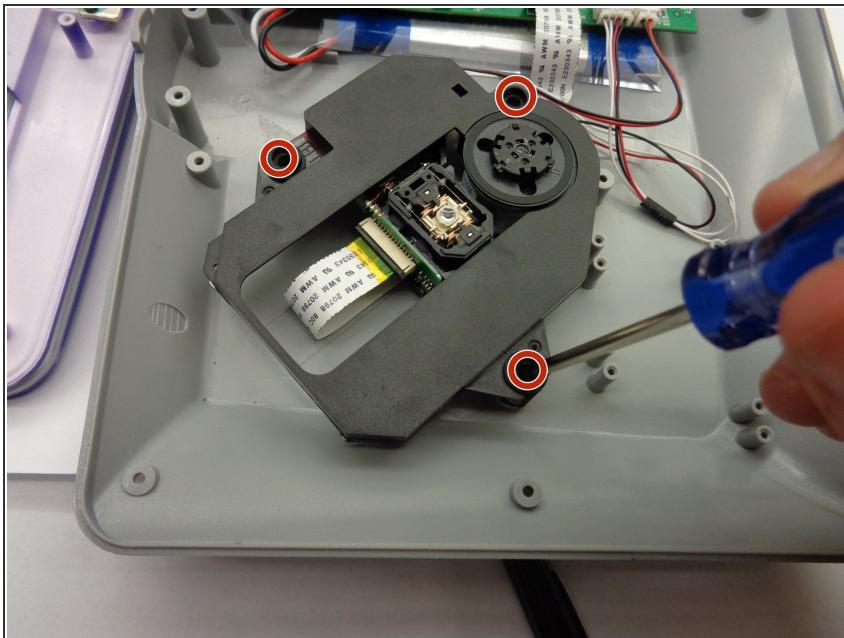

### ● Drive Removal

- Use Philip's screw driver to remove three 7 mm screws.
- Rotate counter clockwise to loosen screws.

## Step 3

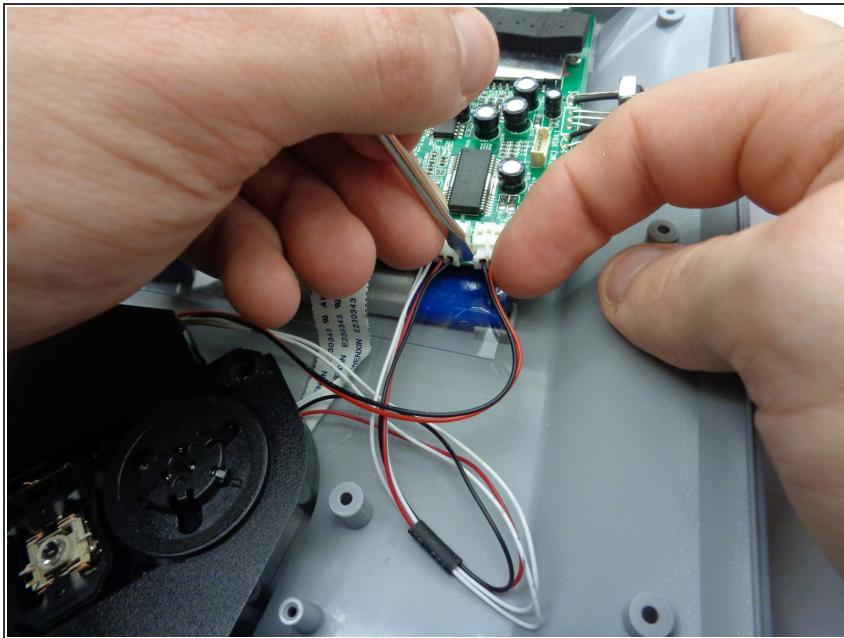

**⚠** This guide uses incorrect tools. Use an ESD safe tool, such as a nylon spudger, to complete this step.

- Follow the red and black cables to the motherboard point of attachment.
- Use a Flat head screwdriver.
- Place head of driver into the groove of plug and port.
- Wedge on all sides evenly to work out plug slowly.
- Remove small and large plugs.

To reassemble your device, follow these instructions in reverse order.