




System76 Serval WS Battery Replacement

This guide will show you how to remove and replace a faulty battery in the System76 Serval WS.

Written By: Alyson Eggleston

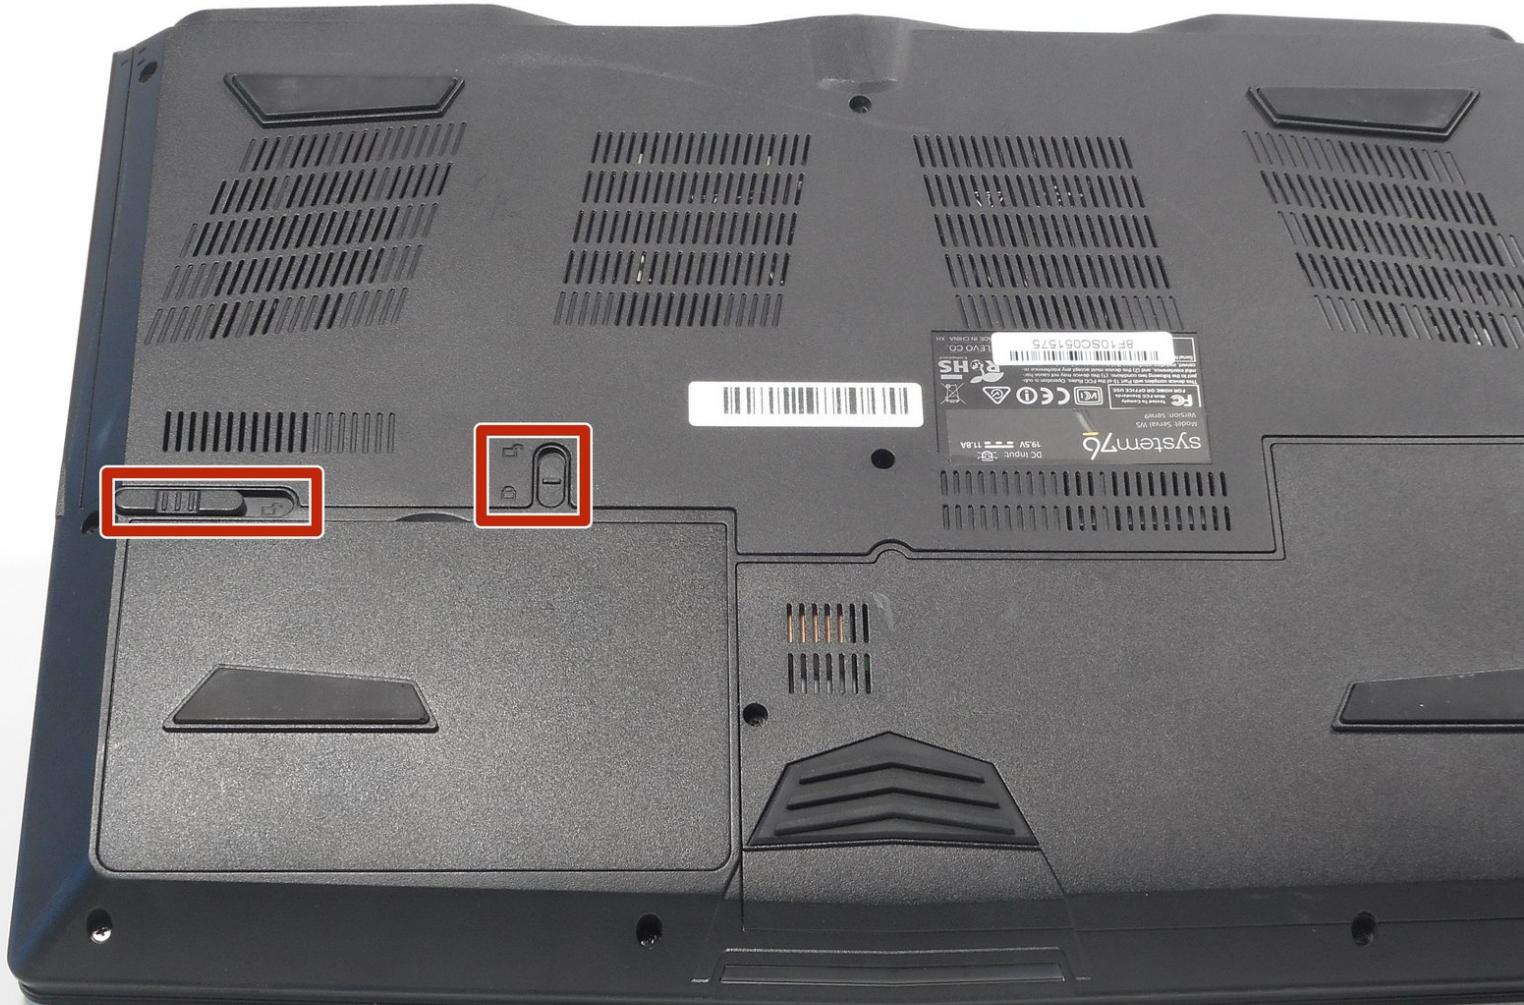

INTRODUCTION

The removal process for the System76 Serval WS is easy, and can be done in under 2 minutes. No tools are needed.

Step 1 — Battery



- Turn laptop over so the bottom faces up.

Step 2



- Unlock the button on the right by gently sliding it upward, away from you.
- With some force, slide the left unlock button to the right, which will eject the battery from its compartment.

Step 3

- Lift ejected battery out of compartment.



To reassemble your device, follow these instructions in reverse order.