



System76 Serval WS RAM Replacement

This guide shows how to gain access to RAM slots 3 and 4 in order to upgrade / replace these slots.

Written By: Oliver Anderson



 **TOOLS:**


- [Pro Tech Toolkit \(1\)](#)

Step 1 — RAM



- Remove the 4 red screws and then the plastic panel.

Step 2

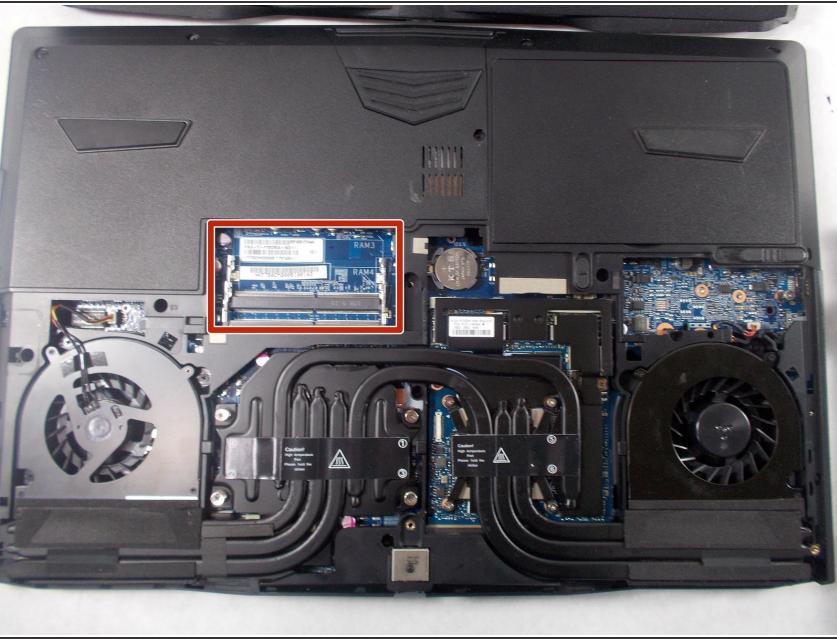

- The two RAM slots are located in the red square.
- The top slot must be removed before the bottom slot, and the bottom slot replaced before the top.

To reassemble your device, follow these instructions in reverse order.