




T-Mobile SDA (HTC Tornado) Camera and Flash Replacement

This guide will demonstrate how to remove the camera lens and the flash from the phone.

Written By: Kaitlyn Patterson

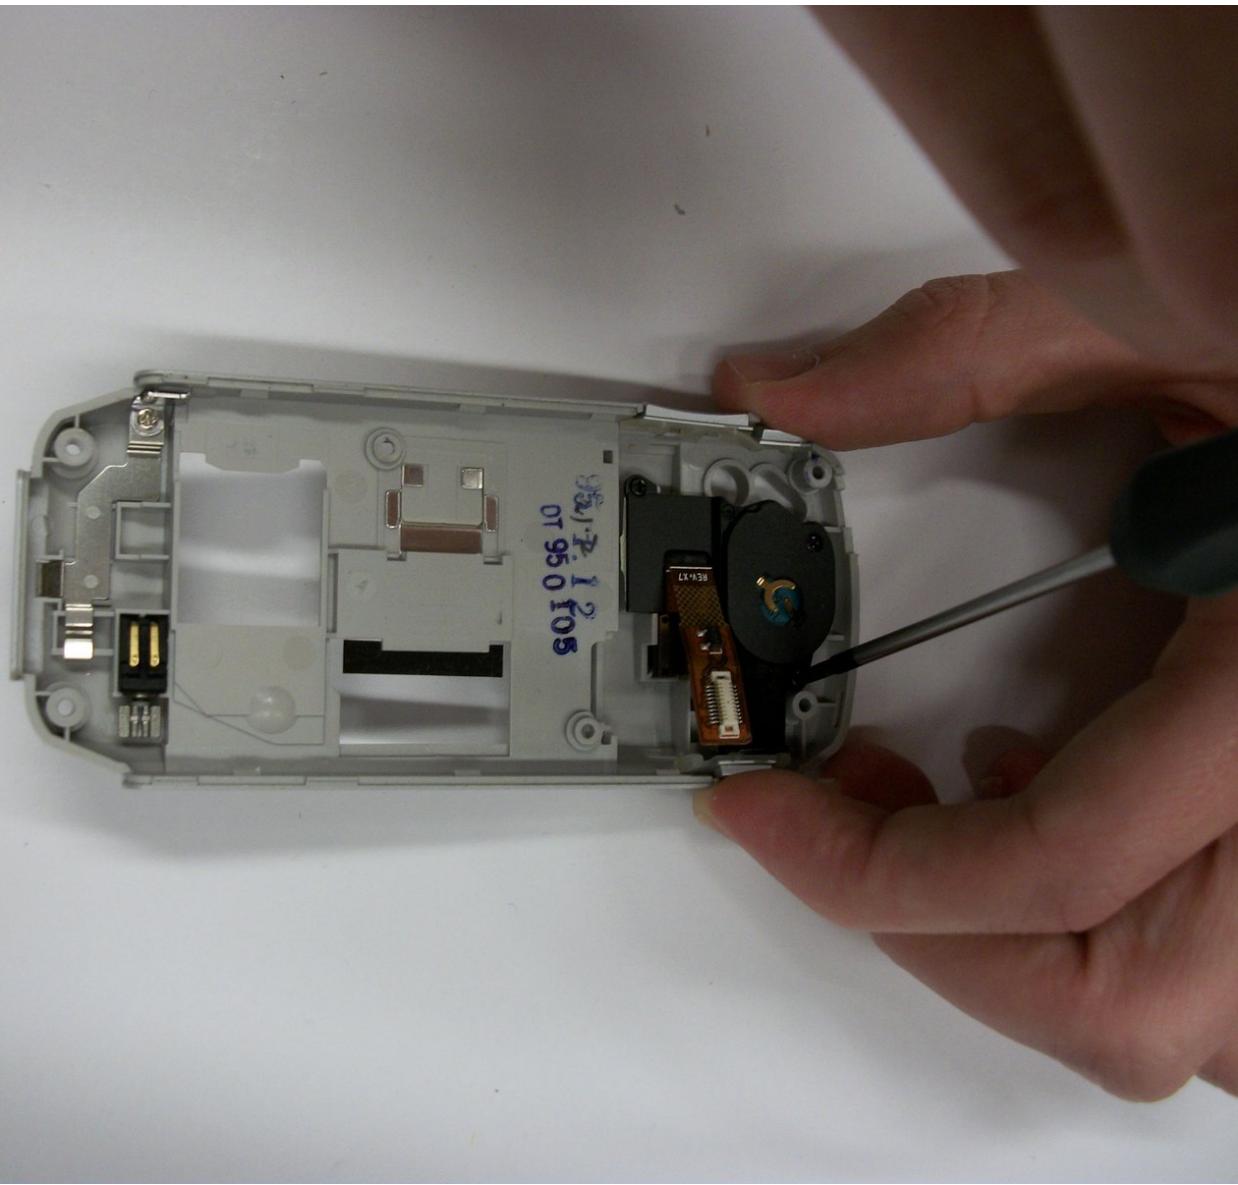


INTRODUCTION

This guide is useful when the camera is not operating properly and/or the flash is no longer working.

TOOLS:

- [Phillips #2 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Flathead 3/32" or 2.5 mm Screwdriver \(1\)](#)

Step 1 — Battery

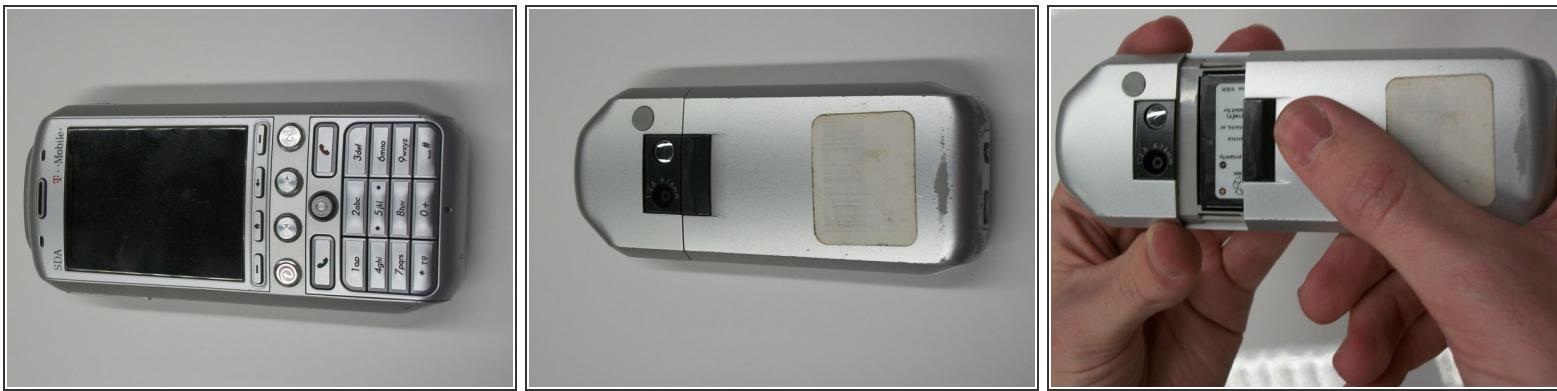


- To remove the battery cover, first turn the phone so that the keypad is face down.
- While holding the phone with one hand, place the thumb of the other hand at the top of the battery cover.
- Slide the battery cover toward the bottom of the phone to remove.

Step 2




- To remove the battery, first grab it using a finger on either side.
- Pull the battery upward, while securing the phone with your other hand.
- Gently remove the battery and place it to the side of the phone.

Step 3 — Rear Phone Casing

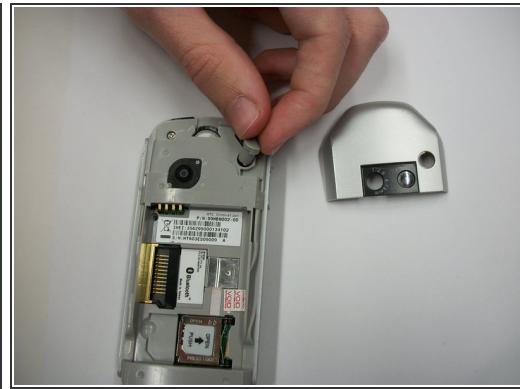

- Move the battery and battery cover to the side and pick up the phone.
- Use the plastic opening tool to remove the camera casing located at the top of the phone.
- Use your fingers to pull out the gray antenna casing.

Step 4

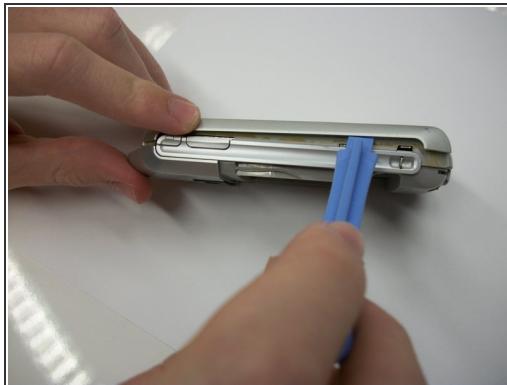

- Hold the phone with one hand and the plastic opening tool with the other.
- Pry the outer casing off of the phone by wedging the plastic opening tool between the casing and the phone, thus dislocating the tabs.
- Place the outer casing to the side.

Step 5




- Using the T5 or T6 screwdriver, remove the six screws from the back of the phone, as shown in the first image.
- Remove the back half of the phone by using the plastic opening tool to pry apart the top half from the bottom half. Wedge the plastic opening tool tool around the edge of the phone to dislocate the tabs.
- Once the tabs are dislocated, pull the back of the phone apart from the front half.

Step 6 — Camera and Flash



- Use the plastic opening tool to gently pry off the lens cover and place it to the side.
- Flip over the rear phone casing to view the flash compartment.

Step 7

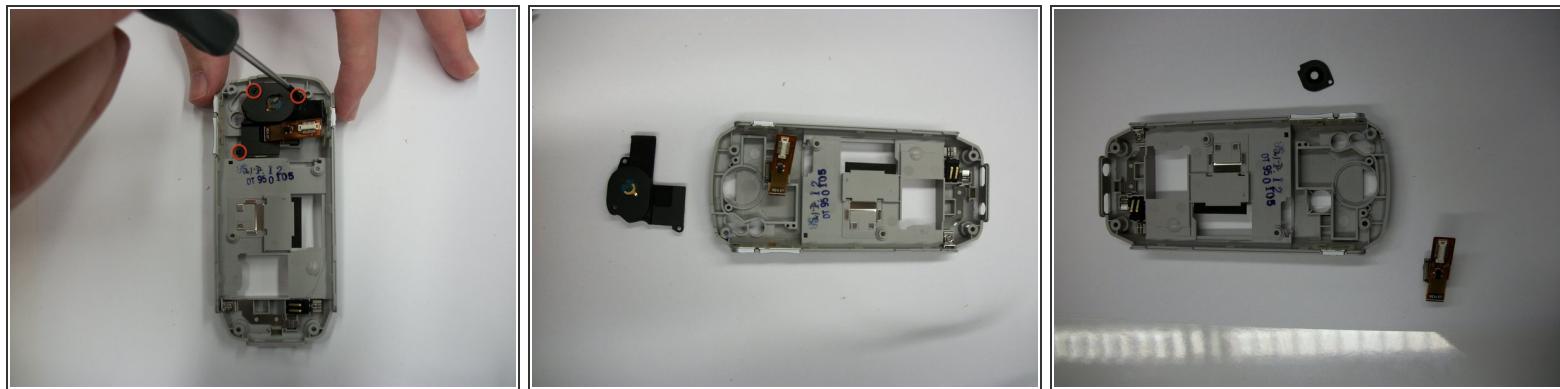

- Unscrew the three black connecting screws.
- Gently separate the copper connecting wire and the camera flash. Pull the camera flash out of the rear casing.
- Carefully remove the camera by pulling on the copper connecting wire.

To reassemble your device, follow these instructions in reverse order.