



TDK Life on Record A26 Front Faceplate Replacement

The front faceplate is dented and needs to be fixed or replaced. This guide will help remove the faceplate.

Written By: Elise Howard



 **TOOLS:**

- [Spudger \(1\)](#)

Step 1 — Front Faceplate



- Obtain the black plastic spudger to remove the faceplate.
- Insert the pointed end of the tool inside one of the holes on the faceplate itself.
 - ⓘ The corner is the best place to start.
 - ⓘ The faceplate has many little holes so choose one that makes it easier for you.

Step 2



- Gently start to lift until the faceplate starts to rise.
- ⓘ If you are having trouble getting the faceplate off, continue trying on the rest of the corners until fully removed.

To reassemble your device, follow these instructions in reverse order.