




# TDK Life on Record Trek 360 Handle Replacement

This guide will aid you in replacing the handle bar of the TDK Life on Record Trek 360

Written By: Eduardo Barrios

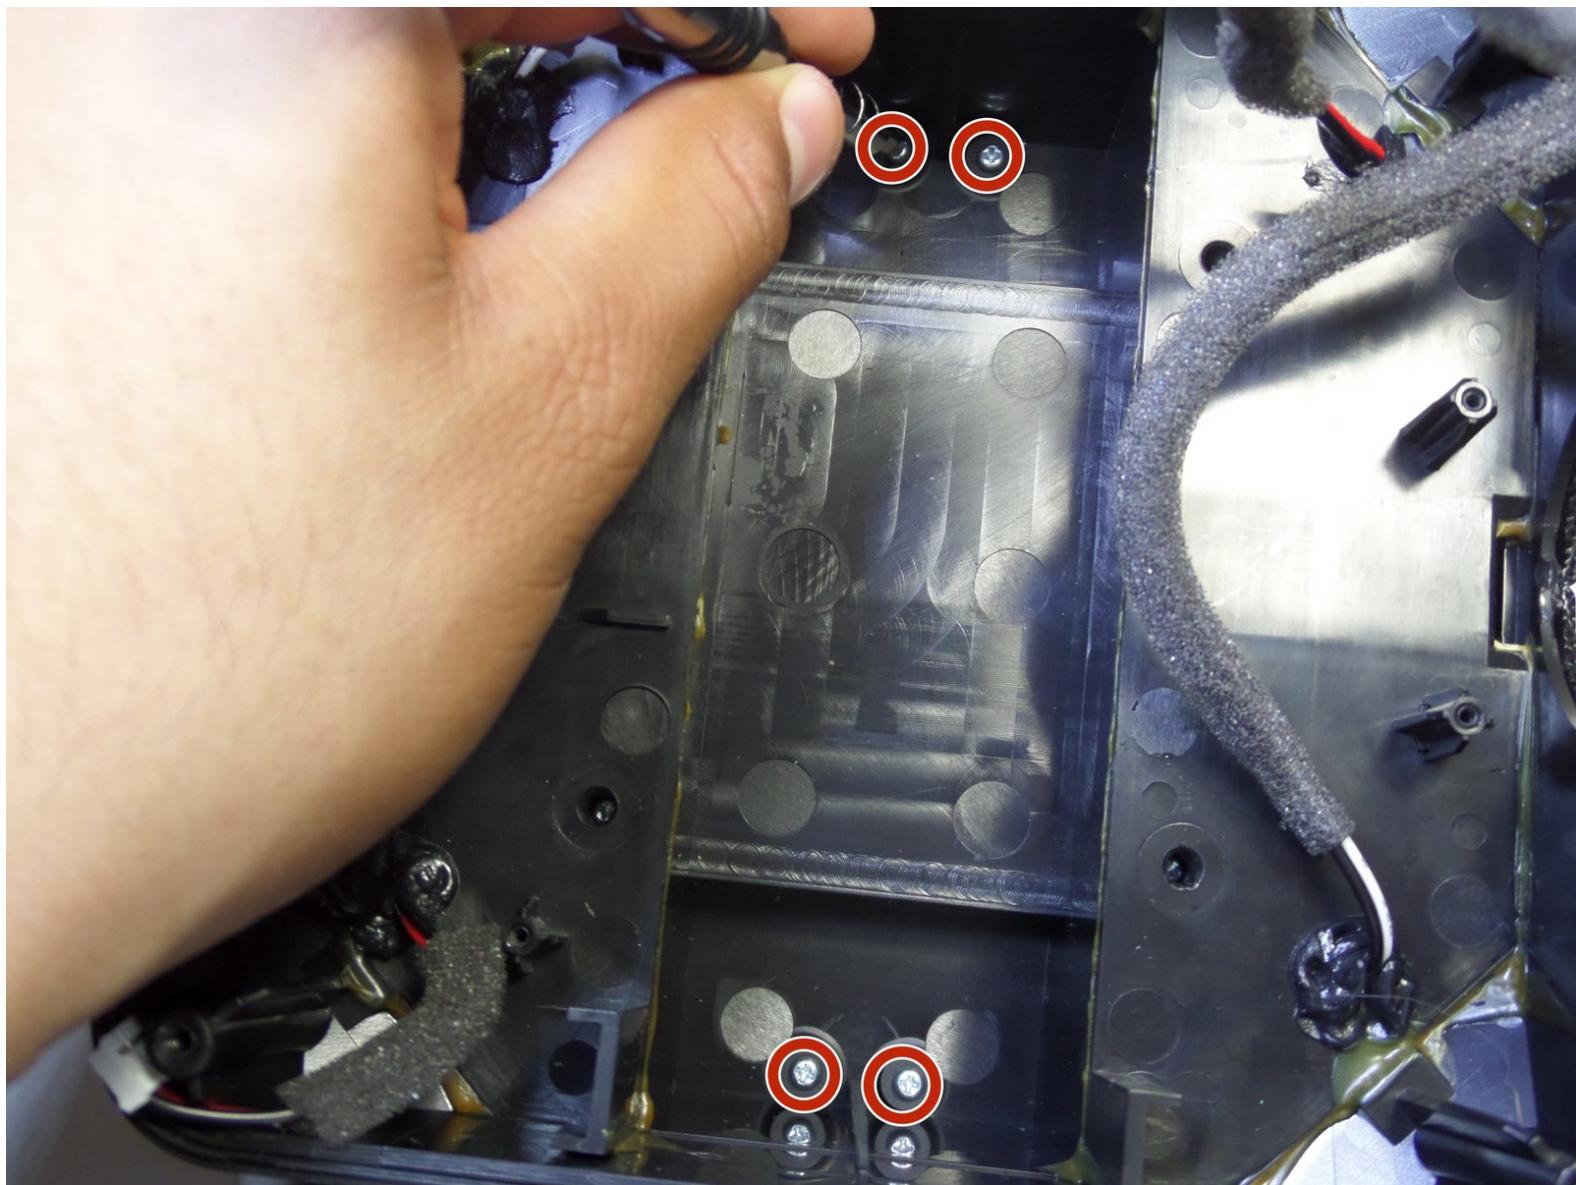

 **TOOLS:**

- [Metal Spudger \(1\)](#)
- [Tweezers \(1\)](#)
- [Phillips #1 Screwdriver \(1\)](#)
- [Phillips #0 Screwdriver \(1\)](#)
- [T8 Torx Screwdriver \(1\)](#)

## Step 1 — Disassembling TDK Life on Record bottom panel



- Remove the four rubber feet of the device using a metal spudger.

## Step 2



- Remove the four 9 mm Phillips #0 screws located under the feet of the device.
- Remove the four 9 mm Torx #8 screws located on each side of the bottom the device.

## Step 3



- Pull the bottom cover of the device towards you.

## Step 4



- Remove the four 13 mm Phillips #1 screws.


## Step 5



- Use one hand to grip the device from the side of the handle, and use the other hand to grip the side of the device that contains the woofer
- The woofer is the circular component located at the bottom of the device after the bottom cover has been removed
- Pull apart the compartments by applying force in opposite directions.

**⚠** Do not pull with extreme force!! There are many electrical wires inside the device that can become damaged if the bottom panel is removed without care

## Step 6

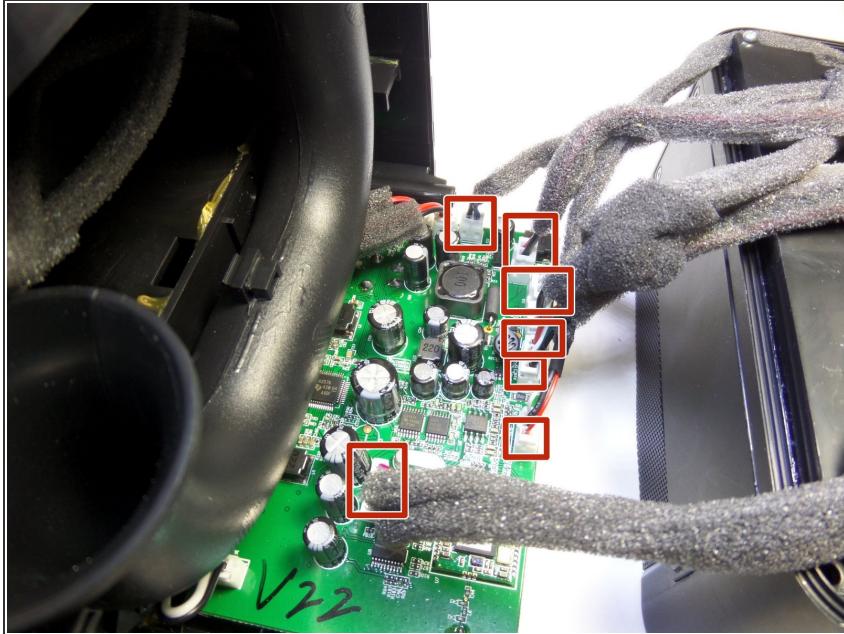

- Disconnect the seven cables attached to the motherboard.

⚠ Do not use too much force when pulling on the wires. Pulling with too much force can damage the wires.

## Step 7 — Air Vent Tube




- Remove the four 8 mm Phillips #1 screws.

## Step 8




- place your hands on each side of the air vent and then place your index finger on the thin plastic half circle that holds the vent in place.
- Pull the plastic half circle towards you.
- Put both of your hands inside the tube as shown and push away from you.

## Step 9 — Motherboard

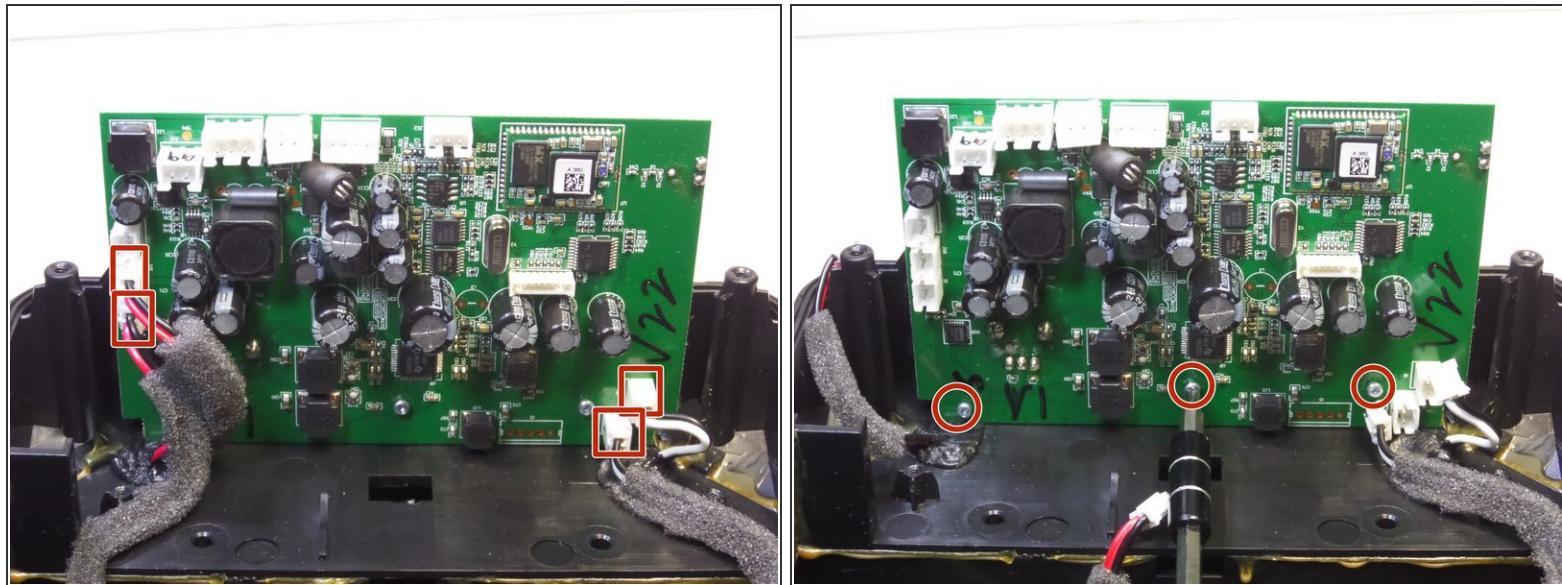

- Remove the four wired clips by pulling on the wires.
- Remove the three 6 mm Phillips #1 screws.

## Step 10

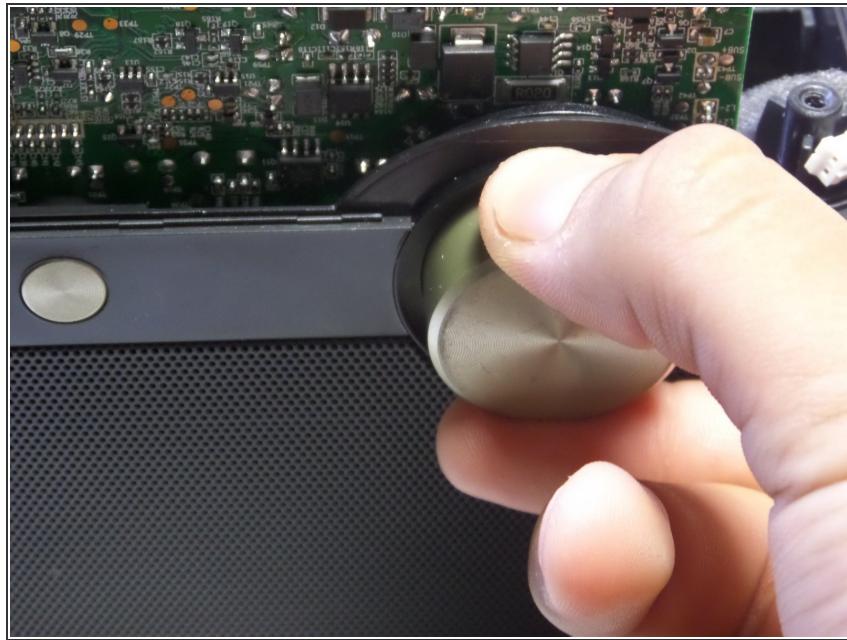

- Remove the volume control knob, which is located at the front of the speaker, by pulling it towards you.

## Step 11




- Using tweezers, turn the nut counter-clockwise and remove the nut.

## Step 12



- Push the metal part that holds the volume control knob away from you.

## Step 13 — Handle

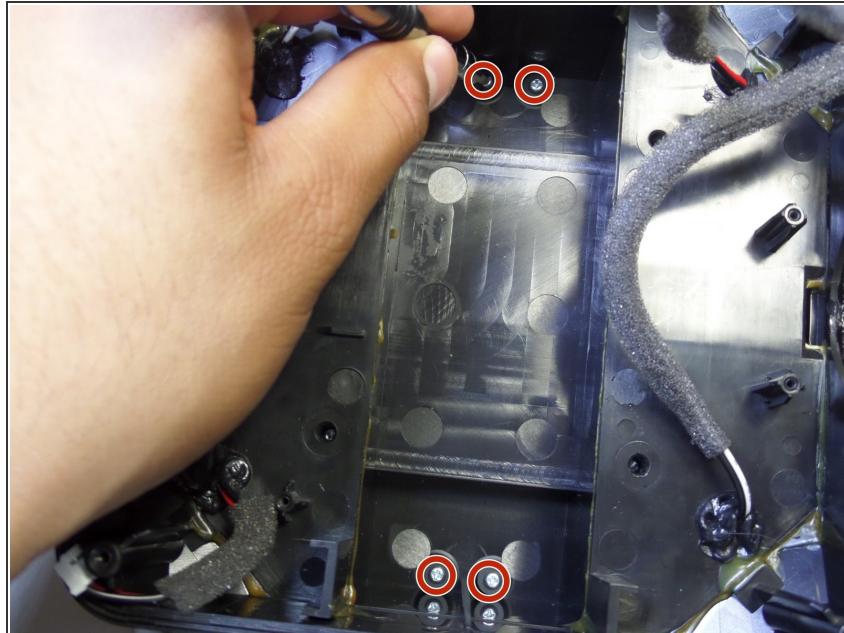

- Remove the four 13 mm Phillips #1 screws.

## Step 14



- Use your left hand to hold the top portion of the speaker in place.
- Using your right hand, pull the handle away from the device.

To reassemble your device, follow these instructions in reverse order.